TEN00223-03

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC1250 -8
PC1250SP -8
PC1250LC -8

SERIAL NUMBERS 30052 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator Operat... Order the manual at mid-west-tech.com >


CAP WITH LOCK ---- 3- 45
HOT AND COOL BOX ---- 3- 47
MAGAZINE BOX ---- 3- 47
ASHTRAY ---- 3- 47
FIRE EXTINGUISHER ---- 3- 47
AIR CONDITIONER CONTROLS ---- 3- 48
RADIO ---- 3- 62
AUXILIARY ELECTRIC POWER ---- 3- 67
FUSE ---- 3- 68
CIRCUIT BREAKER ---- 3- 69
CONTROLLER ---- 3- 71
TOOL BOX ---- 3- 71
GREASE PUMP ---- 3- 72
MACHINE OPERATIONS AND CONTROLS ---- 3- 75
BEFORE STARTING ENGINE ---- 3- 75
STARTING ENGINE ---- 3- 98
AFTER STARTING ENGINE ---- 3-101
STOPPING THE ENGINE ---- 3-111
MACHINE OPERATION ---- 3-112
STEERING THE MACHINE ---- 3-116
SWINGING ---- 3-118
WORK EQUIPMENT CONTROLS AND OPERATIONS ---- 3-119
WORKING MODE ---- 3-121
PROHIBITED OPERATIONS ---- 3-122
GENERAL OPERATION INFORMATION ---- 3-127
TRAVELING ON SLOPES ---- 3-129
ESCAPE FROM MUD ---- 3-131
RECOMMENDED APPLICATIONS ---- 3-132
BUCKET REPLACEMENT ---- 3-133
PARKING MACHINE ---- 3-135
MACHINE INSPECTION AFTER DAILY WORK ---- 3-136
LOCKING ---- 3-137
TRANSPORTATION ---- 3-138
TRANSPORTATION PROCEDURE ---- 3-138
PRECAUTIONS FOR TRANSPORTATION ---- 3-138
LIFTING MACHINE ---- 3-138
SHIPPING MACHINE INFORMATION ---- 3-140
TRANSPORTATION POSTURE ---- 3-141
COLD WEATHER OPERATION ---- 3-149
COLD WEATHER OPERATION INFORMATION ---- 3-149
AFTER DAILY WORK COMPLETION ---- 3-152
AFTER COLD WEATHER SEASON ---- 3-152
LONG TERM STORAGE ---- 3-153
BEFORE STORAGE ---- 3-153
DURING STORAGE ---- 3-153
AFTER STORAGE ---- 3-153
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-154
TROUBLES AND ACTIONS ---- 3-155
RUNNING OUT OF FUEL ---- 3-155
PHENOMENA THAT ARE NOT FAILURES ---- 3-155

MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator O... Order the manual at mid-west-tech.com >

TOWING THE MACHINE ---- 3-156
SEVERE JOB CONDITION ---- 3-156
DISCHARGED BATTERY ---- 3-157
OTHER TROUBLE ---- 3-161
MAINTENANCE ---- 4- 1
MAINTENANCE INFORMATION ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
ELECTRIC SYSTEM MAINTENANCE ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 9
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 11
TIGHTENING TORQUE SPECIFICATIONS ---- 4- 12
TIGHTENING TORQUE LIST ---- 4- 12
SAFETY CRITICAL PARTS ---- 4- 13
SAFETY CRITICAL PARTS LIST ---- 4- 13
MAINTENANCE SCHEDULE ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 14
MAINTENANCE PROCEDURE ---- 4- 16
INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS) ---- 4- 16
INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS) ---- 4- 16
WHEN REQUIRED ---- 4- 17
CHECK BEFORE STARTING ---- 4- 44
EVERY 10 HOURS MAINTENANCE ---- 4- 45
EVERY 100 HOURS MAINTENANCE ---- 4- 47
EVERY 250 HOURS MAINTENANCE ---- 4- 48
EVERY 500 HOURS MAINTENANCE ---- 4- 52
EVERY 1000 HOURS MAINTENANCE ---- 4- 64
EVERY 2000 HOURS MAINTENANCE ---- 4- 76
EVERY 4000 HOURS MAINTENANCE ---- 4- 82
EVERY 5000 HOURS MAINTENANCE ---- 4- 85
EVERY 8000 HOURS MAINTENANCE ---- 4- 87
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS AND OPTIONS ---- 6- 1
GENERAL PRECAUTIONS FOR SAFETY ---- 6- 2
PRECAUTIONS WHEN SELECTING ---- 6- 2
READ THE INSTRUCTION MANUAL THOROUGHLY ---- 6- 2
PRECAUTIONS WHEN REMOVING OR INSTALLING ---- 6- 2
PRECAUTIONS WHEN USING ---- 6- 2
ATTACHMENT GUIDE ---- 6- 3
COMBINATIONS OF WORK EQUIPMENT ---- 6- 3
SELECTION OF TRACK SHOES ---- 6- 7
AUTO-GREASING SYSTEM ---- 6- 8
EXPLANATION OF COMPONENTS ---- 6- 8
OPERATION ---- 6- 13
TROUBLESHOOTING ---- 6- 17
MAINTENANCE ---- 6- 18

MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator O... Order the manual at mid-west-tech.com >


SWITCHES

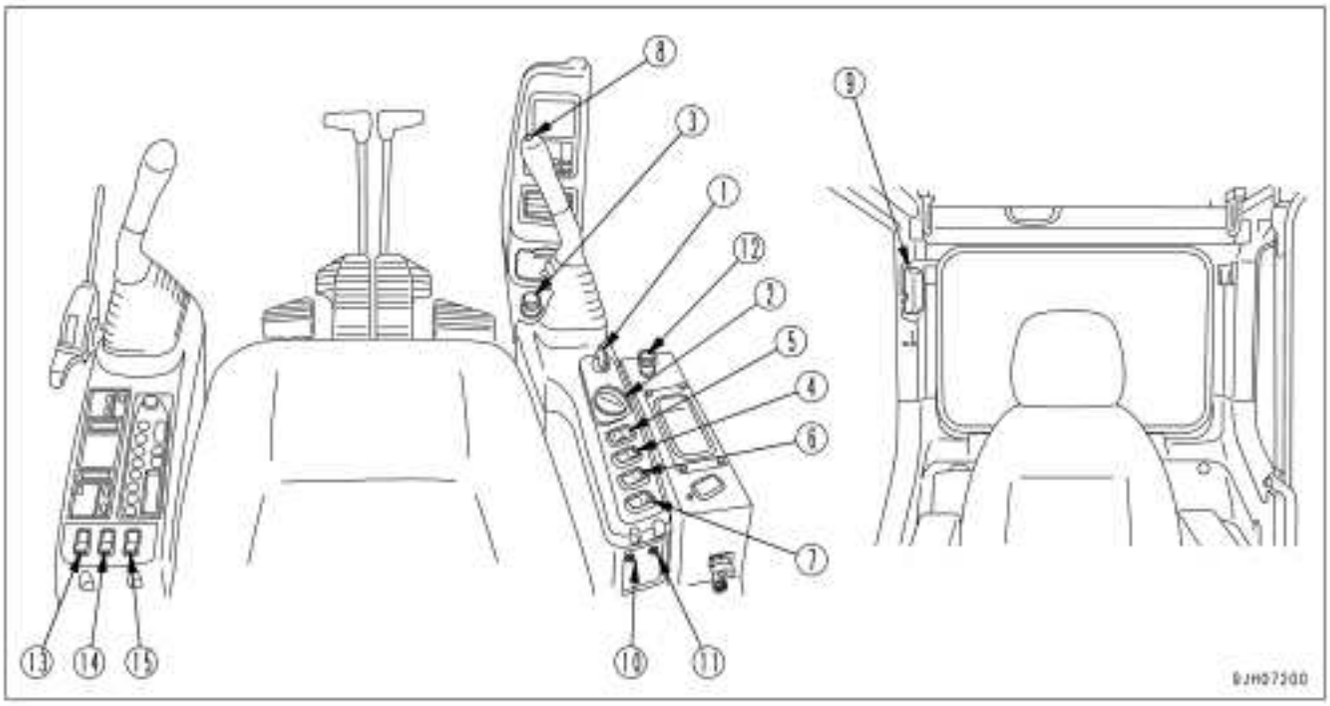

(1) Starting switch
(2) Fuel control dial
(3) Cigarette lighter
(4) Swing lock switch
(5) Lamp switch
(6) Machine push-up switch
(7) Boom shockless control switch
(8) Horn switch
(9) Room lamp switch
(10) Emergency pump drive switch
(11) Swing parking brake release switch
(12) Step light switch
(13) Lower wiper switch (machines equipped with fixed front window cab)
(14) Revolving warning lamp switch (if equipped)
(15) Large capacity airflow air conditioner blower switch (if equipped)

Starting Switch

Starting switch (1) is used to start or stop the engine.

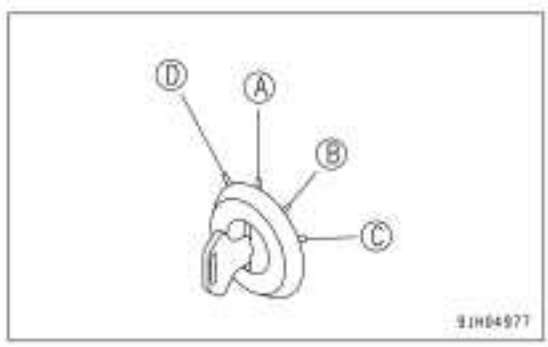

(A): OFF position
The key can be inserted or withdrawn. Switches for the electrical system (except room lamp), are all turned off and the engine is stopped.
(B): ON position
Electric current flows through the charging and lamp circuits. Keep starting switch key in the ON position while the engine is running.
(C): START position
This is the engine-start position. Keep the key at this position during cranking. Immediately after starting the engine, release the key. It will automatically return to the ON position (B).
(D): HEAT position
Regardless of the ambient temperature, the preheating monitor lights up when the key is set to the HEAT position. It then flashes after approx. 30 seconds to inform the operator that the preheating has been completed.

MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator O... Order the manual at mid-west-tech.com >

MAINTENANCE SCHEDULE

MAINTENANCE SCHEDULE CHART

INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS)
CLEAN STRAINER OF PTO LUBRICATING OIL FILTER ---- 4- 60

INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS)
CHANGE OIL IN SWING MACHINERY CASE ---- 4- 68
CHANGE OIL IN PTO CASE ---- 4- 70
CHANGE OIL IN FINAL DRIVE CASE ---- 4- 76

WHEN REQUIRED
CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT ---- 4- 17
CLEAN INSIDE OF COOLING SYSTEM ---- 4- 20
CHECK AND TIGHTEN TRACK SHOE BOLTS ---- 4- 24
CHECK AND ADJUST TRACK TENSION ---- 4- 25
REPLACE BUCKET TEETH (XS) ---- 4- 28
ADJUST BUCKET CREARANCE ---- 4- 32
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID ---- 4- 33
CHECK AND MAINTENANCE AIR CONDITIONER ---- 4- 34
CLEAN LINE FILTER, REMOVE DIRT ---- 4- 35
CHECK GAS SPRING ---- 4- 36
BLEEDING AIR FROM HYDRAULIC SYSTEM ---- 4- 37
BLEEDING AIR FROM FULE CIRCUIT ---- 4- 41

CHECKS BEFORE STARTING


EVERY 10 HOURS MAINTENANCE
LUBRICATING ---- 4- 45

EVERY 100 HOURS MAINTENANCE
LUBRICATING SWING CIRCLE ---- 4- 47

EVERY 250 HOURS MAINTENANCE
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL ---- 4- 48
CHECK LEVEL OF BATTERY ELECTROLYTE ---- 4- 49
CHECK AND TIGHTEN TRACK FRAME AND AXLE CONNECTING BOLTS ---- 4- 51


MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator O... Order the manual at mid-west-tech.com >

Center Frame

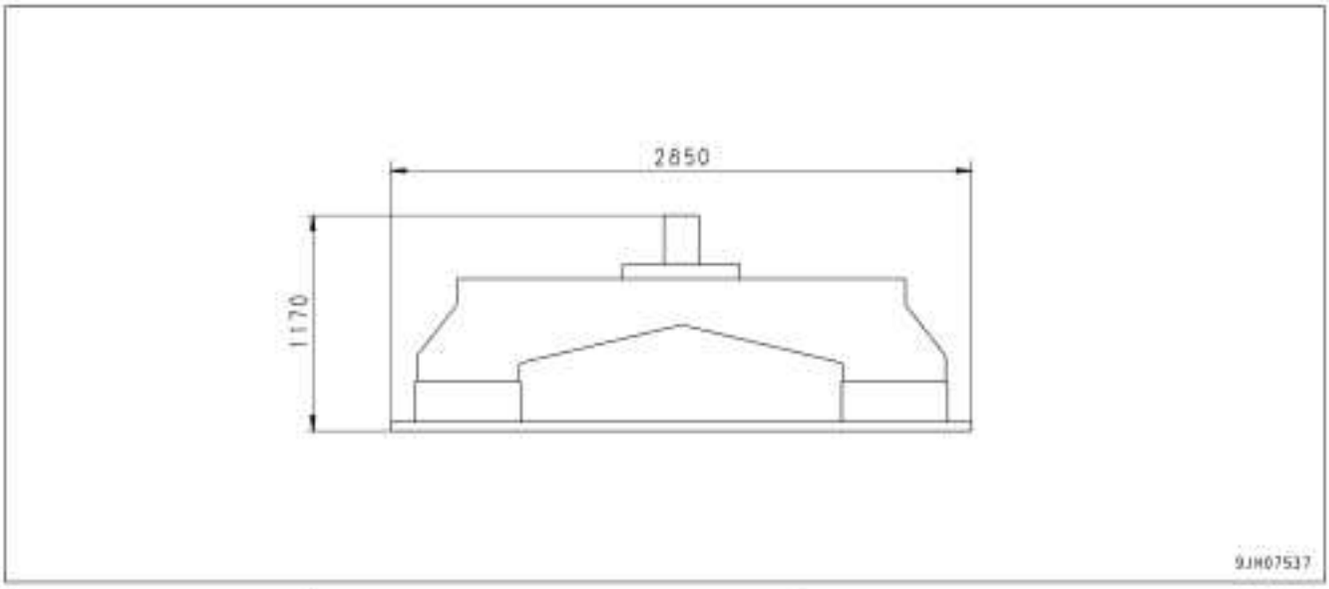

Unit		PC1250-8
Weight	kg (lb)	9,700 (21,389)

Counterweight

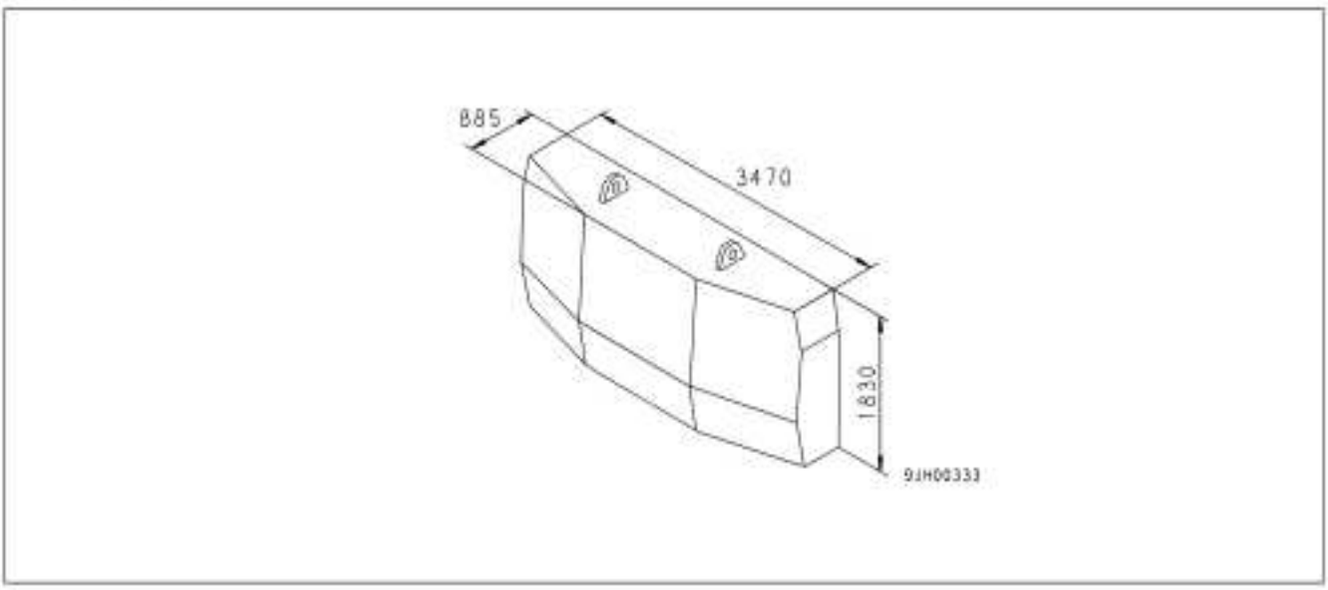

Unit		PC1250-8
Weight	kg (lb)	18,000 (39,690)

MidWestTech | Komatsu PC1250-8, PC1250SP-8, PC1250LC-8 Hydraulic Excavator O... Order the manual at mid-west-tech.com >