TEN00238-00

Operation & Maintenance Manual

ARTICULATED
DUMP TRUCK

GALEO

HM300-1

SERIAL NUMBERS 1001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintenance... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTENDED USE ---- 1- 7
DIRECTIONS OF MACHINE ---- 1- 7
LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ---- 1- 8
ENGINE SERIAL NO. PLATE POSITION ---- 1- 8
SERVICE METER POSITION ---- 1- 9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 9
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 4
POSITION FOR ATTACHING SAFETY LABELS ---- 2- 5
SAFETY LABELS ---- 2- 6
GENERAL PRECAUTIONS ---- 2- 11
PRECAUTIONS DURING OPERATION ---- 2- 20
STARTING ENGINE ---- 2- 20
OPERATION ---- 2- 22
TRANSPORTATION ---- 2- 25
BATTERY ---- 2- 26
TOWING ---- 2- 28
PRECAUTIONS FOR MAINTENANCE ---- 2- 29
PRECAUTIONS WITH TIRES ---- 2- 36
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 5
MACHINE MONITOR ---- 3- 5
OTHER FUNCTIONS OF MACHINE MONITOR ---- 3- 26
SWITCHES ---- 3- 30
CONTROL LEVERS AND PEDALS ---- 3- 40
MECHATRONICS EQUIPMENT CONTROLLER ---- 3- 45
BODY PIVOT PIN ---- 3- 46
ARTICULATE LOCK ---- 3- 46
DUST INDICATOR ---- 3- 47
FUSES ---- 3- 48
CAR RADIO ---- 3- 51
CAR STEREO ---- 3- 57
AIR CONDITIONER ---- 3- 65
OPERATION ---- 3- 70
CHECK BEFORE STARTING ENGINE ---- 3- 70
STARTING ENGINE ---- 3- 83
OPERATIONS, CHECKS AFTER STARTING ENGINE ---- 3- 86
STOPPING ENGINE ---- 3- 87
CHECKS AFTER STOPPING ENGINE ---- 3- 87
MOVING MACHINE OFF (FORWARD, REVERSE), STOPPING ---- 3- 88
SHIFTING GEAR ---- 3- 93

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >


TRAVELING DOWNHILL ---- 3- 94
STEERING THE MACHINE ---- 3-102
OPERATION USING DIFFERENTIAL LOCK ---- 3-103
LOADING OPERATIONS ---- 3-104
DUMP OPERATIONS ---- 3-105
CAB TILT OPERATION ---- 3-107
PRECAUTIONS FOR OPERATION ---- 3-110
PARKING MACHINE ---- 3-111
CHECKS AFTER COMPLETION OF WORK ---- 3-112
LOCKING ---- 3-112
HANDLING TIRES ---- 3-113
DETERMINING AND MAINTAINING TRAVEL ROAD ---- 3-114
DETERMINING TRAVEL ROAD ---- 3-114
MAINTAINING TRAVEL ROAD ---- 3-114
TRANSPORTATION ---- 3-115
PRECAUTIONS WHEN TRANSPORTING ---- 3-115
STEPS FOR TRANSPORTATION ---- 3-115
METHOD OF SECURING MACHINE ---- 3-116
METHOD OF LIFTING MACHINE ---- 3-117
COLD WEATHER OPERATION ---- 3-121
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-121
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-122
AFTER COLD WEATHER ---- 3-123
LONG-TERM STORAGE ---- 3-124
BEFORE STORAGE ---- 3-124
DURING STORAGE ---- 3-124
AFTER STORAGE ---- 3-124
PRECAUTIONS BEFORE TRAVELING AFTER LONG-TERM STORAGE ---- 3-124
TROUBLESHOOTING ---- 3-125
AFTER RUNNING OUT OF FUEL ---- 3-125
METHOD OF TOWING MACHINE ---- 3-126
IF BATTERY IS DISCHARGED ---- 3-130
OTHER TROUBLE ---- 3-134
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8
WEAR PARTS ---- 4- 9
WEAR PARTS LIST ---- 4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 10
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 11
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 13
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 14
TORQUE LIST ---- 4- 14
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 16
SAFETY CRITICAL PARTS ---- 4- 17
MAINTENANCE SCHEDULE CHART ---- 4- 18
MAINTENANCE SCHEDULE CHART ---- 4- 18

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE ---- 4- 20
INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS) ---- 4- 20
WHEN REQUIRED ---- 4- 21
CHECK BEFORE STARTING ---- 4- 35
EVERY 50 HOURS SERVICE ---- 4- 36
EVERY 250 HOURS SERVICE ---- 4- 37
EVERY 500 HOURS SERVICE ---- 4- 46
EVERY 1000 HOURS SERVICE ---- 4- 52
EVERY 2000 HOURS SERVICE ---- 4- 60
EVERY 4000 HOURS SERVICE ---- 4- 66
EVERY 6000 HOURS SERVICE ---- 4- 68
EVERY 8000 HOURS SERVICE ---- 4- 68
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
INDEX ---- 6- 1

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >

GENERAL VIEW OF CONTROLS AND GAUGES

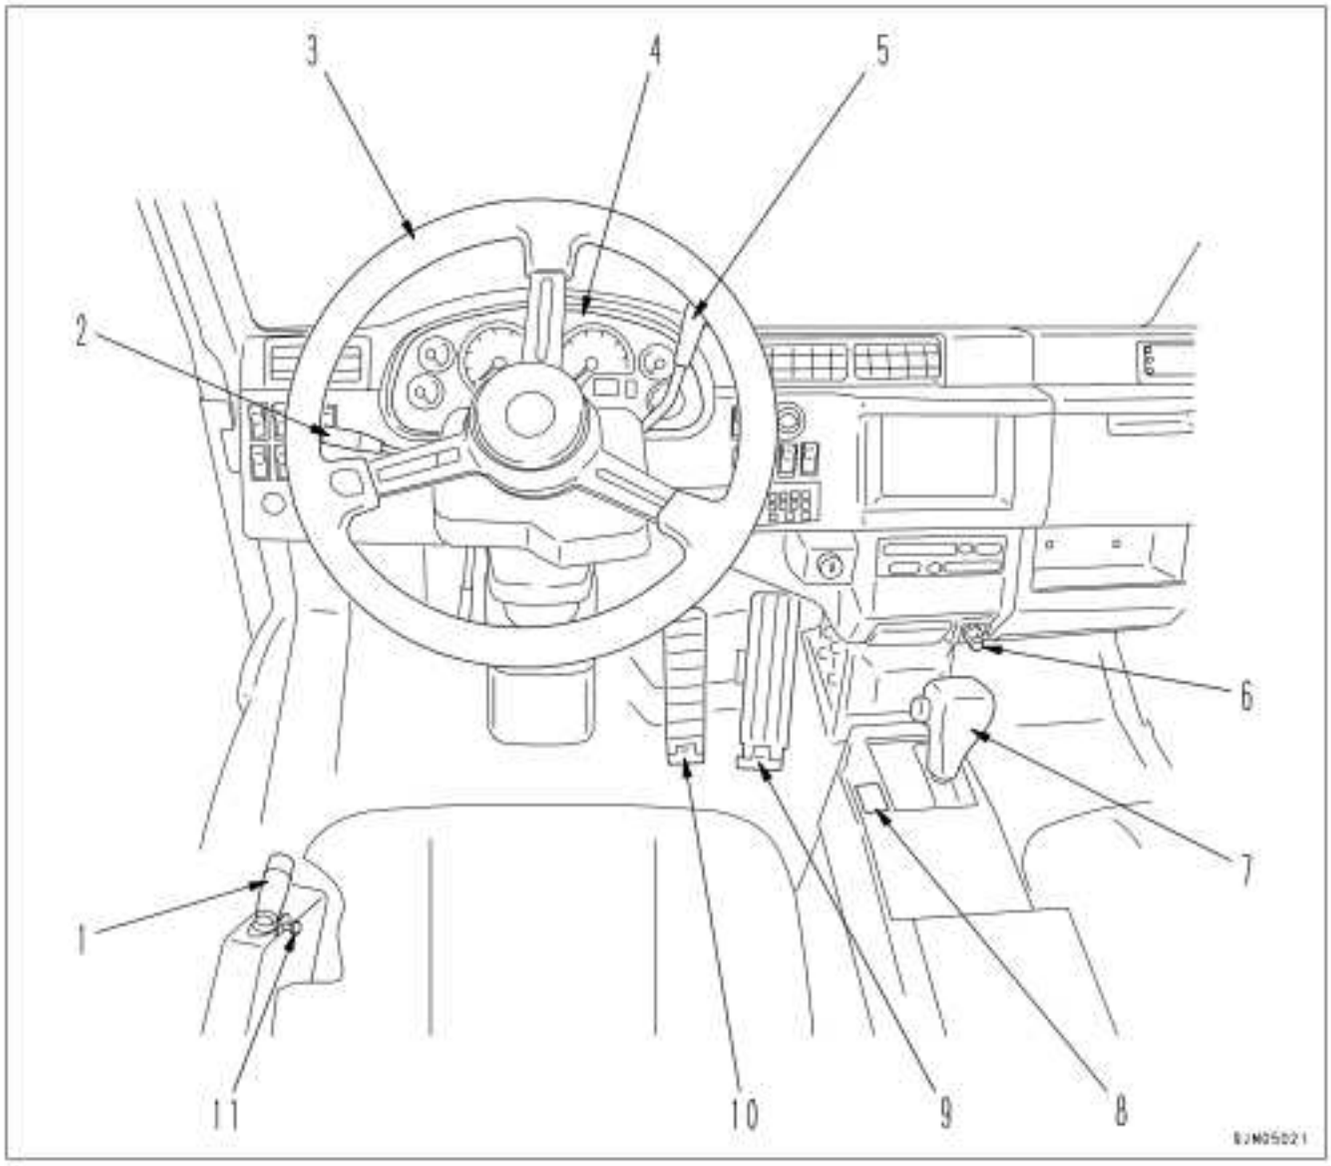

(1) Dump lever
(2) Lamp switch, Turn signal lever, Dimmer switch
(3) Steering wheel
(4) Machine monitor
(5) Retarder control lever
(6) Cigarette lighter
(7) Shift lever
(8) Parking brake switch
(9) Accelerator pedal
(10) Brake pedal
(11) Dump lever lock knob

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >

TRANSPORTATION

PRECAUTIONS WHEN TRANSPORTING

Always obey the traffic regulations when transporting the machine by road.

⚠ WARNING

This machine must be disassembled for transportation. When transporting the machine, please consult your Komatsu distributor.

STEPS FOR TRANSPORTATION

As a basic rule, always transport the machine on a trailer.
When selecting the trailer, see the weights and dimensions given in "SPECIFICATIONS (PAGE 5-2)".
Note that the specifications for the weights and dimensions for transportation differ according to the type of tires and type of dump body.

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >

EVERY 500 HOURS SERVICE

Change oil in engine oil pan, replace engine oil filter cartridge ---- 4- 46
Replace fuel filter cartridge ---- 4- 47
Clean fuel tank strainer ---- 4- 48
Lubrication ---- 4- 48
Check oil level in final drive case, add oil ---- 4- 49
Check oil level in differential case, add oil ---- 4- 50
Clean, check radiator fins and after cooler fins ---- 4- 51

EVERY 1000 HOURS SERVICE

Replace corrosion resistor cartridge ---- 4- 52
Replace transmission filter element ---- 4- 53
Change oil in transmission case ---- 4- 54
Change oil in brake oil tank, replace brake oil filter element ---- 4- 56
Lubrication ---- 4- 58
Check wear of brake disc ---- 4- 59
Check tightening parts of turbocharger ---- 4- 59
Check play of turbocharger rotor ---- 4- 59

EVERY 2000 HOURS SERVICE

Change oil in final drive case ---- 4- 60
Change oil in differential case ---- 4- 61
Replace hydraulic filter element ---- 4- 62
Clean transmission case strainer ---- 4- 63
Clean breather ---- 4- 63
Clean engine breather element ---- 4- 65
Check alternator, starting motor ---- 4- 65
Check, adjust engine valve clearance ---- 4- 65
Clean, check turbocharger ---- 4- 65
Check injector ---- 4- 65
Check vibration damper ---- 4- 65

EVERY 4000 HOURS SERVICE

Change oil in hydraulic tank ---- 4- 66
Check water pump ---- 4- 66
Check air compressor ---- 4- 66
Check fan pulley and tension pulley ---- 4- 66
Replace injector assembly ---- 4- 66
Checking for looseness of high-pressure clamp, hardening of rubber ---- 4- 67
Checking for missing fuel spray prevention cap, hardening of rubber ---- 4- 67

EVERY 6000 HOURS SERVICE

Lubricate drive shaft ---- 4- 68

EVERY 8000 HOURS SERVICE

Replace high-pressure piping clamp ---- 4- 68
Replace fuel spray prevention cap ---- 4- 68

MidWestTech | Komatsu Galeo HM300-1 Articulated Dump Truck Operation & Maintena... Order the manual at mid-west-tech.com >