TEN00258-02

Operation & Maintenance Manual

BULLDOZER

D375A-5E0

SERIAL NUMBERS 50065 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Publicat... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTRODUCTION ---- 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE ---- 1- 7
VISIBILITY FROM OPERATOR'S SEAT ---- 1- 8
BREAKING IN THE MACHINE ---- 1- 9
NECESSARY INFORMATION ---- 1- 10
PRODUCT IDENTIFICATION NUMBER (PIN), MACHINE SERIAL NO. PLATE ---- 1- 10
EPA REGULATIONS, ENGINE NUMBER PLATE ---- 1- 10
BLADE SERIAL NO. PLATE POSITION ---- 1- 11
RIPPER SERIAL NO. PLATE POSITION ---- 1- 11
ROPS, FOPS NO. PLATE POSITION ---- 1- 12
POSITION OF SERVICE METER ---- 1- 12
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 13
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 4
POSITIONS OF SAFETY PICTOGRAMS ---- 2- 4
SAFETY LABELS ---- 2- 5
GENERAL PRECAUTIONS ---- 2- 9
PRECAUTIONS FOR OPERATION ---- 2- 18
BEFORE STARTING ENGINE ---- 2- 18
OPERATION ---- 2- 20
TRANSPORTATION ---- 2- 24
BATTERY ---- 2- 25
TOWING ---- 2- 27
PRECAUTIONS FOR MAINTENANCE ---- 2- 28
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 5
FRONT PANEL ---- 3- 5
SWITCHES ---- 3- 35
CONTROL LEVERS, PEDALS ---- 3- 39
DUST INDICATOR ---- 3- 49
POWER SOURCE ---- 3- 49
FUSE BOX ---- 3- 50
DOOR OPEN LOCK ---- 3- 54
SASH GLASS INTERMEDIATE LOCK ---- 3- 54
CAP WITH LOCK ---- 3- 55
DOOR POCKET ---- 3- 56
ASHTRAY ---- 3- 57
TOOL BOX ---- 3- 57
CAR STEREO, HANDLING ---- 3- 58
AIR CONDITIONER, HANDLING ---- 3- 67
OPERATION ---- 3- 73
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 73

MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

STARTING ENGINE ---- 3- 96
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-104
STOPPING ENGINE ---- 3-107
MOVING MACHINE ---- 3-108
STOPPING MACHINE ---- 3-110
SHIFTING GEAR ---- 3-111
SHIFTING BETWEEN FORWARD AND REVERSE ---- 3-115
STEERING MACHINE ---- 3-117
PRECAUTIONS FOR OPERATION ---- 3-120
PARKING MACHINE ---- 3-122
CHECK AFTER STOPPING ENGINE ---- 3-123
CHECK AFTER FINISHING WORK ---- 3-124
LOCKING ---- 3-124
WORK POSSIBLE USING BULLDOZER ---- 3-125
EFFECTIVE USE OF MODE SELECTION SYSTEM ---- 3-127
RIPPER OPERATION ---- 3-132
OPERATING METHOD FOR RIPPING OPERATIONS ---- 3-135
ADJUSTING POSTURE OF WORK EQUIPMENT ---- 3-140
TIPS FOR LONGER UNDERCARRIAGE LIFE ---- 3-143
TRANSPORTATION ---- 3-145
TRANSPORTATION PROCEDURE ---- 3-145
LOADING, UNLOADING WORK ---- 3-145
METHOD OF LIFTING MACHINE ---- 3-150
TRAVELING ON ROADS ---- 3-151
REMOVAL OF CAB ---- 3-152
INSTALLATION OF CAB ---- 3-154
INSTALLATION OF ROPS ---- 3-155
COLD WEATHER OPERATION ---- 3-156
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-156
AFTER COMPLETION OF WORK ---- 3-158
AFTER COLD WEATHER ---- 3-158
LONG-TERM STORAGE ---- 3-159
BEFORE STORAGE ---- 3-159
DURING STORAGE ---- 3-159
AFTER STORAGE ---- 3-159
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-159
TROUBLESHOOTING ---- 3-160
AFTER RUNNING OUT OF FUEL ---- 3-160
METHOD OF TOWING MACHINE ---- 3-161
IF BATTERY IS DISCHARGED ---- 3-162
OTHER TROUBLE ---- 3-166
WHEN MODE SELECTION SYSTEM FLASHES ---- 3-171
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 5
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 5
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8
HANDLING HYDRAULIC RELATED EQUIPMENT ---- 4- 9
WEAR PARTS ---- 4- 10
WEAR PARTS LIST ---- 4- 11


MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 12
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 14
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 15
TORQUE LIST ---- 4- 15
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 16
SAFETY CRITICAL PARTS ---- 4- 17
MAINTENANCE SCHEDULE CHART ---- 4- 18
MAINTENANCE SCHEDULE CHART ---- 4- 18
SERVICE PROCEDURE ---- 4- 20
INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS) ---- 4- 20
WHEN REQUIRED ---- 4- 21
CHECK BEFORE STARTING ---- 4- 51
EVERY 250 HOURS SERVICE ---- 4- 52
EVERY 500 HOURS SERVICE ---- 4- 58
EVERY 1000 HOURS SERVICE ---- 4- 67
EVERY 2000 HOURS SERVICE ---- 4- 75
EVERY 4000 HOURS SERVICE ---- 4- 84
EVERY 8000 HOURS SERVICE ---- 4- 89
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
GENERAL PRECAUTIONS ---- 6- 2
PRECAUTIONS RELATED TO SAFETY ---- 6- 2
SELECTION OF TRACK SHOE ---- 6- 3
SELECTION OF TRACK SHOES ---- 6- 3
PROCEDURE FOR SELECTING RIPPER POINT ---- 6- 4
PROCEDURE FOR SELECTING RIPPER POINT ---- 6- 4
EFFECTIVE METHOD OF OPERATION FOR DUAL TILTDOZER ---- 6- 5
BLADE CONDITION ---- 6- 5
DOZING WORK ---- 6- 7
LEVELING (SPREADING) OPERATION ---- 6- 10
DITCHING OPERATION ---- 6- 10
BOULDER RAISING OPERATION ---- 6- 10
SIDE-CUTTING OPERATIONS ---- 6- 11
HORIZONTAL DOZING OPERATIONS FROM SIDE SLOPE (ROUGH GROUND) ---- 6- 11
SHOE SLIP CONTROL ---- 6- 12
MODE SELECTION SWITCH PANEL (SHOE SLIP CONTROL) ---- 6- 12
EFFECTIVE USE OF MODE SELECTION SYSTEM ---- 6- 14
IF MODE SELECTION SYSTEM FLASHES ---- 6- 20
HANDLING MACHINES EQUIPPED WITH VHMS ---- 6- 21
VHMS INSTALLED, COMMUNICATIONS TERMINAL NOT INSTALLED ---- 6- 21
VHMS AND COMMUNICATIONS TERMINAL INSTALLED ---- 6- 21
INDEX ---- 7- 1

MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

AIR CONDITIONER, HANDLING


GENERAL LOCATIONS OF CONTROL PANEL

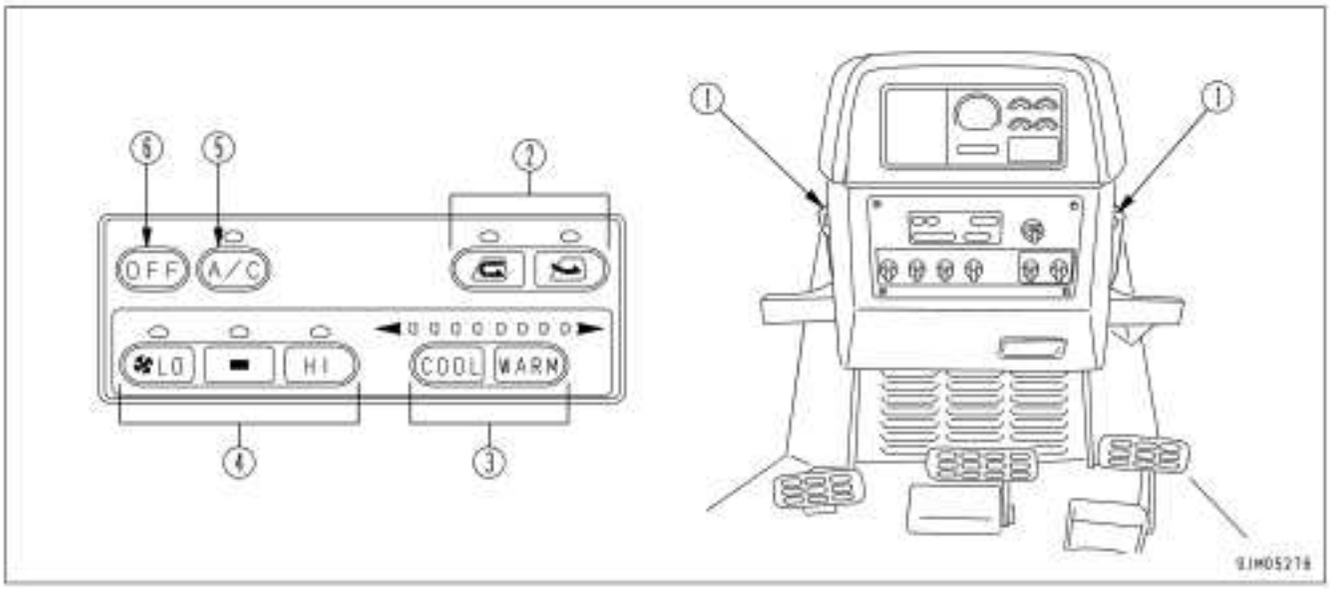

(1) Vent selector lever
(2) FRESH/RECIRC selector switch
(3) Temperature control switch
(4) Air flow selector switch
(5) Air conditioner switch
(6) OFF switch

VENT SELECTOR SWITCH (sending air to upper half of cab)

If lever (1) is pulled to position (b), the air from the air conditioner is all directed to the upper half of the cab.
This can be used when sending a cool breeze during hot weather.

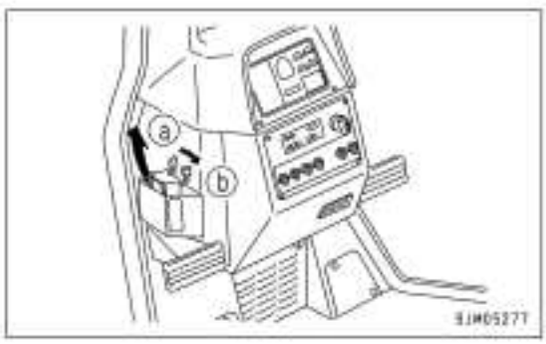

VENT SELECTOR SWITCH (sending air to feet)

If lever (1) is pushed to position (a), the air from the air conditioner is all directed to the feet.
This can be used to send warm air to the feet during cold weather.




MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

7. Check that engine pre-heating pilot lamp (3) on the monitor panel lights up.
   If the engine pre-heating pilot lamp does not light, go on to step 9.




8. Keep in this condition until engine pre-heating pilot lamp (3) goes out.
   (Pre-heating is completed after approx. 12 seconds, and the lamp goes out.)

9. When preheating pilot lamp (3) goes off, turn the key of ignition switch (2) to the START position (C) to crank the engine.
   The time that preheating pilot lamp (3) stays on changes according to the ambient temperature as shown in the table below.

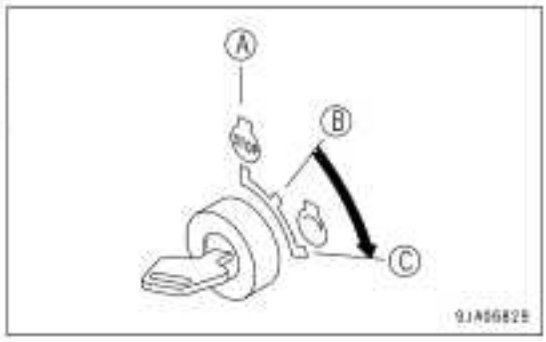

Ambient temperature	Pre-heat time
0°C to -10°C (32°F to 14°F)	0 to 15 seconds
-10°C to -20°C (14°F to -4°F)	15 to 30 seconds
-20°C to -30°C (-4°F to -22°F)	30 to 45 seconds
-30°C to (-22°F to)	45 seconds

10. When the engine starts, release the key in starting switch (2).
    The key will return automatically to the ON position (B).

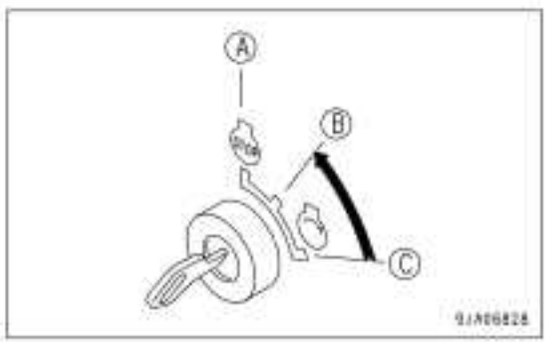

REMARK
Immediately after starting the engine, run the engine at idling, and do not operate the accelerator pedal or work equipment during this time.
Guideline for idling time
- Cold weather: At least 15 seconds
- When first starting engine after changing oil or replacing engine oil filter: 20 seconds

11. When the engine rotation stabilizes, set fuel control dial (1) to low idle (MIN) position, then perform the warming-up operation.

MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE

INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS)

Perform the following maintenance only after the first 250 hours.

- REPLACE TRANSMISSION FILTER ELEMENT AND TORQUE CONVERTER OIL FILTER ELEMENT
- Change power train oil (including the transmission case, torque converter case, bevel gear case), clean strainer
- Change oil in hydraulic tank, replace hydraulic oil filter element, clean hydraulic tank strainer
- Change oil in final drive case

For details of the method of replacing or maintaining, see the section on EVERY 500 HOURS, 1000 HOURS and 2000 HOURS SERVICE.

MidWestTech | Komatsu D375A-5E0 Bulldozer Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >