TEN00294-02

Operation & Maintenance Manual

WHEEL LOADER **WA470-6**

SERIAL NUMBERS 90001 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.


KOMATSU®

MidWestTech | Komatsu WA470-6 Wheel Loader Operation & Maintenance Manual | Publi... Order the manual at mid-west-tech.com >

OPENING, CLOSING CAB DOORS, WINDOWS ---- 3- 62
BACKUP ALARM ---- 3- 66
FUSE ---- 3- 67
SLOW BLOW FUSE ---- 3- 68
POWER OUTLET ---- 3- 69
AM/FM RADIO-CASSETTE STEREO ---- 3- 70
AM/FM RADIO ---- 3- 78
AIR CONDITIONER ---- 3- 84
HANDLING AUTO AIR CONDITIONER ---- 3- 91
HANDLING CAB WIPER ---- 3- 98
OPERATION ---- 3- 99
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 99
STARTING ENGINE ---- 3-117
CHECKS AFTER STARTING ENGINE ---- 3-121
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-122
STOPPING ENGINE ---- 3-124
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3-125
TURNING ---- 3-134
OPERATION OF WORK EQUIPMENT ---- 3-137
WORK POSSIBLE USING WHEEL LOADER ---- 3-139
PRECAUTIONS FOR OPERATION ---- 3-145
ADJUSTING WORK EQUIPMENT POSTURE ---- 3-147
PARKING MACHINE ---- 3-149
CHECKS AFTER COMPLETION OF OPERATION ---- 3-151
LOCKING ---- 3-152
HANDLING THE TIRES ---- 3-153
TRANSPORTATION ---- 3-155
TRANSPORTATION PROCEDURE ---- 3-155
LOADING, UNLOADING WORK WITH TRAILERS ---- 3-155
LIFTING MACHINE ---- 3-159
COLD WEATHER OPERATION ---- 3-161
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-161
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-162
AFTER COLD WEATHER ---- 3-162
LONG-TERM STORAGE ---- 3-163
BEFORE STORAGE ---- 3-163
DURING STORAGE ---- 3-163
AFTER STORAGE ---- 3-163
TROUBLESHOOTING ---- 3-164
WHEN MACHINE RUNS OUT OF FUEL ---- 3-164
METHOD OF TOWING MACHINE ---- 3-164
IF BATTERY IS DISCHARGED ---- 3-169
OTHER TROUBLE ---- 3-172
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8

MidWestTech | Komatsu WA470-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

GENERAL VIEW OF CONTROLS AND GAUGES

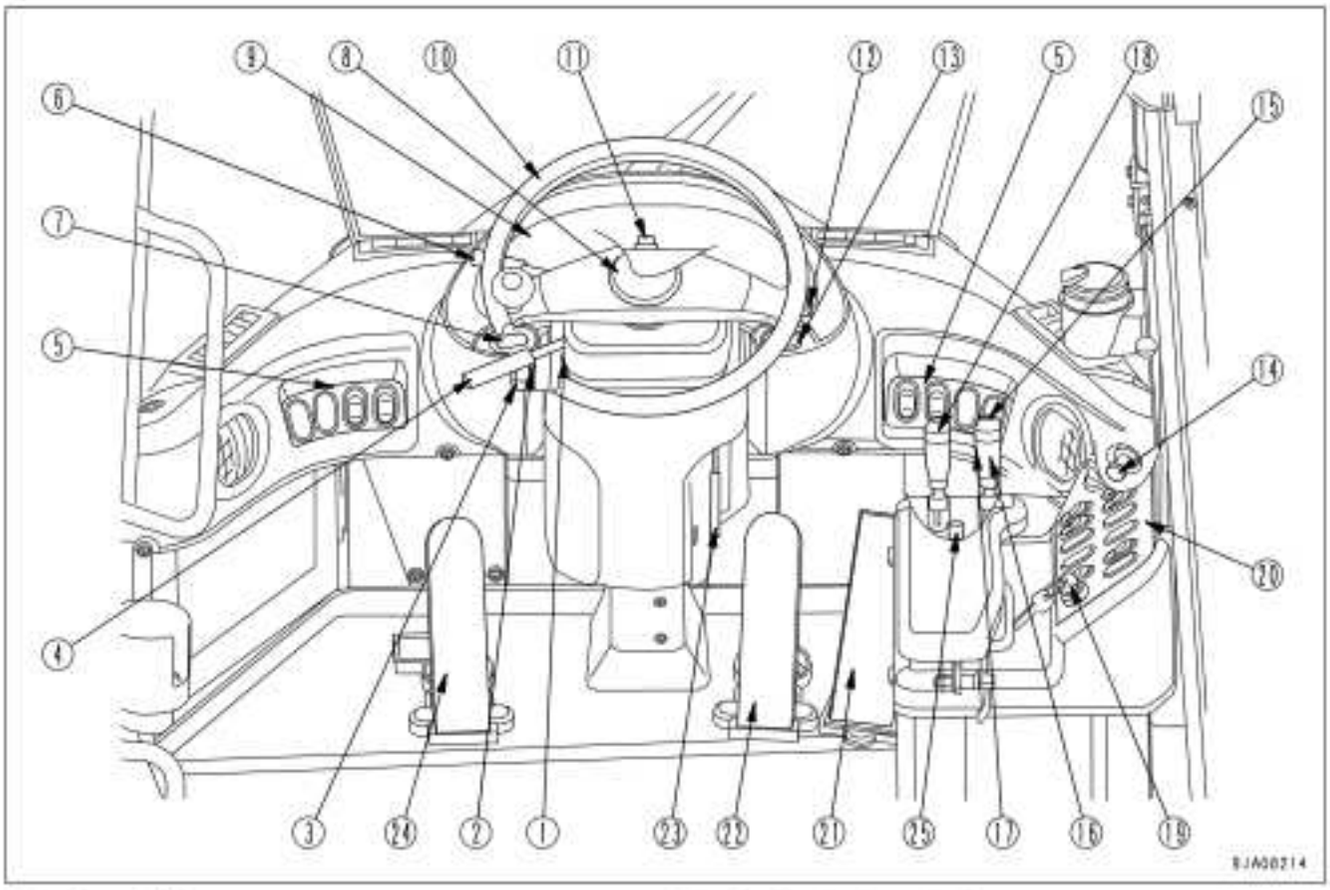


(1) Gearshift lever stopper
(2) Rear wiper switch
(3) Front wiper switch
(4) Gearshift lever
(5) Front switch panel
(6) Directional lever
(7) E.C.S.S. (electronic conrtrolled suspension system) switch
(8) Horn button
(9) Machine monitor
(10) Steering wheel
(11) Hazard lamp switch
(12) Lamp switch
(12) Turn signal lever
(12) Dimmer switch
(13) Parking brake switch
(14) Cigarette lighter
(15) Kickdown switch
(16) Lift arm control lever
(17) Hold switch
(18) Bucket control lever
(19) Starting switch
(20) Right switch panel
(21) Accelelator pedal
(22) Right brake pedal
(23) Sterring tilt lock lever
(24) Left brake pedal
(25) Work equipment lock lever

MidWestTech | Komatsu WA470-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


RESET METHOD FOR FILTER, OIL REPLACEMENT TIME

The filter and oil replacement time is displayed on the character display, so if the filter and oil have been replaced, reset the filter and oil change time.


1. Press the (◇) of machine monitor mode selector switch 1, and display the odometer.
2. Press (>) or (<) of machine monitor mode selector switch 2 and display "MAINTENANCE MONITOR".

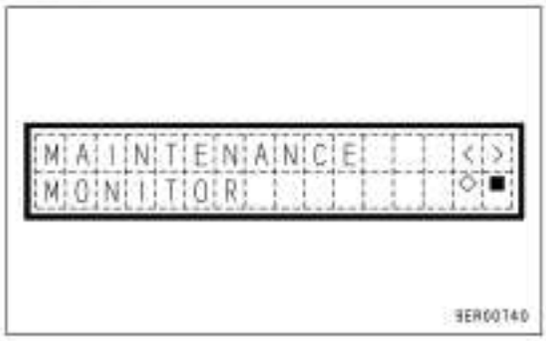

3. Press the (◇) of machine monitor mode selector switch 1. It will change to the display in the diagram on the right.
   The bottom line shows two items: the replacement time on the left and the total number of times the item has been replaced on the right.
4. Press the (>) or (<) of machine monitor mode selector switch 2 to display the item (filter or oil) which has reached the replacement time.

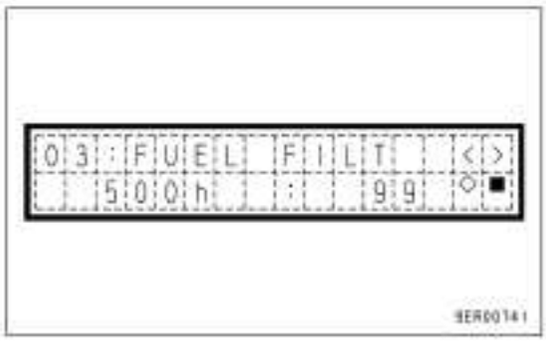

5. Press the (◇) of machine monitor mode selector switch 1. It will change to the display in the diagram on the right.
   The top line shows [Reset] and [Item to be reset] in turn.
6. When resetting the replacement time, press (>) or (<) of machine monitor mode selector switch 2, align the cursor with "YES", then press (■) of machine monitor mode selector switch 1. It will reset and return to the previous screen.
   To abort, align the cursor with "NO", then press (■) of machine monitor mode selector switch 1.

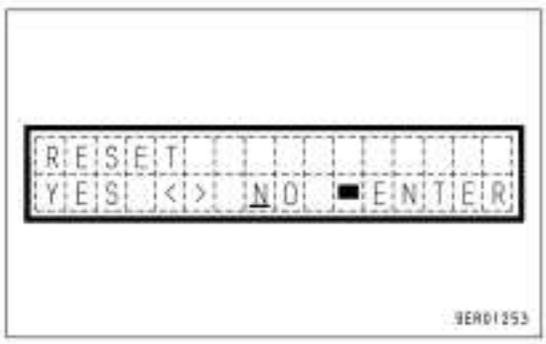

7. When resetting the replacement time for another item, use the procedure in Step 4. After completing, press (■) of machine monitor mode selector switch 1 twice or turn the starting switch OFF.

MidWestTech | Komatsu WA470-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

LIFTING MACHINE

WARNING


- The person using the crane to carry out lifting operations must be a qualified crane operator.
- Never carry out lifting operations if any person is on the machine being lifted.
- Always use a wire rope that has ample strength for the weight of the machine being lifted.
- Keep the machine horizontal when lifting it.
- When carrying out lifting operations, do as follows to prevent the machine from moving unexpectedly.
  Set the parking brake switch to the ON position.
  Set the work equipment lock lever to the LOCK position.
  Set the frame lock bar to the LOCK position.
- Never enter the area under or around a raised machine.
- There is danger of the machine losing its balance.
  Use the procedure below to set the machine in the proper posture and use the lifting equipment when lifting the machine.

NOTICE
This method of lifting applies to the standard specification machine.
The method of lifting differs according to the attachments and options installed.
For details of the procedure for machines that are not the standard specification, please consult your Komatsu distributor.

For weight, see "SPECIFICATIONS (PAGE 5-2)".

LIFTING PROCEDURE

Lifting position

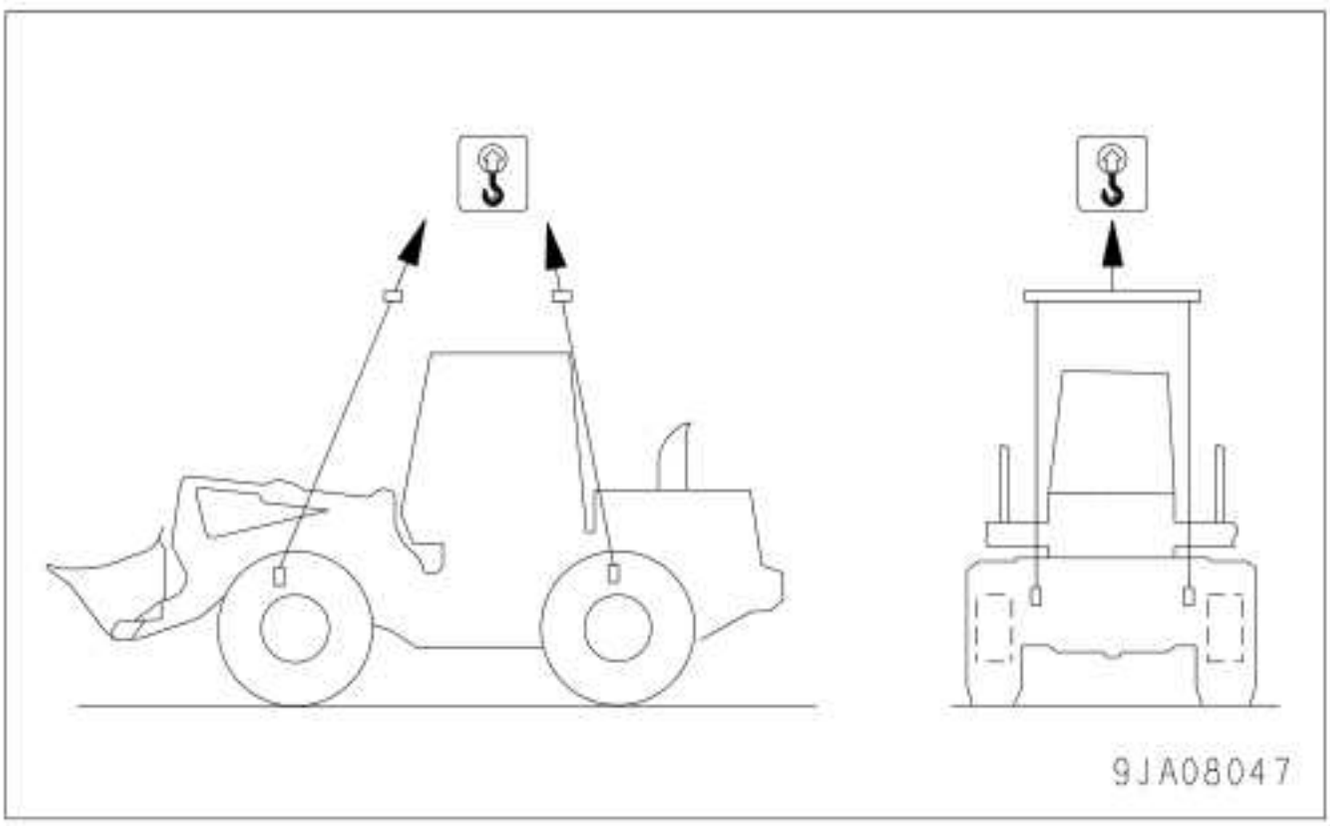

MidWestTech | Komatsu WA470-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >