TEN00316-04

Operation & Maintenance Manual

WHEEL LOADER **WA50-6**

SERIAL NUMBERS 60001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual | Publi... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 1- 1
BEFORE READING THIS MANUAL 1- 2
SAFETY INFORMATION 1- 3
INTRODUCTION 1- 4
USE OF MACHINE 1- 4
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE 1- 4
NECESSARY INFORMATION 1- 5
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE 1- 5
EPA REGULATIONS, ENGINE NUMBER PLATE 1- 5
POSITION OF SERVICE METER 1- 6
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR 1- 6
SAFETY 2- 1
SAFETY 2- 2
SAFETY LABELS 2- 5
LOCATION OF SAFETY LABELS 2- 6
SAFETY LABELS 2- 7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE 2- 11
PRECAUTIONS BEFORE STARTING OPERATION 2- 11
PREPARATIONS FOR SAFE OPERATION 2- 11
FIRE PREVENTION 2- 13
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE 2- 14
DO NOT GET CAUGHT IN ARTICULATING PORTION 2- 17
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES 2- 17
UNAUTHORIZED MODIFICATION 2- 17
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS 2- 17
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING 2- 18
PRECAUTIONS FOR OPERATION 2- 19
PRECAUTIONS FOR JOBSITE 2- 19
STARTING ENGINE 2- 21
OPERATION 2- 23
TRANSPORTATION 2- 30
TOWING 2- 31
PRECAUTIONS FOR MAINTENANCE 2- 32
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE 2- 32
PRECAUTIONS FOR INSPECTION AND MAINTENANCE 2- 37
TIRES 2- 42
OPERATION 3- 1
GENERAL VIEW 3- 2
GENERAL VIEW OF MACHINE 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES 3- 3
EXPLANATION OF COMPONENTS 3- 5
MACHINE MONITOR 3- 5
SWITCHES 3- 14
CONTROL LEVERS, PEDALS 3- 17
CAP AND COVER WITH LOCK 3- 22
FRAME LOCK BAR 3- 23
ENGINE FOOD 3- 23
TOWING PIN 3- 23
FUSE 3- 25

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


FUSIBLE LINK ---- 3- 26
MANUAL POCKET ---- 3- 26
POWER OUTLET ---- 3- 27
HANDLING MACHINES EQUIPPED WITH KOMTRAX ---- 3- 28
OPERATION ---- 3- 29
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 29
STARTING ENGINE ---- 3- 47
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 50
STOPPING ENGINE ---- 3- 52
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3- 53
TURNING ---- 3- 57
OPERATION OF WORK EQUIPMENT ---- 3- 58
HANDLING FRONT ATTACHMENT SERVICE HYDRAULIC CIRCUIT ---- 3- 60
WORK POSSIBLE USING WHEEL LOADER ---- 3- 61
PRECAUTIONS FOR OPERATION ---- 3- 65
ADJUSTING WORK EQUIPMENT POSTURE ---- 3- 67
PARKING MACHINE ---- 3- 69
CHECKS AFTER COMPLETION OF OPERATION ---- 3- 71
LOCKING ---- 3- 71
HANDLING THE TIRES ---- 3- 72
TRANSPORTATION ---- 3- 75
TRANSPORTATION PROCEDURE ---- 3- 75
LOADING, UNLOADING WORK WITH TRAILERS ---- 3- 75
LIFTING MACHINE ---- 3- 77
COLD WEATHER OPERATION ---- 3- 81
PRECAUTIONS FOR LOW TEMPERATURE ---- 3- 81
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3- 82
AFTER COLD WEATHER ---- 3- 82
LONG-TERM STORAGE ---- 3- 83
BEFORE STORAGE ---- 3- 83
DURING STORAGE ---- 3- 83
AFTER STORAGE ---- 3- 83
TROUBLESHOOTING ---- 3- 84
WHEN MACHINE RUNS OUT OF FUEL ---- 3- 84
METHOD OF TOWING MACHINE ---- 3- 84
IF BATTERY IS DISCHARGED ---- 3- 87
OTHER TROUBLE ---- 3- 91
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8
WEAR PARTS ---- 4- 9
WEAR PARTS LIST ---- 4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 10
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 11
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 12
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 13
TORQUE LIST ---- 4- 13

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 15
MAINTENANCE SCHEDULE CHART ---- 4- 15
SERVICE PROCEDURE ---- 4- 16
WHEN REQUIRED ---- 4- 16
CHECK BEFORE STARTING ---- 4- 29
EXPLANATION OF SYMBOLS FOR LUBRICATION STANDARD TABLE ---- 4- 29
EVERY 250 HOURS SERVICE ---- 4- 30
EVERY 500 HOURS SERVICE ---- 4- 32
EVERY 1000 HOURS SERVICE ---- 4- 35
EVERY 1500 HOURS SERVICE ---- 4- 38
EVERY 2000 HOURS SERVICE ---- 4- 39
EVERY 4000 HOURS SERVICE ---- 4- 42
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
HANDLING CAB ---- 6- 2
SWITCHES ---- 6- 2
AIR CONDITIONER ---- 6- 7
CONTROL PANEL AND COMPONENTS ---- 6- 7
AIR CONDITIONER CONTROLS ---- 6- 9
AIR CONDITIONER MAINTENANCE ---- 6- 10
CAR RADIO ---- 6- 15
EXPLANATION OF COMPONENTS ---- 6- 15
METHOD OF USE ---- 6- 16
PRECAUTIONS WHEN USING ---- 6- 18
INDEX ---- 7- 1

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


GENERAL VIEW OF CONTROLS AND GAUGES

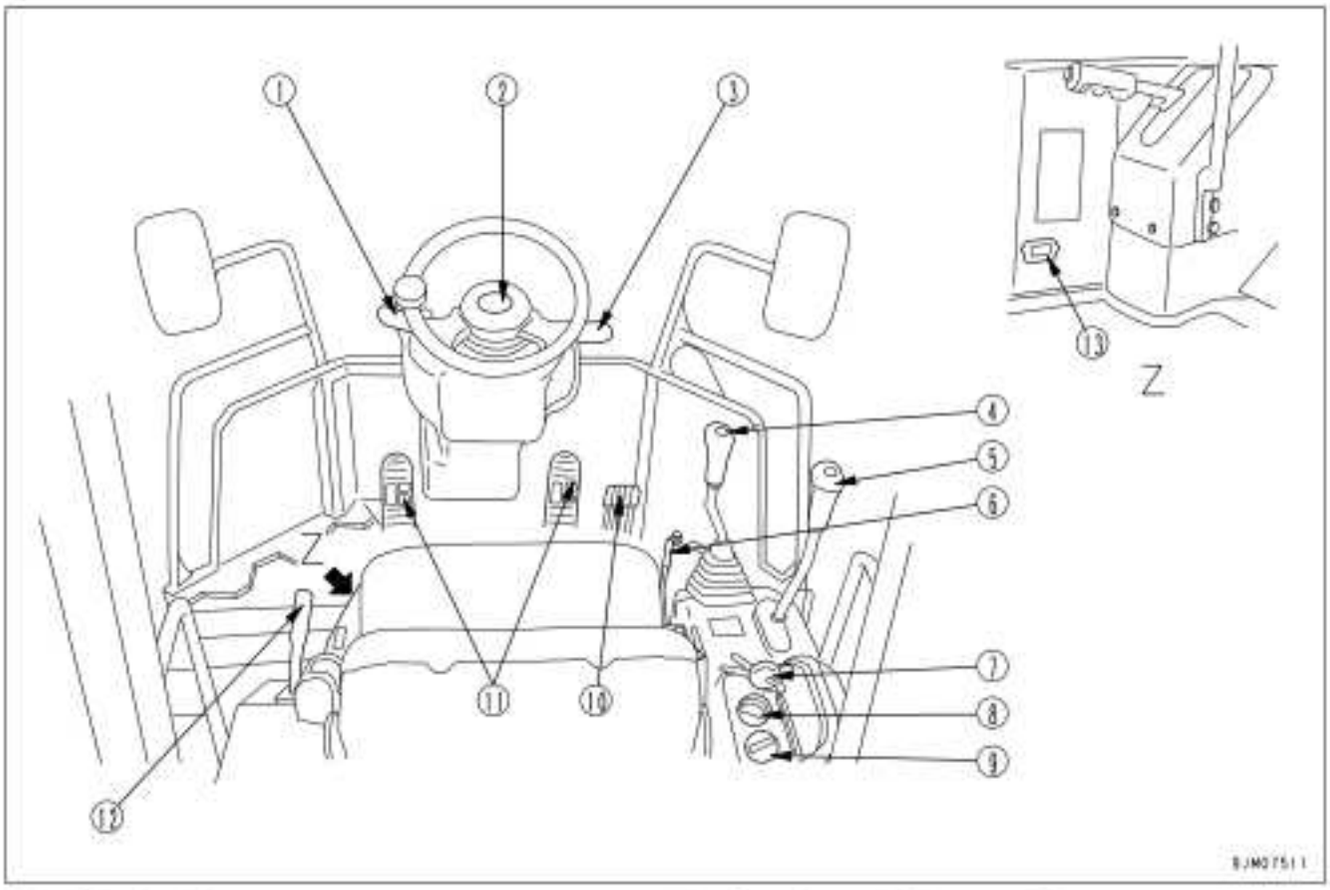

(1) Directional lever
(2) Horn button
(3) Lamp switch,Turn signal lever
(4) Work equipment control lever
(5) Attachment control lever
(6) Work equipment lock lever
(7) Starting switch
(8) Travel speed adjustment dial
(9) Mode selector dial
(10) Accelerator pedal
(11) Brake pedal
(12) Parking brake lever
(13) Service meter

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

LOCATION OF LIFTING POSITION MARK

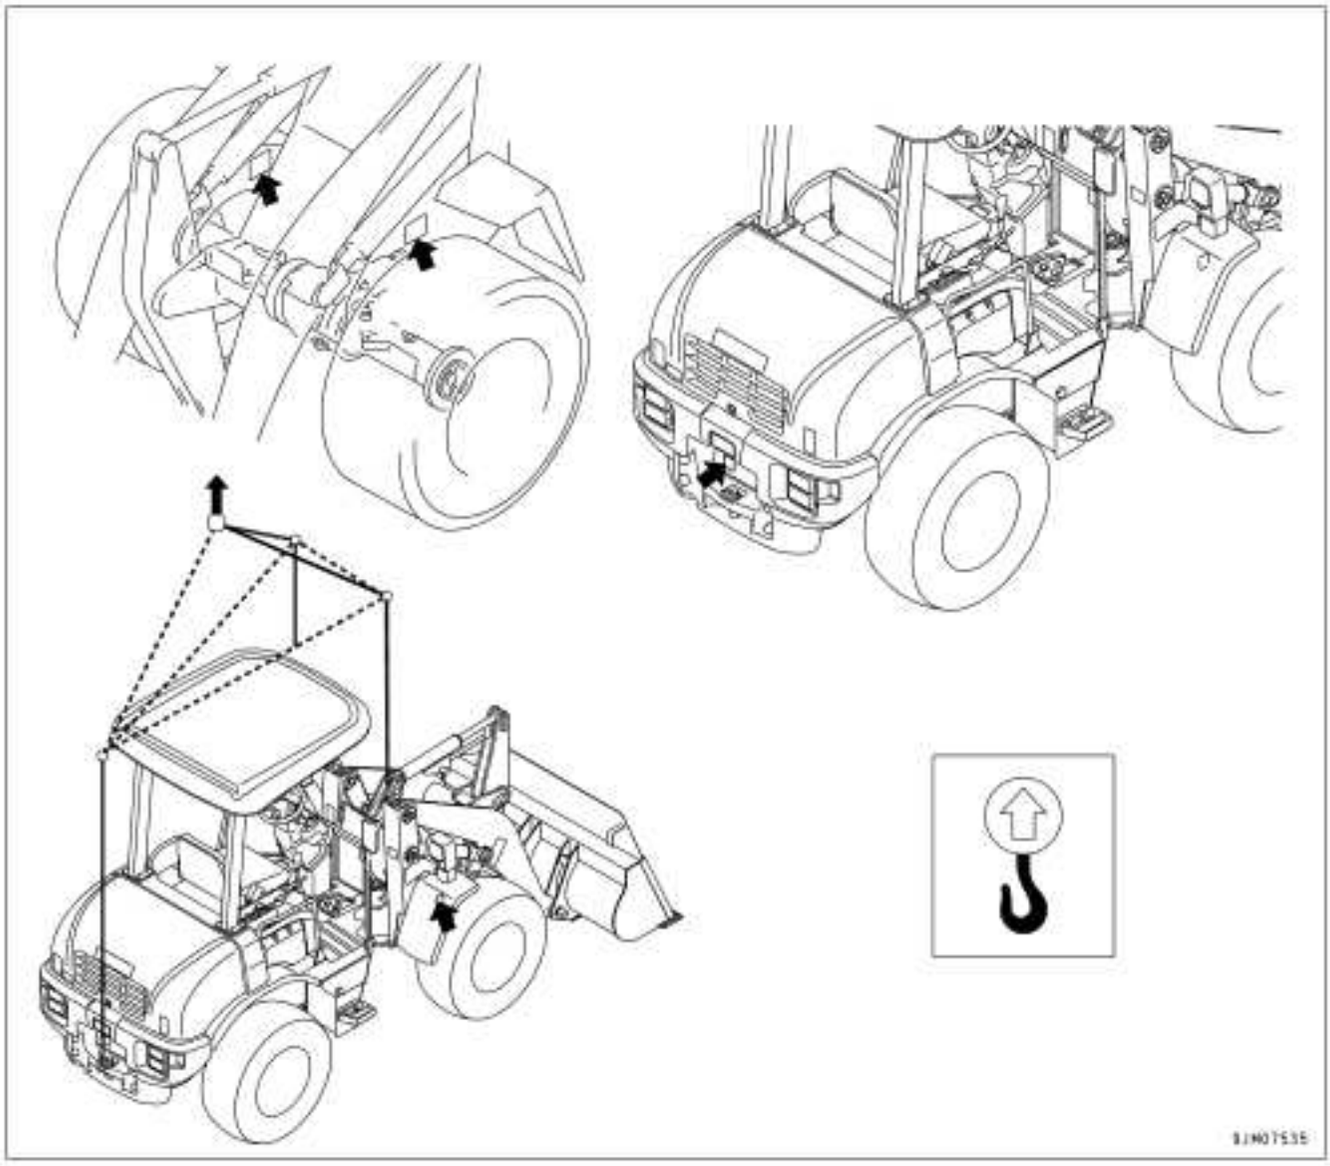

For weight, see "SPECIFICATIONS (PAGE 5-2)".

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

EVERY 250 HOURS SERVICE


Maintenance for every 50 hours service should be carried out at the same time.

LUBRICATING

⚠ WARNING

- **Apply the parking brake, and lock the front and rear frames with the frame lock bar and pin.**
- **Set the work equipment in a stable condition, then stop the engine and apply the work equipment lock knob securely to the work equipment control lever.**

1. Using a grease pump, pump in grease through the grease fittings shown by arrows.
2. After greasing, wipe off any old grease that was pushed out.

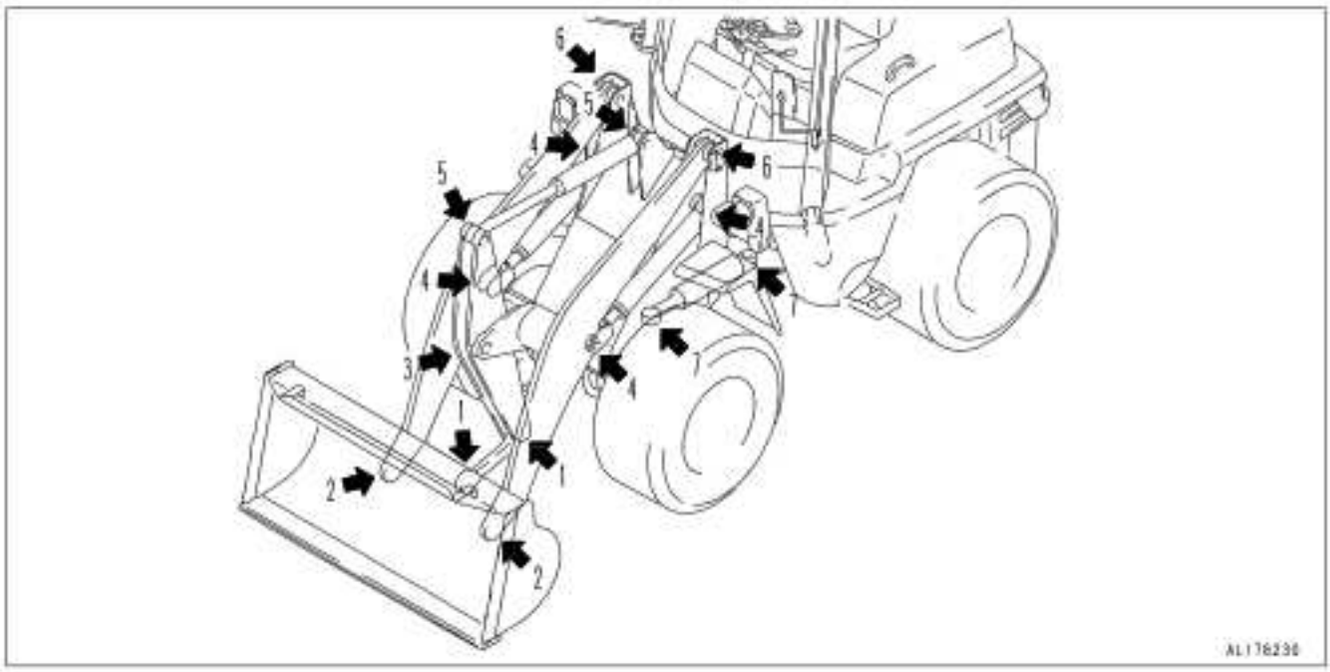

(1) Bucket link pin (2 places)
(2) Bucket pin (2 places)
(3) Tilt lever pin (1 place)
(4) Lift cylinder pin (4 places)
(5) Dump cylinder pin (2 places)
(6) Lift arm pin (2 places)
(7) Steering cylinder pin (2 places)

MidWestTech | Komatsu WA350-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >