TEN00358-01

Operation & Maintenance Manual

MOBILE CRUSHER **BR380JG-1E0**

SERIAL NUMBERS 2609 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


CONTROLLERS ---- 3- 53
FUSE ---- 3- 53
TOOL BOX ---- 3- 54
OPERATION ---- 3- 55
CHECK BEFORE STARTING ENGINE ---- 3- 55
STARTING ENGINE ---- 3- 80
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 82
STOPPING ENGINE ---- 3- 88
CHECK AFTER STOPPING ENGINE ---- 3- 88
MACHINE OPERATION ---- 3- 89
STEERING MACHINE ---- 3- 94
OPERATION OF WORK EQUIPMENT ---- 3- 96
CHECK AND CONFIRMATION OF JAW CRUSHER AFTER WORK ---- 3-104
CHECK AFTER FINISHING WORK ---- 3-104
LOCKING ---- 3-105
RUN-IN OPERATION OF JAW CRUSHER ---- 3-106
PRECAUTIONS WHEN OPERATING JAW CRUSHER ---- 3-108
EFFICIENT USE OF JAW CRUSHER ---- 3-112
SCOPE OF WORKS USING MOBILE CRUSHER ---- 3-119
PROHIBITIONS FOR OPERATION ---- 3-127
PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS ---- 3-130
TRANSPORTATION ---- 3-131
TRANSPORTATION PROCEDURE ---- 3-131
LOADING, UNLOADING WORK ---- 3-132
LIFTING MACHINE ---- 3-139
COLD WEATHER OPERATION ---- 3-140
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-140
AFTER COMPLETION OF WORK ---- 3-142
AFTER COLD WEATHER ---- 3-142
LONG-TERM STORAGE ---- 3-143
BEFORE STORAGE ---- 3-143
DURING STORAGE ---- 3-143
AFTER STORAGE ---- 3-143
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-143
TROUBLESHOOTING ---- 3-144
AFTER RUNNING OUT OF FUEL ---- 3-144
PHENOMENA THAT ARE NOT FAILURES ---- 3-144
METHOD OF TOWING MACHINE ---- 3-145
IF BATTERY IS DISCHARGED ---- 3-146
OTHER TROUBLE ---- 3-150
MAINTENANCE ---- 4- 1
GUIDE TO MAINTENANCE ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING AND PERFORMANCE OF OIL CLINIC FOR OIL, FUEL, COOLANT ---- 4- 4
RELATING TO ELECTRIC SYSTEM ---- 4- 8
OUTLINE OF HYDRAULIC EQUIPMENT ---- 4- 8
AIR-BLEEDING FROM HYDRAULIC CIRCUIT ---- 4- 9
WEAR PARTS ---- 4- 11
WEAR PARTS LIST ---- 4- 11
JAW CRUSHER RELATED PARTS ---- 4- 12

MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Man... Order the manual at mid-west-tech.com >


PRIMARY CONVEYOR RELATED PARTS ---- 4- 14
RECOMMENDED FUEL, COOLANT AND LUBRICANTS ---- 4- 15
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 17
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 18
TORQUE LIST ---- 4- 18
TOOLS TO USE CHECK AND MAINTENANCE CRUSHER ---- 4- 19
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 21
SAFETY CRITICAL PARTS ---- 4- 21
MAINTENANCE SCHEDULE CHART ---- 4- 22
MAINTENANCE SCHEDULE CHART ---- 4- 22
SERVICE PROCEDURE ---- 4- 24
INITIAL 250 HOURS SERVICE (FIRST MAINTENANCE FOR NEW MACHINE ONLY) ---- 4- 24
INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS) ---- 4- 24
WHEN REQUIRED ---- 4- 25
CHECK BEFORE STARTING ---- 4- 87
EVERY 10 HOURS SERVICE ---- 4- 88
EVERY 100 HOURS SERVICE ---- 4- 89
EVERY 250 HOURS SERVICE ---- 4- 90
EVERY 500 HOURS SERVICE ---- 4- 94
EVERY 1000 HOURS SERVICE ---- 4-102
EVERY 2000 HOURS SERVICE ---- 4-108
EVERY 4000 HOURS SERVICE ---- 4-110
EVERY 5000 HOURS SERVICE ---- 4-112
EVERY 8000 HOURS SERVICE ---- 4-113
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
GENERAL PRECAUTIONS ---- 6- 2
PRECAUTIONS RELATED TO SAFETY ---- 6- 2
ATTACHMENTS, OPTIONS ---- 6- 3
ATTACHMENTS, OPTIONS CHART ---- 6- 3
METHOD FOR CONNECTING HYDRAULIC HOSES FOR OPTIONS ---- 6- 3
RADIO CONTROL UNIT ---- 6- 4
ON USE OF RADIO CONTROL UNIT ---- 6- 4
DIRECTIONS FOR USE ---- 6- 7
RADIO CONTROL OPERATION ---- 6- 13
MUCK DISCHARGE CONVEYOR ---- 6- 26
PROCEDURE FOR RAISING (BENDING) MUCK DISCHARGE CONVEYOR ---- 6- 26
PROCEDURE FOR LOWERING (EXTEND) MUCK DISCHARGE CONVEYOR ---- 6- 28
GREASING MUCK DISCHARGE CONVEYOR ---- 6- 31
CHECK AND ADJUSTMENT OF MUCK DISCHARGE CONVEYOR ---- 6- 32
FAILURES AND CORRECTIVE ACTIONS ---- 6- 34
WEARING PARTS ---- 6- 36
SPECIFICATIONS ---- 6- 37
M-TYPE CHUTE ---- 6- 38
METHOD OF OPERATION ---- 6- 38
GRIZZLY BAR OPENING ---- 6- 39
HANDLING MACHINES EQUIPPED WITH KOMTRAX ---- 6- 40
BASIC PRECAUTIONS ---- 6- 40

MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Man... Order the manual at mid-west-tech.com >

8. Using the conveyor UP/DOWN control switch, set the mount hook to travel lock position (6).

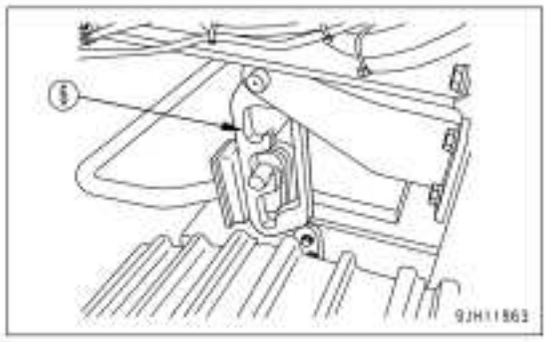


9. Remove travel lever lock (A).
10. Set travel speed selector switch (8) to low speed/trailer loading position (a), then angle travel lever (7) slowly to the rear to move the machine off.

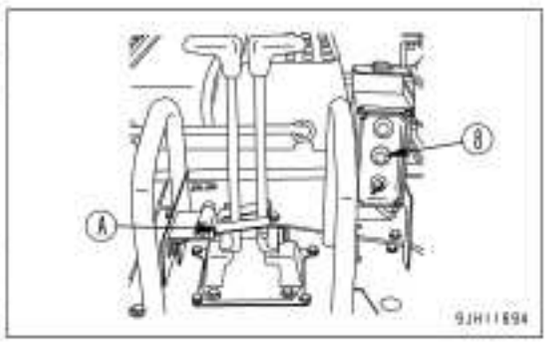


REMARK
Even when the radio control (if equipped) is used when traveling, it is possible to carry out loading and unloading of the machine. When using the radio control, check the surrounding area carefully before starting. For details of using the radio control, see "RADIO CONTROL UNIT (PAGE 6-4)".



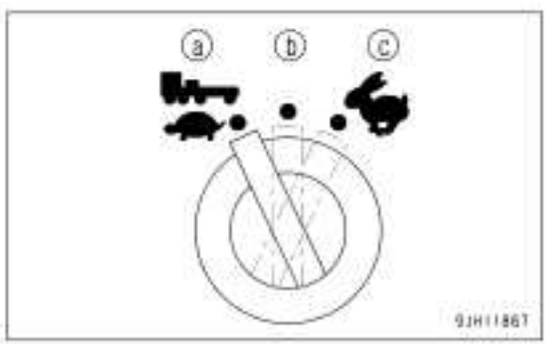



11. Before moving onto the ramps, check that the machine is facing the ramps directly and that the center line of the machine is aligned with the center line of the trailer.
    Determine the direction for the ramps, then travel slowly in reverse.
    When traveling on the ramps, use only the travel operation. Do not carry out any other operation.

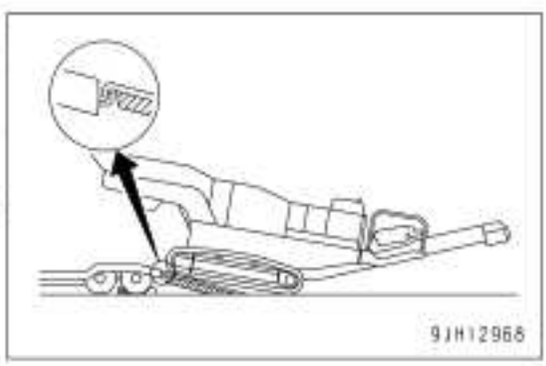

MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Man... Order the manual at mid-west-tech.com >

4. Fit swing jaw lifting hook (B) to the top surface of the swing jaw, then raise it.
(Weight of swing jaw: 735 kg (1,621 lb))

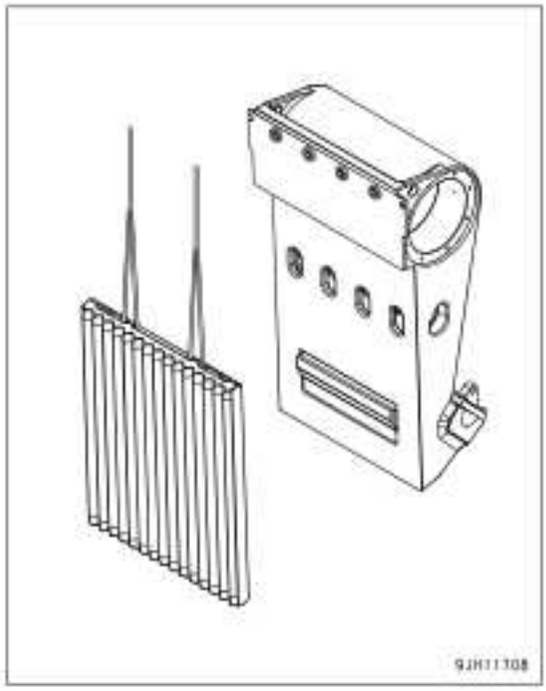

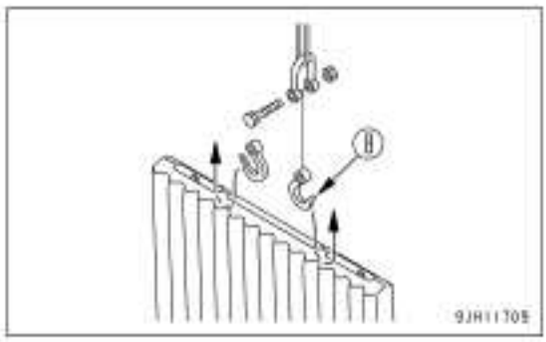

⚠ CAUTION

After detaching the swing jaw plate, completely remove soils, sand, etc. from the swing jaw plate fitting surfaces (swing jaw, each upper surface of swing jaw plate mount stopper and transverse stopper piece)
If not removed completely, they may cause a backlash on the swing jaw plate.

- When turning over, lower the swing jaw plate on top of a stand, then fit the wire to the hook on the opposite side, and insert again in the crusher frame.
- When replacing the swing jaw plate, lower the worn plate on to a block once. Lift up a new swing jaw plate with a wire rope and insert it into the crusher frame.

5. Install the swing jaw wedge and swing jaw wedge bolt.

When the swing jaw wedge is installed to the swing jaw plate, the wedge may not sit well with the plate due to burrs remaining on the contact face of either parts. In that case, remove the burrs before installing the wedge. If it is left unstable with burrs remaining, the wedge securing bolt may loosen during the initial running-in period of crushing operation and the machine may be damaged.


MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Man... Order the manual at mid-west-tech.com >

EVERY 1000 HOURS SERVICE

Carry out the EVERY 10 HOURS MAINTENANCE, EVERY 100 HOURS MAINTENANCE, EVERY 250 HOURS MAINTENANCE, and EVERY 500 HOURS MAINTENANCE at the same time.

CHANGE OF OIL IN CRUSHER MOTOR BEARING CASE

1. Remove drain plug (P) to drain oil and screw it in after the drainage.
2. Add engine oil through oil filler port (F) to the specified level. Oil replacement amount: 4.7 liters (1.24 US gal)
3. When oil begins to flow out from plug hole (A), stop adding oil and tighten plug hole (A) and the plug of oil filler port (F).

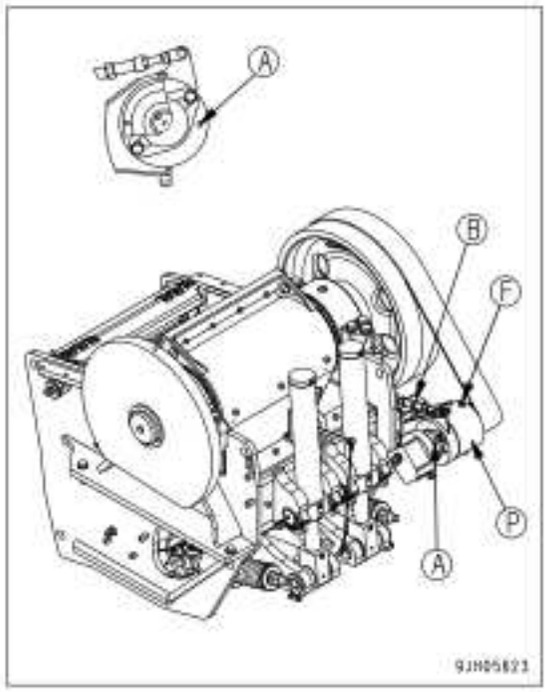

NOTICE

When checking the oil level inside the crusher motor bearing case and adding oil, carry out the operation with turnbuckle length (B) (distance between pins) within a range of 500 to 512 mm (19.7 to 20.2 in).

MidWestTech | Komatsu BR380JG-1E0 Mobile Crusher Operation & Maintenance Man... Order the manual at mid-west-tech.com >