TEN00444-10

Operation & Maintenance Manual

ARTICULATED
DUMP TRUCK

HM400-2

SERIAL NUMBERS 2638 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.


KOMATSU®

MidWestTech | Komatsu HM400-2 Dump Truck Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

DUST INDICATOR ---- 3- 47
CIRCUIT BREAKER ---- 3- 47
FUSES ---- 3- 48
CAR RADIO ---- 3- 51
CAR STEREO ---- 3- 57
AIR CONDITIONER ---- 3- 65
OPERATION ---- 3- 70
CHECK BEFORE STARTING ENGINE ---- 3- 70
STARTING ENGINE ---- 3- 85
OPERATIONS, CHECKS AFTER STARTING ENGINE ---- 3- 87
STOPPING ENGINE ---- 3- 88
CHECKS AFTER STOPPING ENGINE ---- 3- 88
MOVING MACHINE OFF (FORWARD, REVERSE), STOPPING ---- 3- 89
SHIFTING GEAR ---- 3- 94
TRAVELING DOWNHILL ---- 3- 96
STEERING THE MACHINE ---- 3-102
OPERATION USING DIFFERENTIAL LOCK ---- 3-103
LOADING OPERATIONS ---- 3-106
DUMP OPERATIONS ---- 3-108
CAB TILT OPERATION ---- 3-110
PRECAUTIONS FOR OPERATION ---- 3-113
PARKING MACHINE ---- 3-114
CHECKS AFTER COMPLETION OF WORK ---- 3-115
LOCKING ---- 3-115
HANDLING TIRES ---- 3-116
DETERMINING AND MAINTAINING TRAVEL ROAD ---- 3-117
DETERMINING TRAVEL ROAD ---- 3-117
MAINTAINING TRAVEL ROAD ---- 3-117
TRANSPORTATION ---- 3-118
PRECAUTIONS WHEN TRANSPORTING ---- 3-118
STEPS FOR TRANSPORTATION ---- 3-118
METHOD OF SECURING MACHINE ---- 3-119
METHOD OF LIFTING MACHINE ---- 3-120
COLD WEATHER OPERATION ---- 3-124
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-124
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-125
AFTER COLD WEATHER ---- 3-126
LONG-TERM STORAGE ---- 3-127
BEFORE STORAGE ---- 3-127
DURING STORAGE ---- 3-127
AFTER STORAGE ---- 3-127
PRECAUTIONS BEFORE TRAVELING AFTER LONG-TERM STORAGE ---- 3-127
TROUBLESHOOTING ---- 3-128
AFTER RUNNING OUT OF FUEL ---- 3-128
IF TRANSMISSION HAS TROUBLE ---- 3-129
METHOD OF LOWERING DUMP BODY IN EMERGENCY ---- 3-129
METHOD OF TOWING MACHINE ---- 3-130
IF BATTERY IS DISCHARGED ---- 3-134
OTHER TROUBLE ---- 3-137
MAINTENANCE ---- 4- 1

MidWestTech | Komatsu HM400-2 Dump Truck Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >


CONTROL LEVERS AND PEDALS

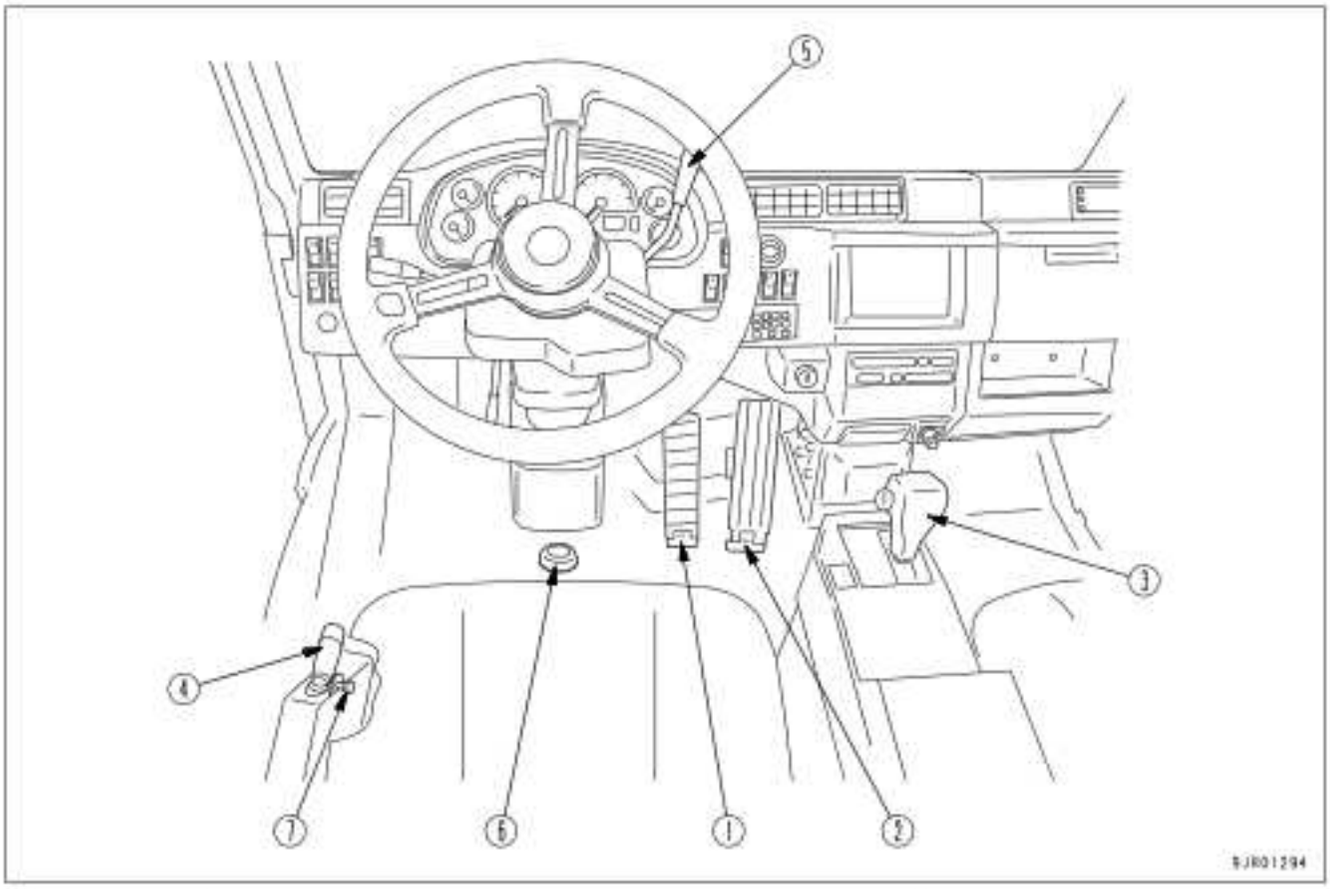

(1) Brake pedal
(2) Accelerator pedal
(3) Gear shift lever
(4) Dump lever
(5) Retarder control lever
(6) Left and right differential lock pedal
(7) Dump lever lock knob


BRAKE PEDAL

This pedal (1) is used to apply the wheel brakes.

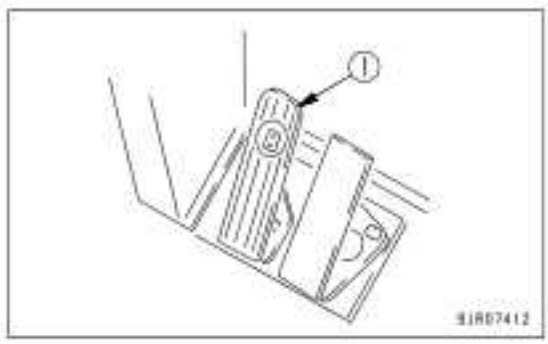

MidWestTech | Komatsu HM400-2 Dump Truck Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

LOCATION OF LIFTING POSITION MARK

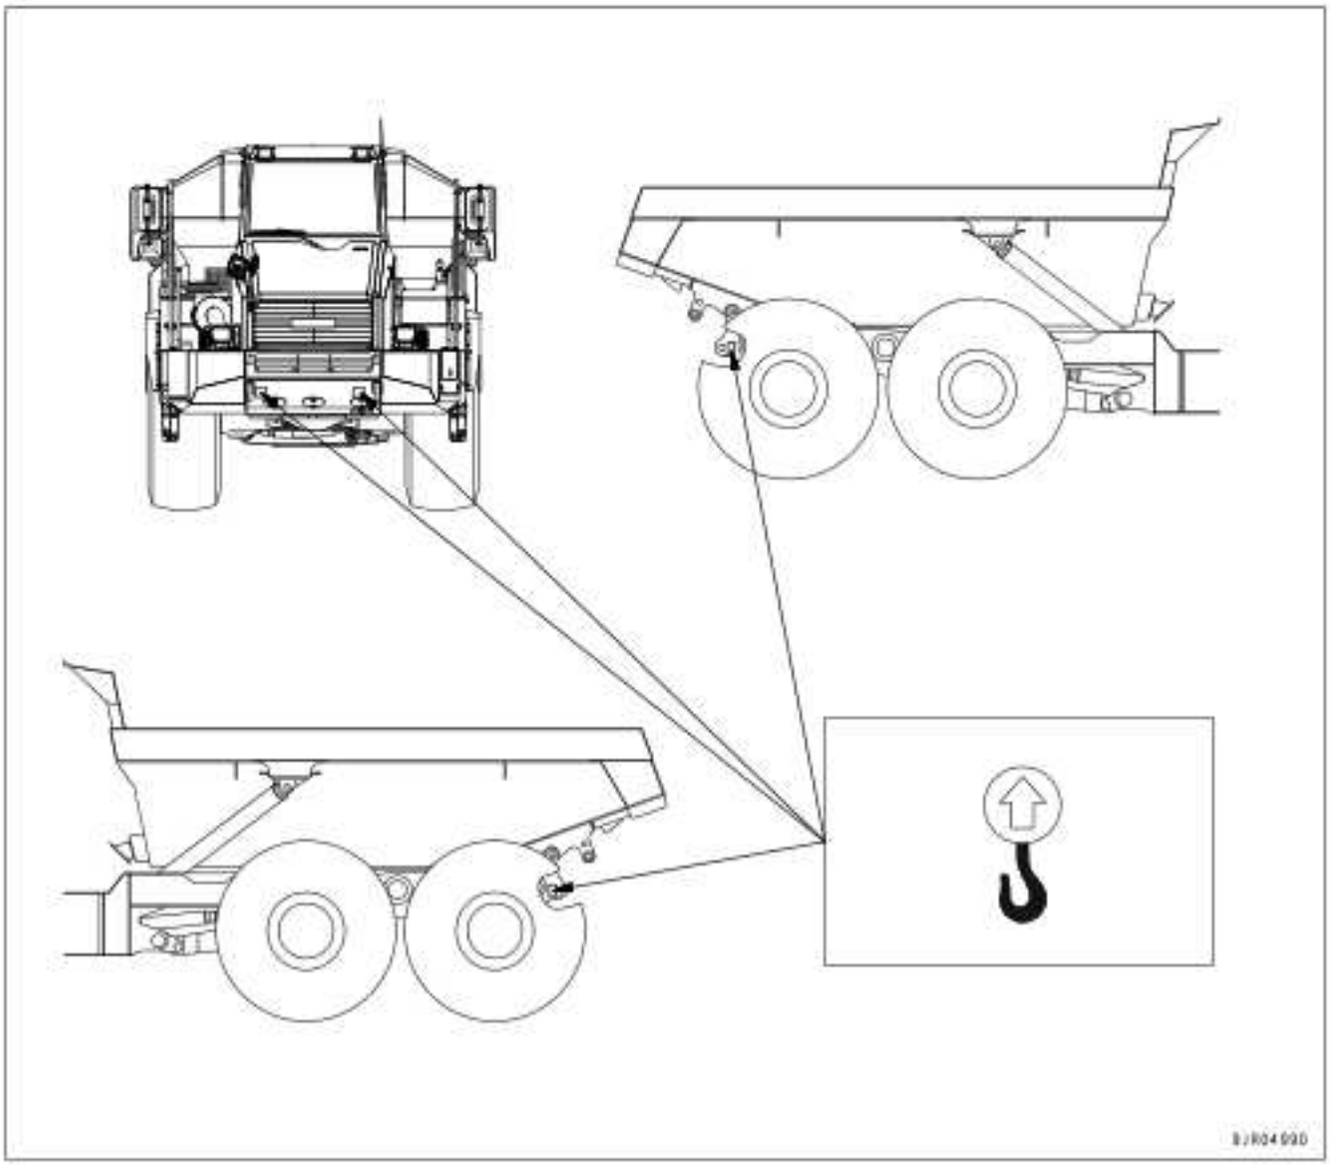

WEIGHT TABLE

	Machine weight	Front wheel load	Center wheel load	Rear wheel load	Center of gravity (from front axle)
HM400-2	32460 kg (71574 lb)	17880 kg (39425 lb)	7420 kg (16361 lb)	7160 kg (15788 lb)	2390 mm (7 ft 10 in)

MidWestTech | Komatsu HM400-2 Dump Truck Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

EVERY 250 HOURS SERVICE

Lubrication ---- 4- 43
Check drive shaft ---- 4- 45
Clean breathers ---- 4- 46
Clean overflow hose ---- 4- 48
Check level of battery electrolyte ---- 4- 49
Check alternator belt tension, adjust ---- 4- 51
Check air conditioner compressor belt tension, adjust ---- 4- 52
Check frame, A-arm ---- 4- 53
Check braking capacity of foot brake ---- 4- 54
Check braking capacity of retarder brake ---- 4- 54
Check braking capacity of parking brake ---- 4- 55
Check wear of parking brake pads ---- 4- 55
Check of accumulator gas pressure ---- 4- 56

EVERY 500 HOURS SERVICE

Change oil in engine oil pan, replace engine oil filter cartridge ---- 4- 57
Replace fuel prefilter cartridge ---- 4- 58
Lubricate cab mount pin (left and right: 1 place each) ---- 4- 59
Check oil level in final drive case, add oil ---- 4- 59
Check oil level in differential case, add oil ---- 4- 60
Clean, check radiator fins and after cooler fins ---- 4- 61
Check fan belt tension, adjust ---- 4- 62
Recover oil leaking from floating seal ---- 4- 63

EVERY 1000 HOURS SERVICE

Replace fuel main filter cartridge ---- 4- 65
Replace fuel tank breather element ---- 4- 66
Replace transmission filter element ---- 4- 67
Change oil in transmission case ---- 4- 68
Change oil in brake oil tank, replace brake oil filter element ---- 4- 70
Lubrication ---- 4- 72
Lubricating parking brake ---- 4- 73
Check wear of brake disc ---- 4- 75
Cleaning of spherical surface of ball joint of body heating exhaust bellows ---- 4- 76
Check of engine air intake piping clamps for looseness ---- 4- 83

EVERY 2000 HOURS SERVICE

Change oil in final drive case ---- 4- 84
Change oil in differential case ---- 4- 85
Replace hydraulic filter element ---- 4- 87
Clean hydraulic tank strainer ---- 4- 88
Clean transmission case strainer ---- 4- 89
Clean strainer in differential lock hydraulic circuit ---- 4- 89
Clean breather ---- 4- 91
Check accumulator gas pressure ---- 4- 91
Check, adjust engine valve clearance ---- 4- 91

MidWestTech | Komatsu HM400-2 Dump Truck Operation & Maintenance Manual | Pu... Order the manual at mid-west-tech.com >