TEN00462-08

Operation & Maintenance Manual

WHEEL LOADER **WA600-6**

SERIAL NUMBERS 60732 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.


KOMATSU®

MidWestTech | Komatsu WA600-6 Wheel Loader Operation & Maintenance Manual | Publi... Order the manual at mid-west-tech.com >


OPENING, CLOSING CAB DOORS, WINDOWS ---- 3- 86
HANDLING CAB WIPER ---- 3- 89
DUST INDICATOR ---- 3- 90
FUSE ---- 3- 91
CIRCUIT BREAKER ---- 3- 93
SLOW BLOW FUSE ---- 3- 94
LUNCH BOX TRAY ---- 3- 94
TOOL BOX ---- 3- 94
GREASE PUMP ---- 3- 94
LOCATION OF FIRE EXTINGUISHER ---- 3- 95
POWER OUTLET ---- 3- 95
AM/FM RADIO-CASSETTE STEREO ---- 3- 96
AIR CONDITIONER ---- 3-105
OPERATION ---- 3-120
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3-120
STARTING ENGINE ---- 3-139
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-141
STOPPING ENGINE ---- 3-144
CHECK AFTER STOPPING ENGINE ---- 3-144
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3-145
TURNING ---- 3-153
OPERATION OF WORK EQUIPMENT ---- 3-155
SEMI AUTO DIGGING OPERATIONS ---- 3-157
REMOTE POSITIONER ---- 3-158
WORK POSSIBLE USING WHEEL LOADER ---- 3-160
PRECAUTIONS FOR OPERATION ---- 3-180
REMOVAL AND INSTALLATION OF THE BUCKET ---- 3-183
PARKING MACHINE ---- 3-187
CHECKS AFTER COMPLETION OF OPERATION ---- 3-189
LOCKING ---- 3-189
HANDLING THE TIRES ---- 3-190
TRANSPORTATION ---- 3-193
TRANSPORTATION PROCEDURE ---- 3-193
LOADING, UNLOADING WORK ---- 3-193
METHOD OF SECURING MACHINE ---- 3-193
METHOD OF LIFTING MACHINE ---- 3-195
PRECAUTIONS WHEN DISASSEMBLY OR REASSEMBLING WORK EQUIPMENT ---- 3-198
COLD WEATHER OPERATION ---- 3-199
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-199
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-200
AFTER COLD WEATHER ---- 3-200
WARMING-UP OPERATION FOR STEERING HYDRAULIC CIRCUIT IN COLD WEATHER ---- 3-201
LONG-TERM STORAGE ---- 3-202
BEFORE STORAGE ---- 3-202
DURING STORAGE ---- 3-202
AFTER STORAGE ---- 3-202
TROUBLESHOOTING ---- 3-203
WHEN MACHINE RUNS OUT OF FUEL ---- 3-203
METHOD OF TOWING MACHINE ---- 3-203
IF BATTERY IS DISCHARGED ---- 3-208

MidWestTech | Komatsu WA600-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


2. Set work equipment lock lever (4) (for bucket control lever (2) and lift arm control lever (3)) and steering lock lever (6) (for AJSS lever (5)) to FREE position (F).

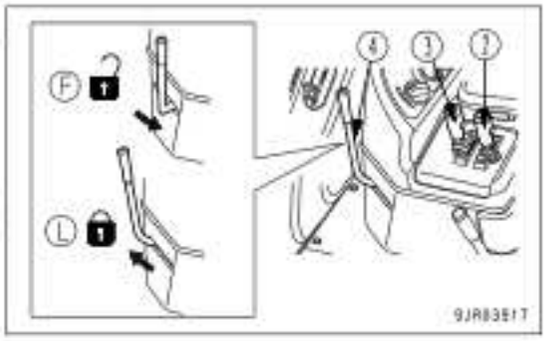


REMARK
If the steering lock lever is not set to FREE position (F), the directional selector switch will remain at the N position even if the switch is operated.
In addition, the speed display on the front machine monitor will show N and will not change, so always set the steering lock lever to FREE position (F).

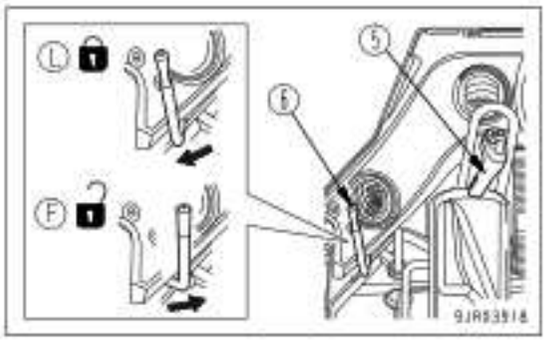

3. Operate lift arm control lever (3) to set the work equipment to the travel posture shown in the diagram on the right.

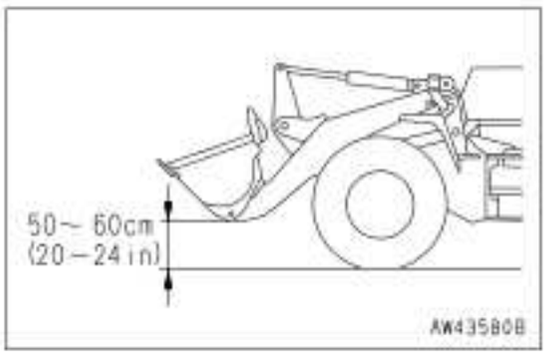

4. Depress right brake pedal (8), then turn parking brake switch (7) to the OFF (RELEASE) position to release the parking brake.

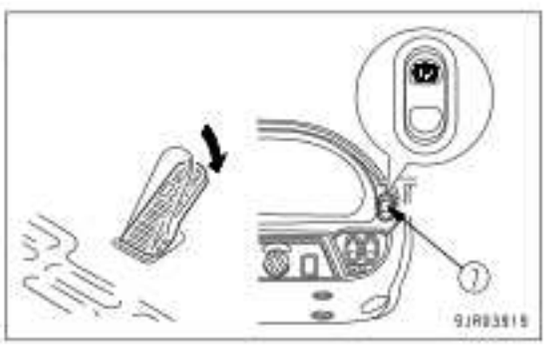

REMARK
If the parking brake is still actuated when parking brake switch (7) is at the OFF (RELEASE) position, turn the parking brake switch ON, then turn it OFF again.

MidWestTech | Komatsu WA600-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE

EVERY 10 HOURS SERVICE (ONLY FOR FIRST 50 HOURS)

Carry out the following maintenance every 10 hours for the first 50 hours of operation of a new machine.

- Lubricating

For details of the service procedure, see the section on EVERY 100 HOURS SERVICE.

INITIAL 250 HOURS SERVICE

Perform the following maintenance only after the first 250 hours.


- Replace transmission oil filter element
- Replace hydraulic tank filter element

For details of the method of replacing or maintaining, see the section on EVERY 500 HOURS and 2000 HOURS SERVICE.


MidWestTech | Komatsu WA600-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

4. Check that the bucket is in contact with the ground, then set work equipment lock lever (5) of bucket control lever (3) and lift arm control lever (4) to LOCK position (L).

5. Start the engine. For details, see "STARTING ENGINE (PAGE 3-139)".

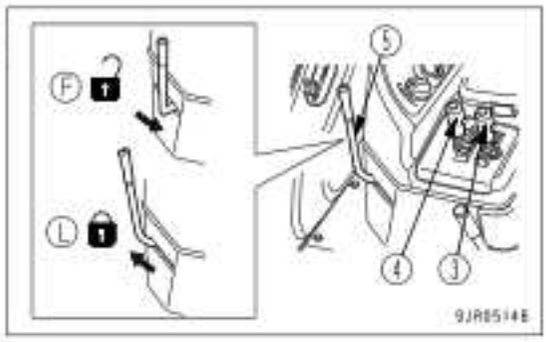



6. Check that warning pilot lamp (6) is not lighted up.

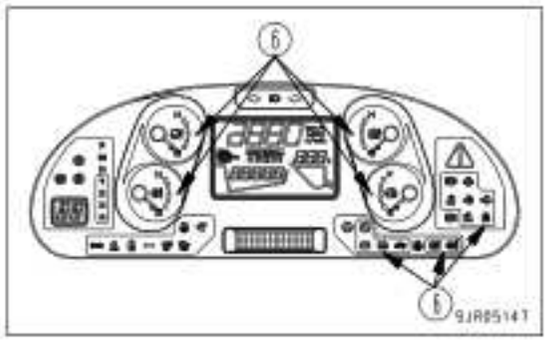

7. Set work equipment lock lever (5) to FREE position (F).


8. Operate lift arm control lever (4) to set the work equipment to the travel posture shown in the diagram on the right.

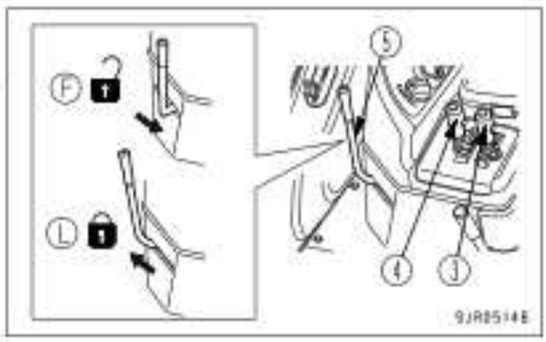

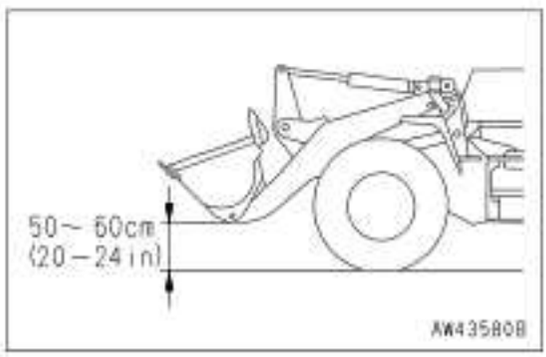

9. Depress right brake pedal (7), then turn parking brake switch (1) to the OFF (RELEASE) position to release the parking brake.

REMARK
If the parking brake is still actuated when parking brake switch (1) is at the OFF (RELEASE) position, turn the parking brake switch ON, then turn it OFF again.

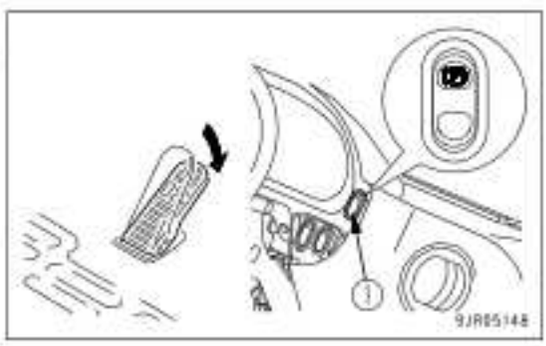

MidWestTech | Komatsu WA600-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >