TEN00477-03

Operation & Maintenance Manual

BULLDOZER

D375A-6

SERIAL NUMBERS 60018 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®


MidWestTech | Komatsu D375A-6 Bulldozer Operation & Maintenance Manual | Publication... Order the manual at mid-west-tech.com >


FUSE BOX ---- 3- 73
DOOR OPEN LOCK ---- 3- 78
SASH GLASS INTERMEDIATE LOCK ---- 3- 78
CAP WITH LOCK ---- 3- 79
DOOR POCKET ---- 3- 80
ASHTRAY ---- 3- 81
TOOL BOX ---- 3- 81
CAR STEREO, HANDLING ---- 3- 82
AIR CONDITIONER, HANDLING ---- 3- 91
OPERATION ---- 3- 97
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 97
STARTING ENGINE ---- 3-122
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-130
STOPPING ENGINE ---- 3-138
MOVING MACHINE ---- 3-139
STOPPING MACHINE ---- 3-141
SHIFTING GEAR ---- 3-142
SHIFTING BETWEEN FORWARD AND REVERSE ---- 3-152
STEERING MACHINE ---- 3-154
PRECAUTIONS FOR OPERATION ---- 3-157
PARKING MACHINE ---- 3-159
CHECK AFTER STOPPING ENGINE ---- 3-160
CHECK AFTER FINISHING WORK ---- 3-161
LOCKING ---- 3-161
WORK POSSIBLE USING BULLDOZER ---- 3-162
RECOMMENDED MODE FOR EACH TYPE OF OPERATION ---- 3-164
RIPPER OPERATION ---- 3-173
OPERATING METHOD FOR RIPPING OPERATIONS ---- 3-176
ADJUSTING POSTURE OF WORK EQUIPMENT ---- 3-182
TIPS FOR LONGER UNDERCARRIAGE LIFE ---- 3-185
TRANSPORTATION ---- 3-187
TRANSPORTATION PROCEDURE ---- 3-187
LOADING, UNLOADING WORK ---- 3-188
METHOD OF LIFTING MACHINE ---- 3-192
TRAVELING ON ROADS ---- 3-193
REMOVAL OF CAB ---- 3-194
INSTALLATION OF CAB ---- 3-196
INSTALLATION OF ROPS ---- 3-197
COLD WEATHER OPERATION ---- 3-198
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-198
AFTER COMPLETION OF WORK ---- 3-200
AFTER COLD WEATHER ---- 3-200
LONG-TERM STORAGE ---- 3-201
BEFORE STORAGE ---- 3-201
DURING STORAGE ---- 3-201
AFTER STORAGE ---- 3-201
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-201
TROUBLESHOOTING ---- 3-202
AFTER RUNNING OUT OF FUEL ---- 3-202
METHOD OF TOWING MACHINE ---- 3-203

MidWestTech | Komatsu D375A-6 Bulldozer Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

MAINTENANCE MODE SELECTOR SWITCH


When switch F5 is pressed on the standard screen, the monitor display screen switches to the maintenance mode screen.

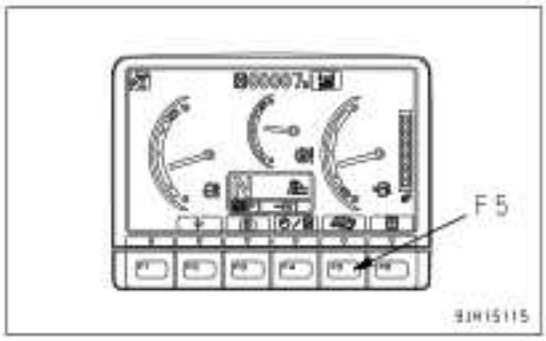

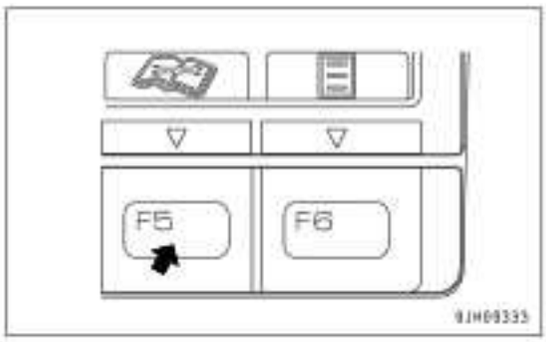

The items on the maintenance display are as follows.


a	b
Engine Oil Change	500
Eng Oil Filter Change	500
Fuel Main Filter Change	500
Fuel Pre Filter Change	500
Hyd Oil Filter Change	2,000
Damper Case Service	2,000
Final Drive Oil Change	2,000
Hydraulic Oil Change	2,000
P/L Oil Change	1,000
P/L Oil Filter Change	500

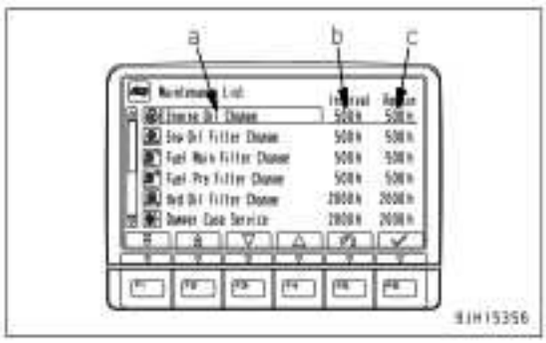

a: Maintenance items
b: Default maintenance time settings (h)
c: Time remaining until maintenance (h)

MidWestTech | Komatsu D375A-6 Bulldozer Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

SWITCH

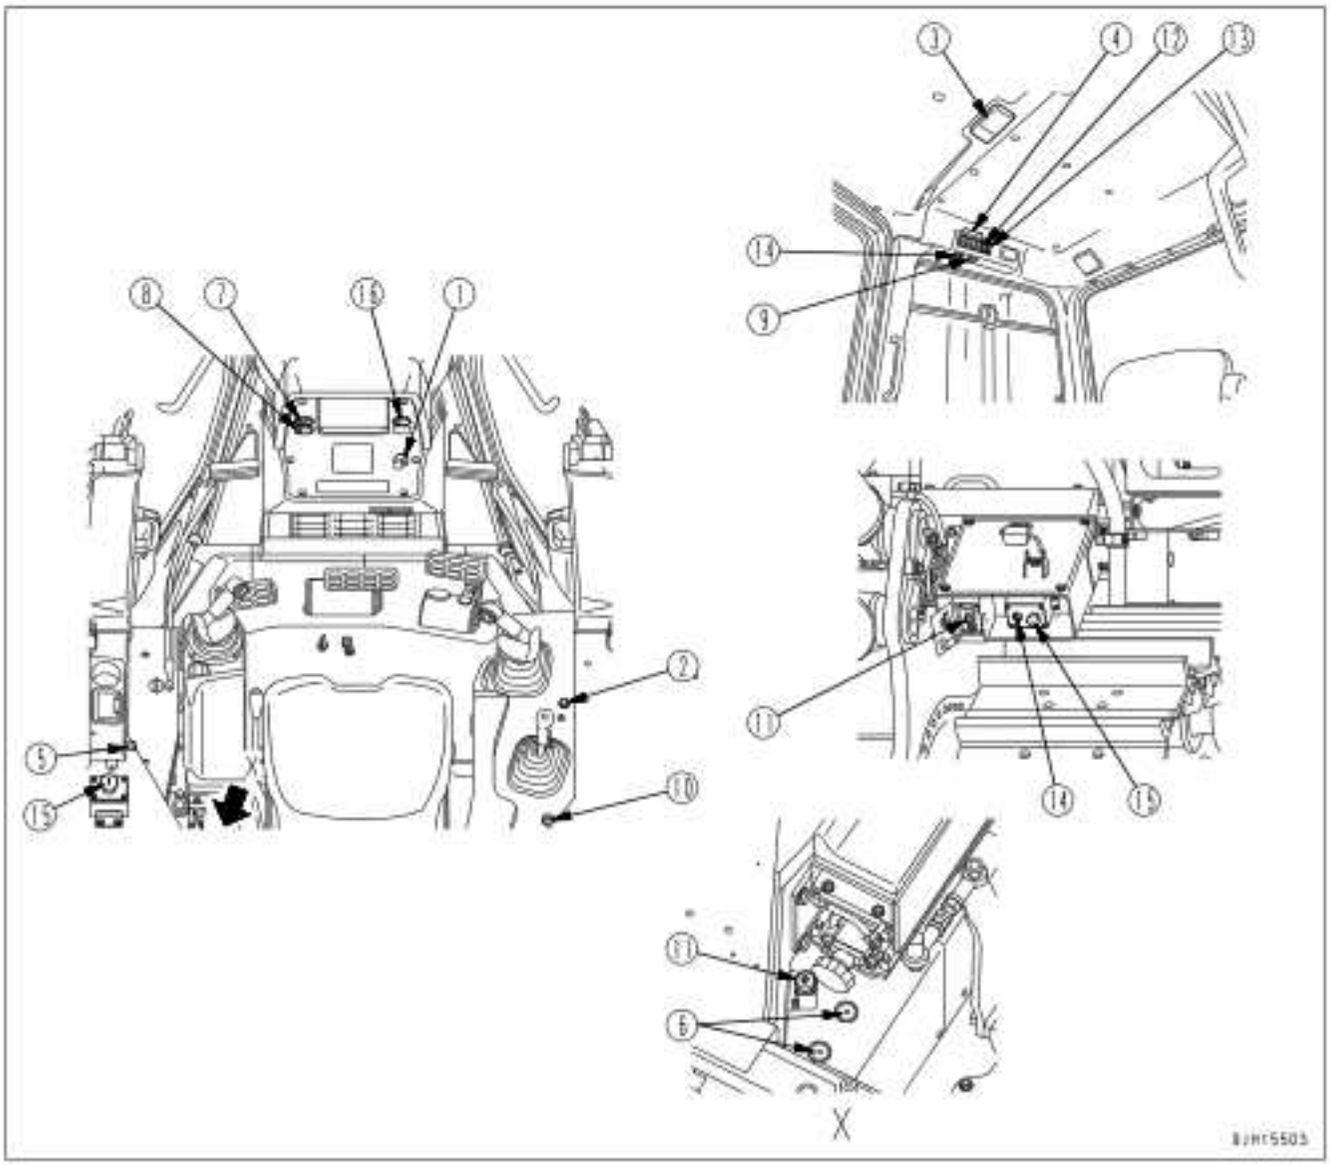


(1) Starting switch
(2) Horn switch
(3) Room lamp switch
(4) Wiper switch
(5) Cigarette lighter
(6) Accessory socket
(7) Front lamp, working lamp switch
(8) Rear lamp switch
(9) Operation switch for rear glass heated wire
(10) Pin puller control switch (*1)
(11) Connector for VHMS download (*1)
(12) Front additional working lamp switch (*1)
(13) Rear additional working lamp switch (*1)
(14) Revolving warning lamp switch (*1) or Access lamp switch switch
(15) Engine emergency stop switch
(16) Engine room working lamp switch
(17) Access lamp switch switch

• (*1): if equipped


MidWestTech | Komatsu D375A-6 Bulldozer Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

12. Open reservoir tank cap (7), add coolant to the specified level in reference to "CHECK COOLANT LEVEL, ADD COOLANT (PAGE 3-100)", and then close cap (7).

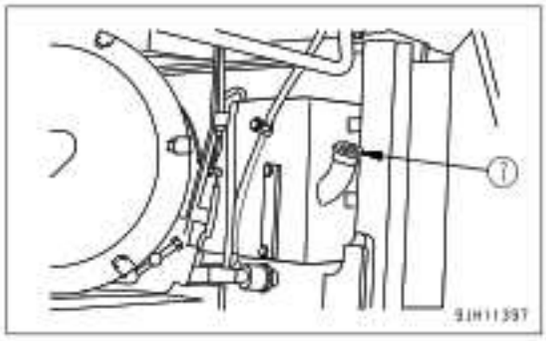


If a quick coupler is installed for draining the coolant or adding water, use quick coupler for draining or adding.
Quick coupler
Manufacturer: WIGGINS
Model: EC258AB

Mounting screw
Size: 1/2-14A NPT

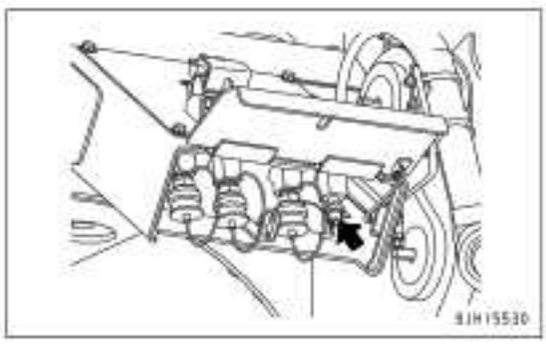

REMARK
Open radiator cap (3) before draining or adding coolant by using this coupler.

NOTICE
Even when draining or adding coolant by using this coupler, be sure to clean the inside of cooling system after draining and check the coolant amount after adding.

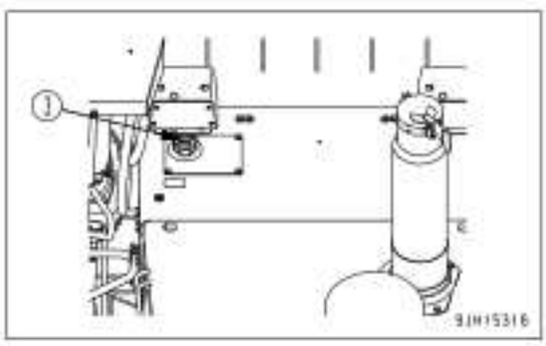

MidWestTech | Komatsu D375A-6 Bulldozer Operation & Maintenance Manual | Public...
Order the manual at mid-west-tech.com >