TEN00485-00

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC130-8

SERIAL NUMBERS 82503 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


WINDSHIELD ---- 3- 78
EMERGENCY ESCAPE HAMMER ---- 3- 84
DOOR LOCK ---- 3- 84
CAP WITH LOCK ---- 3- 85
DRINK BOX ---- 3- 86
MAGAZINE BOX ---- 3- 86
ASHTRAY ---- 3- 86
AIR CONDITIONER CONTROLS ---- 3- 87
RADIO ---- 3-100
AUXILIARY ELECTRIC POWER ---- 3-105
FUSE ---- 3-106
SLOW BLOW FUSE ---- 3-107
CONTROLLER ---- 3-107
TOOL BOX ---- 3-107
GREASE PUMP HOLDER ---- 3-107
FIRE EXTINGUISHER ---- 3-108
MACHINE OPERATIONS AND CONTROLS ---- 3-109
BEFORE STARTING ENGINE ---- 3-109
STARTING ENGINE ---- 3-128
AFTER STARTING ENGINE ---- 3-133
STOPPING THE ENGINE ---- 3-144
MACHINE OPERATION ---- 3-145
STEERING THE MACHINE ---- 3-149
SWINGING ---- 3-151
WORK EQUIPMENT CONTROLS AND OPERATIONS ---- 3-152
WORKING MODE ---- 3-154
PROHIBITED OPERATIONS ---- 3-156
GENERAL OPERATION INFORMATION ---- 3-159
TRAVELING ON SLOPES ---- 3-161
ESCAPE FROM MUD ---- 3-163
RECOMMENDED APPLICATIONS ---- 3-164
BUCKET REPLACEMENT AND INVERSION ---- 3-166
PARKING MACHINE ---- 3-169
MACHINE INSPECTION AFTER DAILY WORK ---- 3-170
LOCKING ---- 3-171
ROAD LINERS ---- 3-172
TRANSPORTATION ---- 3-174
TRANSPORTATION PROCEDURE ---- 3-174
LOADING AND UNLOADING WITH TRAILER ---- 3-175
LIFTING MACHINE ---- 3-184
COLD WEATHER OPERATION ---- 3-187
COLD WEATHER OPERATION INFORMATION ---- 3-187
AFTER DAILY WORK COMPLETION ---- 3-189
AFTER COLD WEATHER SEASON ---- 3-189
LONG TERM STORAGE ---- 3-190
BEFORE STORAGE ---- 3-190
DURING STORAGE ---- 3-190
AFTER STORAGE ---- 3-191
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-191
TROUBLES AND ACTIONS ---- 3-192

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

RUNNING OUT OF FUEL ---- 3-192
PHENOMENA THAT ARE NOT FAILURES ---- 3-192
TOWING THE MACHINE ---- 3-193
LIGHTWEIGHT TOWING HOLE ---- 3-194
SEVERE JOB CONDITION ---- 3-194
DISCHARGED BATTERY ---- 3-195
OTHER TROUBLE ---- 3-199
MAINTENANCE ---- 4- 1
MAINTENANCE INFORMATION ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
ELECTRIC SYSTEM MAINTENANCE ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 9
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 10
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 11
TIGHTENING TORQUE SPECIFICATIONS ---- 4- 12
TIGHTENING TORQUE LIST ---- 4- 12
SAFETY CRITICAL PARTS ---- 4- 13
SAFETY CRITICAL PARTS LIST ---- 4- 14
MAINTENANCE SCHEDULE ---- 4- 15
MAINTENANCE SCHEDULE CHART ---- 4- 15
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER ---- 4- 17
MAINTENANCE PROCEDURE ---- 4- 18
WHEN REQUIRED ---- 4- 18
CHECK BEFORE STARTING ---- 4- 46
EVERY 100 HOURS MAINTENANCE ---- 4- 47
EVERY 250 HOURS MAINTENANCE ---- 4- 49
EVERY 500 HOURS MAINTENANCE ---- 4- 54
EVERY 1000 HOURS MAINTENANCE ---- 4- 65
EVERY 2000 HOURS MAINTENANCE ---- 4- 71
EVERY 4000 HOURS MAINTENANCE ---- 4- 75
EVERY 5000 HOURS MAINTENANCE ---- 4- 77
EVERY 8000 HOURS MAINTENANCE ---- 4- 78
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS AND OPTIONS ---- 6- 1
ATTACHMENTS AND OPTIONS - GENERAL INFORMATION ---- 6- 2
SAFETY FIRST ---- 6- 2
ATTACHMENT INSTALLATION ---- 6- 3
BUCKET WITH HOOK ---- 6- 4
HOOK CONDITION ---- 6- 4
PROHIBITED OPERATIONS ---- 6- 4
MACHINE READY FOR ATTACHMENT ---- 6- 5
LOCATIONS ---- 6- 5
HYDRAULIC CIRCUIT ---- 6- 9
ATTACHMENT REMOVAL AND INSTALLATION ---- 6- 10
ATTACHMENT OPERATIONS ---- 6- 14

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

CONTROL LEVERS AND PEDALS

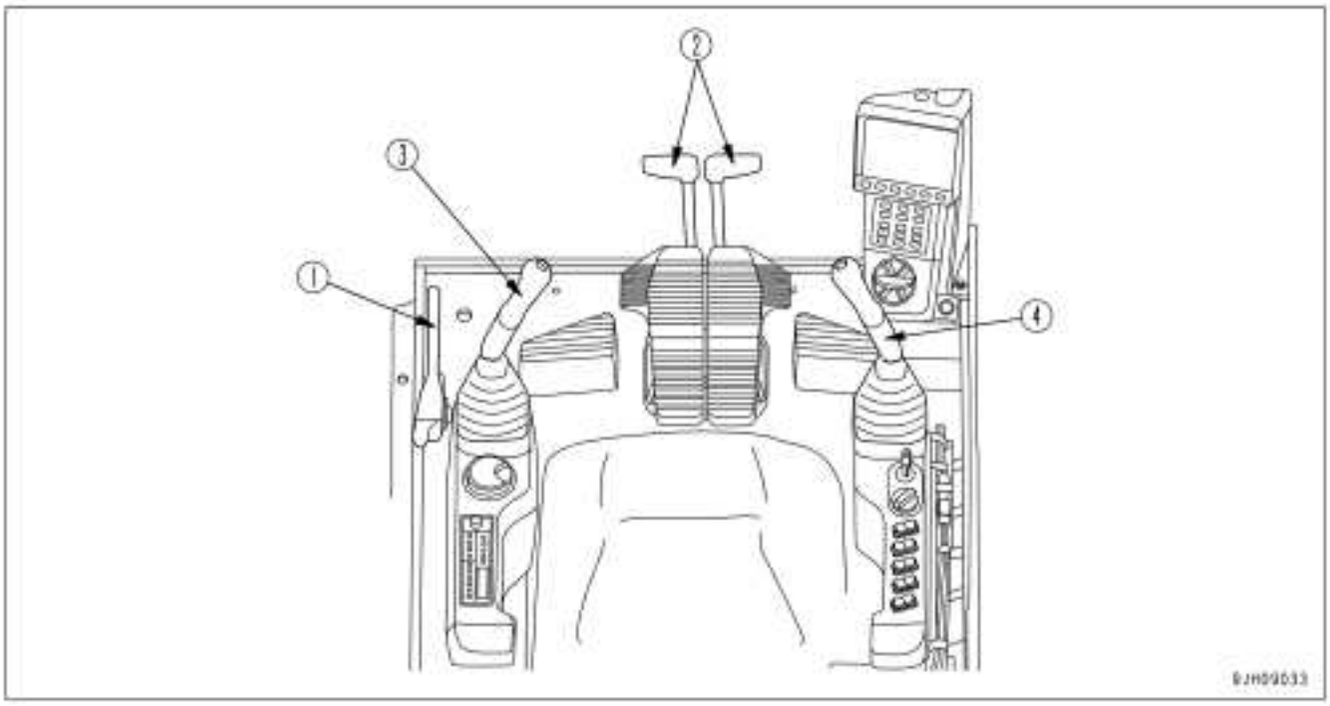

(1) Lock lever
(2) Travel levers
(with pedal and auto-deceleration system)
(3) Left work equipment control lever
(with auto-deceleration system)
(4) Right work equipment control lever
(with auto-deceleration system)

Lock Lever

WARNING

- **When leaving the operator's compartment, set the lock lever securely to the LOCK position. If the lock lever is not at the LOCK position and the control levers or control pedals are touched by mistake, it may lead to serious personal injury.**
- **Check that the condition of the lever is as shown in the diagram.**
- **When pulling the lock lever up, be careful not to touch the work equipment control lever.**
  When pushing the lock lever down, be careful not to touch the work equipment control lever.

This lever (1) is a device to lock the work equipment, swing, travel, and attachment (if equipped) control levers.

(L) LOCK position: Even when levers or attachment control pedal (if equipped) are operated, machine does not move
(F) FREE position: Machine moves according to operation of levers or attachment control panel (if equipped)



REMARK
This lock lever is of hydraulic lock type. Accordingly, when it is in the lock position (L), the control levers or control pedals move but the machine does not move.

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

EVERY 1000 HOURS MAINTENANCE

CHANGE OIL IN SWING MACHINERY CASE ---- 4- 65
CHANGE OIL IN FINAL DRIVE CASE ---- 4- 66
REPLACE HYDRAULIC OIL FILTER ELEMENT ---- 4- 67
REPLACE FUEL MAIN FILTER CARTRIDGE ---- 4- 68
CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS ---- 4- 70
CHECK PTO GEAR CASE, ADD OIL ---- 4- 70

EVERY 2000 HOURS MAINTENANCE

CLEAN HYDRAULIC TANK STRAINER ---- 4- 71
CHECK ALTERNATOR, STARTING MOTOR ---- 4- 71
CHECK ENGINE VALVE CLEARANCE, ADJUST ---- 4- 71
CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT) ---- 4- 72

EVERY 4000 HOURS MAINTENANCE

CHECK WATER PUMP ---- 4- 75
REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT) ---- 4- 75
CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER ---- 4- 76
CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER ---- 4- 76

EVERY 5000 HOURS MAINTENANCE


CHANGE OIL IN HYDRAULIC TANK ---- 4- 77

EVERY 8000 HOURS MAINTENANCE

REPLACE HIGH-PRESSURE PIPING CLAMP ---- 4- 78
REPLACE FUEL SPRAY PREVENTION CAP ---- 4- 78

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

	Working ranges	Unit	PC130-8
A	Max. digging reach	mm (ft in)	8,290 (27' 3")
B	Max. digging depth	mm (ft in)	5,520 (18' 1")
C	Max. digging height	mm (ft in)	8,650 (28' 5")
D	Max. vertical wall digging depth	mm (ft in)	4,950 (16' 3")
E	Max. dumping height	mm (ft in)	6,210 (20' 4")
F	Min. dumping height	mm (ft in)	-
G	Max. reach ground level	mm (ft in)	8,170 (26' 10")

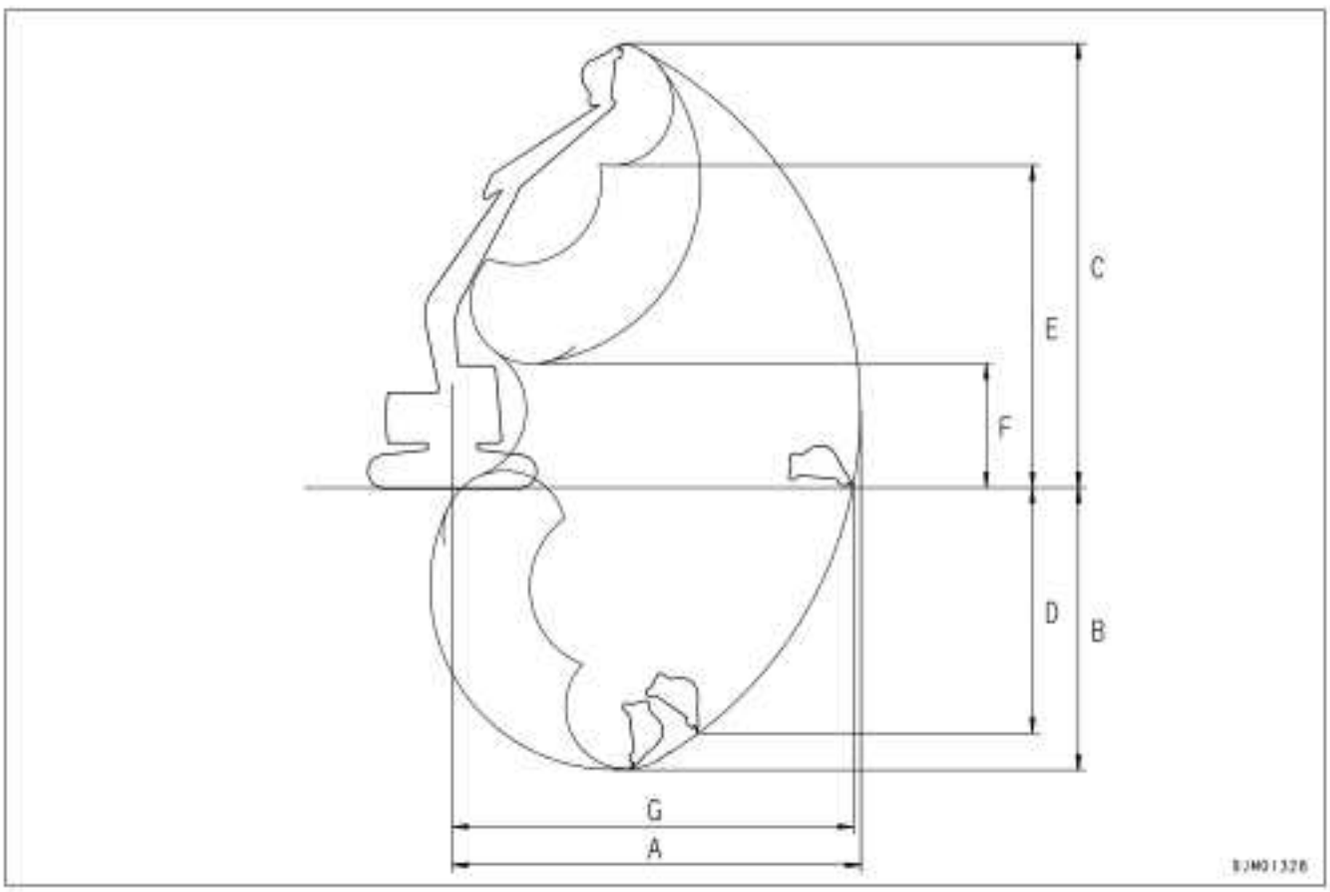

MidWestTech | Komatsu PC130-8 Hydraulic Excavator Operation & Maintenance Manu... Order the manual at mid-west-tech.com >