TEN00511-07

Operation & Maintenance Manual

WHEEL LOADER **WA1200-6**

SERIAL NUMBERS 60001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >


FRAME LOCK BAR ---- 3- 89
TOWING PIN ---- 3- 90
FUEL STOP KNOB ---- 3- 90
BACKUP ALARM ---- 3- 90
CAB DOOR OPEN LOCK ---- 3- 90
TOOL BOX ---- 3- 91
FUSE ---- 3- 91
CIRCUIT BREAKER ---- 3- 94
LUNCH BOX TRAY ---- 3- 95
POWER OUTLET ---- 3- 95
GREASE PUMP ---- 3- 96
LOCATION OF FIRE EXTINGUISHER ---- 3- 96
CAR RADIO ---- 3- 97
AIR CONDITIONER ---- 3-101
PRECAUTIONS WHEN HANDLING ACCUMULATOR ---- 3-106
EMERGENCY ENGINE STOP SWITCH ---- 3-107
HANDLING MACHINES EQUIPPED WITH KOMTRAX Plus ---- 3-109
OPERATION ---- 3-111
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3-111
STARTING ENGINE ---- 3-134
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-136
STOPPING ENGINE ---- 3-138
CHECK AFTER STOPPING ENGINE ---- 3-138
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3-139
TURNING ---- 3-146
OPERATION OF WORK EQUIPMENT ---- 3-148
SEMI AUTO DIGGING OPERATIONS ---- 3-150
REMOTE POSITIONER ---- 3-151
ADJUSTING WORK EQUIPMENT POSTURE ---- 3-153
WORK POSSIBLE USING WHEEL LOADER ---- 3-154
PRECAUTIONS FOR OPERATION ---- 3-174
PARKING MACHINE ---- 3-177
CHECKS AFTER COMPLETION OF OPERATION ---- 3-179
LOCKING ---- 3-179
HANDLING THE TIRES ---- 3-180
OPERATION OF MULTI MONITOR ---- 3-182
OPERATING AUTO-GREASING SYSTEM ---- 3-206
TRANSPORTATION ---- 3-212
TRANSPORTATION PROCEDURE ---- 3-212
LOADING, UNLOADING WORK ---- 3-212
COLD WEATHER OPERATION ---- 3-213
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-213
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-214
AFTER COLD WEATHER ---- 3-214
WARMING-UP OPERATION FOR STEERING HYDRAULIC CIRCUIT IN COLD WEATHER ---- 3-215
LONG-TERM STORAGE ---- 3-216
BEFORE STORAGE ---- 3-216
DURING STORAGE ---- 3-216
AFTER STORAGE ---- 3-216
HANDLING BATTERY DISCONNECT SWITCH ---- 3-217

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

EXPLANATION OF COMPONENTS ---- 3-217
PRECAUTIONS WHEN OPERATING ---- 3-218
TROUBLESHOOTING ---- 3-219
WHEN MACHINE RUNS OUT OF FUEL ---- 3-219
METHOD OF TOWING MACHINE ---- 3-220
IF BATTERY IS DISCHARGED ---- 3-224
METHOD FOR LOWERING WORK EQUIPMENT WHEN ENGINE HAS STOPPED ---- 3-229
OTHER TROUBLE ---- 3-230
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8
WEAR PARTS ---- 4- 9
WEAR PARTS LIST ---- 4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 11
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 12
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 13
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 14
TORQUE LIST ---- 4- 14
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 16
SAFETY CRITICAL PARTS ---- 4- 17
MAINTENANCE SCHEDULE CHART ---- 4- 18
MAINTENANCE SCHEDULE CHART ---- 4- 18
SERVICE PROCEDURE ---- 4- 20
INITIAL 250 HOURS SERVICE ---- 4- 20
WHEN REQUIRED ---- 4- 21
CHECK BEFORE STARTING ---- 4- 52
EVERY 50 HOURS SERVICE ---- 4- 53
EVERY 100 HOURS SERVICE ---- 4- 54
EVERY 250 HOURS SERVICE ---- 4- 56
EVERY 500 HOURS SERVICE ---- 4- 70
EVERY 1000 HOURS SERVICE ---- 4- 75
EVERY 2000 HOURS SERVICE ---- 4- 81
EVERY 10000 HOURS SERVICE ---- 4- 96
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
SELECTING BUCKET AND TIRES ---- 6- 2
STARTING IN COLD AREAS ---- 6- 3
ELECTRIC HEATER ---- 6- 3
SERVICE CENTER ---- 6- 8
INDEX ---- 7- 1

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

RIGHT SWITCH PANEL

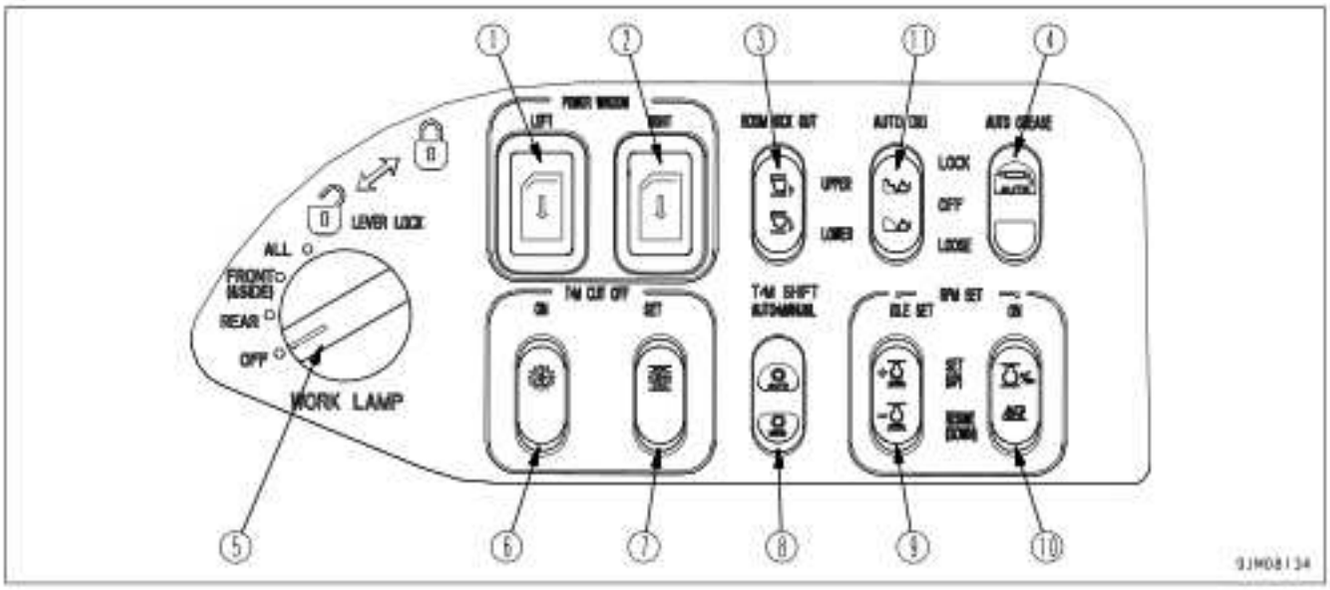

(1) Power window operating switch (left window)
(2) Power window operating switch (right window)
(3) Remote positioner up/down setting switch
(4) Auto-greasing switch
(5) Working lamp switch
(6) Transmission cut-off switch
(7) Transmission cut-off setting switch
(8) Transmission shift auto/manual selector switch
(9) Engine idle rpm setting up/down selector switch
(10) Engine idle rpm setting ON/OFF switch
(11) Semi auto-digging selector switch

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

LUNCH BOX TRAY

There is a space at the rear right of the cab for keeping a lunch box. The dimensions are L 47 cm (18.5 in) x W 24.3 cm (9.6 in) x H 10 cm (3.9 in), which is big enough even to hold a large lunch box. Use the band to hold the lunch box in position.




POWER OUTLET


NOTICE

- **There are 2 power sources: 12 V and 24 V**
  Check the voltage of the electrical equipment and select the appropriate power source.
  Mistaken use, such as using 24 V as the power source for 12 V equipment, will cause failure of the equipment.
- **When using the electric power source, do not install any equipment which will exceed the maximum amperage.**

When cigarette lighter (1) is removed, the lighter socket can be used as a 24V power source.
Maximum amperage: 9A (216W)

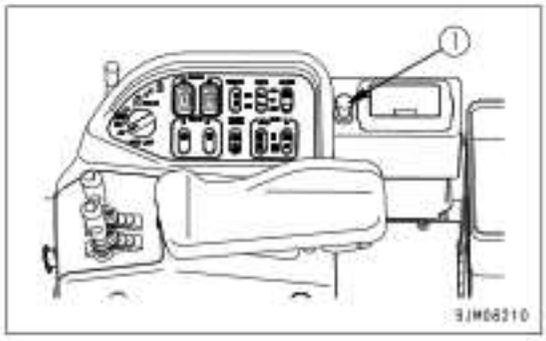

Electric power source (2) can be used as a 12V power source.
Maximum amperage: 10 A (120 W)

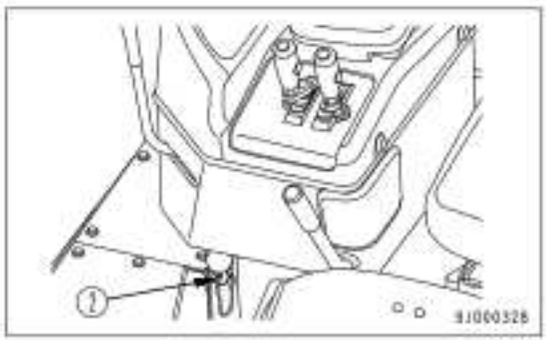

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


LUBRICATING

If the joystick steering lever is heavy or stiff when adjusted to the front or rear, lubricate the U-joints.

1. By using a grease pump, pump in grease through the grease fittings shown by arrows.
2. After greasing, wipe off any old grease that was pushed out.


(1) Joystick steering lever U-joint

Remove the top of U-joint cover (1) and push it down as shown in the figure at right and add grease through grease fitting (2).

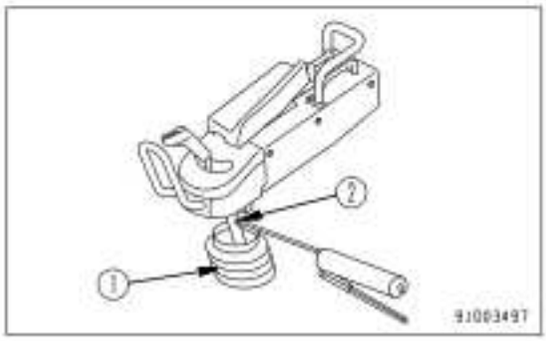


(2)Joystick steering lever fore-and-aft slide rail

Remove grommet (3) and pump in grease through the grease fitting on the inside of cover (4).

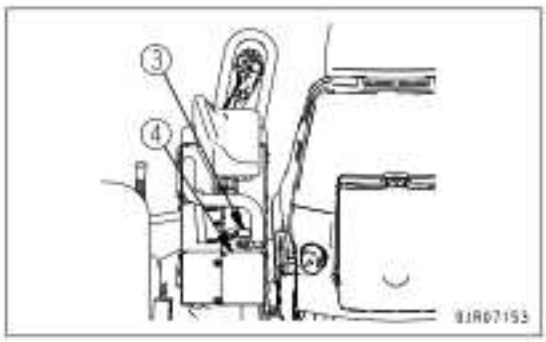

Bottom (under floor)

Add grease through grease fitting (5) installed to the top of the window washer tank.

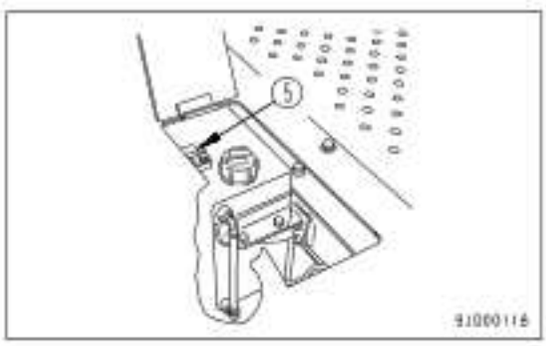

MidWestTech | Komatsu WA1200-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >