TEN00695-00

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC490LC-11

SERIAL NUMBERS 85084 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance Manua... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

FOREWORD 1-1
BEFORE READING THIS MANUAL 1-2
SAFETY INFORMATION 1-3
INTRODUCTION 1-4
MAIN USE OF MACHINE 1-4
DIRECTIONS OF MACHINE 1-4
VISIBILITY FROM OPERATOR'S SEAT 1-5
ENGINE TECHNOLOGY TO CONFORM EXHAUST GAS EMISSION 1-6
PRODUCT INFORMATION 1-7
LOCATION OF PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE 1-7
LOCATION OF ENGINE NUMBER PLATE 1-7
SERVICE METER LOCATION 1-8
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1-8
SAFETY 2-1
SAFETY 2-2
SAFETY LABELS 2-4
LOCATION OF SAFETY LABELS 2-5
CONTENTS OF SAFETY LABELS 2-7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE 2-16
PRECAUTIONS BEFORE STARTING OPERATION 2-16
PREPARATIONS FOR SAFE OPERATION 2-16
PRECAUTIONS TO PREVENT FIRE 2-18
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE 2-20
DO NOT GET CAUGHT IN WORK EQUIPMENT 2-21
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES 2-22
PROTECTION AGAINST FALLING, FLYING OR INTRUDING OBJECTS 2-22
UNAUTHORIZED MODIFICATION 2-23
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS 2-23
PRECAUTIONS RELATED TO CAB GLASS 2-23
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING 2-23
PRECAUTIONS FOR OPERATION 2-24
PRECAUTIONS FOR JOBSITE 2-24
START ENGINE 2-27
PRECAUTIONS FOR OPERATION 2-29
PRECAUTIONS FOR TRANSPORTATION 2-36
TOWING AND BEING TOWED 2-37
LIFTING OPERATION BY USING BUCKET WITH HOOK 2-38
PRECAUTIONS FOR MAINTENANCE 2-39
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE 2-39
PRECAUTIONS FOR CHECK AND MAINTENANCE 2-43
PRECAUTIONS FOR DEF 2-49
GENERAL CHARACTER AND PRECAUTIONS FOR HANDLING 2-49
PRECAUTIONS FOR ADDING 2-49
PRECAUTIONS FOR STORING 2-49
PRECAUTIONS FOR FIRE HAZARD AND LEAKAGE 2-49
OTHER PRECAUTIONS 2-49
OPERATION 3-1
GENERAL VIEW 3-2
MACHINE EQUIPMENT NAME 3-2
CAB EQUIPMENT NAMES 3-4
CONTROLS AND GAUGES NAMES 3-5
EXPLANATION OF COMPONENTS 3-9
EXPLANATION OF MACHINE MONITOR EQUIPMENT 3-9
SWITCHES 3-96
CONTROL LEVERS AND PEDALS 3-105
OTHER EQUIPMENT 3-109

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >


MACHINE OPERATIONS AND CONTROLS 3-150
CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE 3-150
METHOD FOR STARTING ENGINE 3-183
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE 3-187
METHOD FOR STOPPING ENGINE 3-198
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE 3-200
METHOD FOR STEERING MACHINE 3-203
METHOD FOR SWINGING MACHINE 3-205
METHOD FOR OPERATING WORK EQUIPMENT 3-206
HANDLE WORKING MODE 3-208
PROHIBITED OPERATIONS 3-210
PRECAUTIONS FOR OPERATION 3-214
PRECAUTIONS FOR WORKING ON SLOPE 3-216
METHOD FOR ESCAPING FROM MUD 3-217
RECOMMENDED APPLICATIONS 3-218
EFFECTIVE USE OF HYDRAULIC EXCAVATOR 3-219
METHOD FOR REPLACING AND INVERTING BUCKET 3-220
METHOD FOR PARKING MACHINE 3-223
METHOD FOR CHECKING AFTER FINISHING WORK 3-224
LOCK 3-225
HANDLE AIR CONDITIONER 3-230
EXPLANATION OF AIR CONDITIONER EQUIPMENT 3-231
METHOD FOR OPERATING AIR CONDITIONER 3-236
HANDLING RADIO 3-244
EXPLANATION OF RADIO EQUIPMENT 3-244
METHOD FOR CONTROLLING RADIO 3-247
STOW ANTENNA 3-249
TRANSPORTATION 3-250
PRECAUTIONS FOR TRANSPORTING MACHINE 3-250
SELECT TRANSPORTATION METHOD 3-250
LOADING AND UNLOADING WITH TRAILER 3-251
METHOD FOR LIFTING MACHINE 3-262
SPREAD AND NARROW TRACK FRAME GAUGE 3-264
COLD WEATHER OPERATION 3-266
COLD WEATHER OPERATION INFORMATION 3-266
PRECAUTIONS AFTER DAILY WORK COMPLETION 3-268
AFTER COLD WEATHER SEASON 3-268
PRECAUTIONS FOR LONG-TERM STORAGE 3-269
PREPARATION FOR LONG-TERM STORAGE 3-269
MAINTENANCE DURING LONG-TERM STORAGE 3-269
STARTING MACHINE AFTER LONG-TERM STORAGE 3-270
TROUBLES AND ACTIONS 3-271
ACTIONS WHEN RUNNING OUT OF FUEL 3-271
PHENOMENA THAT ARE NOT FAILURES 3-272
PRECAUTIONS FOR TOWING MACHINE 3-273
PRECAUTIONS FOR SEVERE JOB CONDITION 3-274
PRECAUTIONS FOR DISCHARGED BATTERY 3-275
OTHER TROUBLE 3-280
MAINTENANCE 4-1
PRECAUTIONS FOR MAINTENANCE 4-2
CHECK SERVICE METER READING 4-2
KOMATSU GENUINE REPLACEMENT PARTS 4-2
KOMATSU GENUINE LUBRICANTS 4-2
ALWAYS USE CLEAN WASHER FLUID 4-2
FRESH AND CLEAN LUBRICANTS 4-2
CHECK DRAINED OIL AND USED FILTER 4-2
PRECAUTIONS FOR REFILLING OIL OR FUEL 4-2

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

PRECAUTIONS FOR ADDING DEF 4-2
PRECAUTIONS FOR WELDING 4-2
DO NOT DROP THINGS INSIDE MACHINE 4-2
PRECAUTIONS FOR KDPF 4-2
PRECAUTIONS FOR SCR ASSEMBLY 4-3
DUSTY JOBSITES 4-3
AVOID MIXING OIL 4-3
LOCK INSPECTION COVERS 4-3
BLEED AIR FROM HYDRAULIC CIRCUIT 4-3
PRECAUTIONS WHEN INSTALLING HYDRAULIC HOSES 4-3
CHECKS AFTER INSPECTION AND MAINTENANCE 4-3
FUEL AND LUBRICANTS TO MATCH THE AMBIENT TEMPERATURE 4-3
CLOSE ENGINE HOOD SECURELY 4-4
OUTLINE OF MAINTENANCE 4-5
HANDLE OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC 4-5
HANDLE ELECTRICAL COMPONENTS 4-10
STANDARD TIGHTENING TORQUE FOR BOLTS AND NUTS 4-11
MAINTENANCE SCHEDULE 4-13
MAINTENANCE SCHEDULE TABLE 4-13
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER 4-15
MAINTENANCE PROCEDURE 4-16
WHEN REQUIRED 4-16
CHECKS BEFORE STARTING 4-47
EVERY 50 HOURS MAINTENANCE 4-48
EVERY 250 HOURS MAINTENANCE 4-49
EVERY 500 HOURS MAINTENANCE 4-54
EVERY 1000 HOURS MAINTENANCE 4-65
EVERY 2000 HOURS MAINTENANCE 4-73
EVERY 4000 HOURS MAINTENANCE 4-85
EVERY 4500 HOURS MAINTENANCE 4-88
EVERY 5000 HOURS MAINTENANCE 4-89
EVERY 8000 HOURS MAINTENANCE 4-91
EVERY 9000 HOURS MAINTENANCE 4-92
SPECIFICATIONS 5-1
SPECIFICATIONS 5-2
SPECIFICATIONS: PC490LC-11 5-2
ATTACHMENTS AND OPTIONS 6-1
PRECAUTIONS FOR USING ATTACHMENT AND OPTIONS 6-2
PRECAUTIONS WHEN SELECTING 6-2
READ THE OPERATION AND MAINTENANCE MANUAL THOROUGHLY 6-2
PRECAUTIONS WHEN REMOVING AND INSTALLING 6-2
PRECAUTIONS FOR USING 6-2
HANDLE BUCKET WITH HOOK 6-4
PRECAUTIONS FOR OPERATION 6-4
HANDLE MACHINE READY FOR INSTALLATION OF ATTACHMENT 6-5
EXPLANATION OF COMPONENTS ON MACHINE EQUIPPED WITH ATTACHMENT 6-5
METHOD FOR CHANGE-OVER AND CONNECT HYDRAULIC CIRCUIT FOR MACHINE READY FOR INSTALLATION OF ATTACHMENT 6-9
METHOD FOR REMOVING AND INSTALLING ATTACHMENT 6-11
METHOD FOR OPERATING ATTACHMENT 6-15
LONG-TERM STORAGE 6-19
MAINTENANCE OF ADDITIONAL FILTER FOR BREAKER 6-19
SPECIFICATIONS 6-22
METHOD FOR CHANGING CONTROL PATTERNS 6-23
CONTROL PATTERNS OTHER THAN STANDARD CONTROL METHOD 6-24
ATTACHMENTS AND OPTIONS 6-25
INSTALL ATTACHMENT 6-25
TRACK SHOES SELECTION 6-27

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

CONTROL LEVERS AND PEDALS

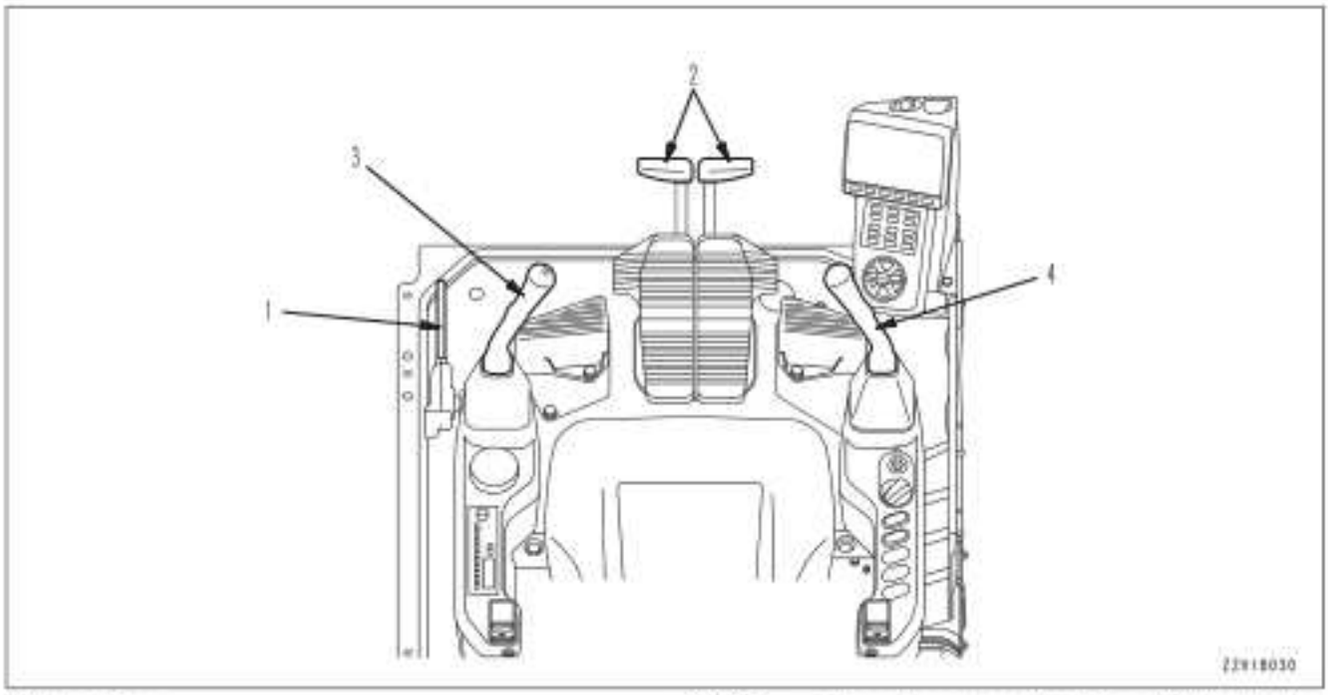

(1) Lock lever
(2) Travel levers (with pedal and auto-deceleration system)
(3) L.H. work equipment control lever (with auto-deceleration system)
(4) R.H. work equipment control lever (with auto-deceleration system)

LOCK LEVER

⚠ WARNING

- **When leaving the operator's seat, set the lock lever securely to LOCK position. If the lock lever is not at LOCK position and the control levers or control pedals are touched by mistake, it may lead to serious personal injury or death.**
- **Always check that the lock lever is in LOCK position.**
- **When pulling the lock lever up, or when pushing the lock lever down, be careful not to touch the work equipment control lever.**
- **Before setting the lock lever to FREE position, make sure that all control levers and pedals are set to NEUTRAL position. If any of them is out of NEUTRAL position, the work equipment or machine may move suddenly and cause a serious personal injury or death.**

The lock lever is a device to lock the work equipment, swing, travel, and attachment control levers (if equipped).

(L) LOCK position

Even when levers or attachment control pedal (if equipped) are operated, machine does not move

(F) FREE position


Machine moves according to operation of levers or attachment control pedal (if equipped).



MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

DEF FILTER

DEF filter is an filter element to clean DEF sucked from the DEF tank by DEF pump, and to supply it to DEF injector.

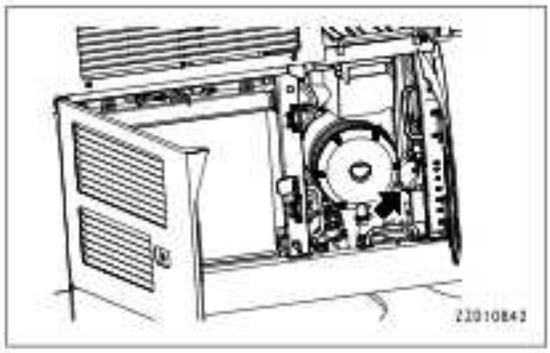

NOTICE


- **The DEF filter element needs to be replaced every 2000 hours. For details of the replacement procedure, see "METHOD FOR REPLACING DEF FILTER (4-82)".**
- **If the machine is operated without DEF filter attached, or with the filter other than Komatsu genuine parts, foreign materials may enter into DEF pump and DEF injector which will cause failure of the machine. Never operate the machine without DEF filter attached, nor use the filter other than Komatsu genuine parts.**
- **DEF filter cannot be flushed. Flushing or regenerating of it will degrade the performance of DEF filter, and will contaminate DEF pump and DEF injector which will cause the failure of the machine. Never reuse the DEF filter.**

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

SPECIFICATIONS

SPECIFICATIONS: PC490LC-11

	Item		Unit	PC490LC-11
	Operating weight		kg {lb}	47420 {404561}
	Bucket capacity		m^3 {cu/yd}	1.9 (2.5)
	Engine model		—	KOMATSU SAA6D125E-6 diesel engine
	Rated horse-power	SAE J1995 (gross)	kW {HP} / min^{-1} {rpm}	270 {362} / 1900 {1900}
		ISO 9249 /SAE J1349 (net)		268 {359} / 1900 {1900}
A	Overall length		mm {ft in}	11930 {39' 2"}
B	Overall height (work equipment)		mm {ft in}	3635 {11' 11"}
C	Overall width		mm {ft in}	3440 {11' 3"}
D	Shoe width		mm {ft in}	700 {2' 4"}
E	Cab height		mm {ft in}	3360 {11' 0"}
F	Tail swing radius		mm {ft in}	3645 {12' 0"}
G	Overall length of track		mm {ft in}	5385 {17' 8"}
H	Distance between tumbler centers		mm {ft in}	4350 {14' 3"}
I	Height of handrail		mm {ft in}	3450 {11' 4"}
	Min. ground clearance		mm {ft in}	570 {1' 10"}
	Travel speed (Lo/Mi/Hi)		km/h {MPH}	3.0 / 4.2 / 5.5 {1.9 / 2.6 / 3.4}
	Swing speed		min^{-1} {rpm}	9.1 {9.1}

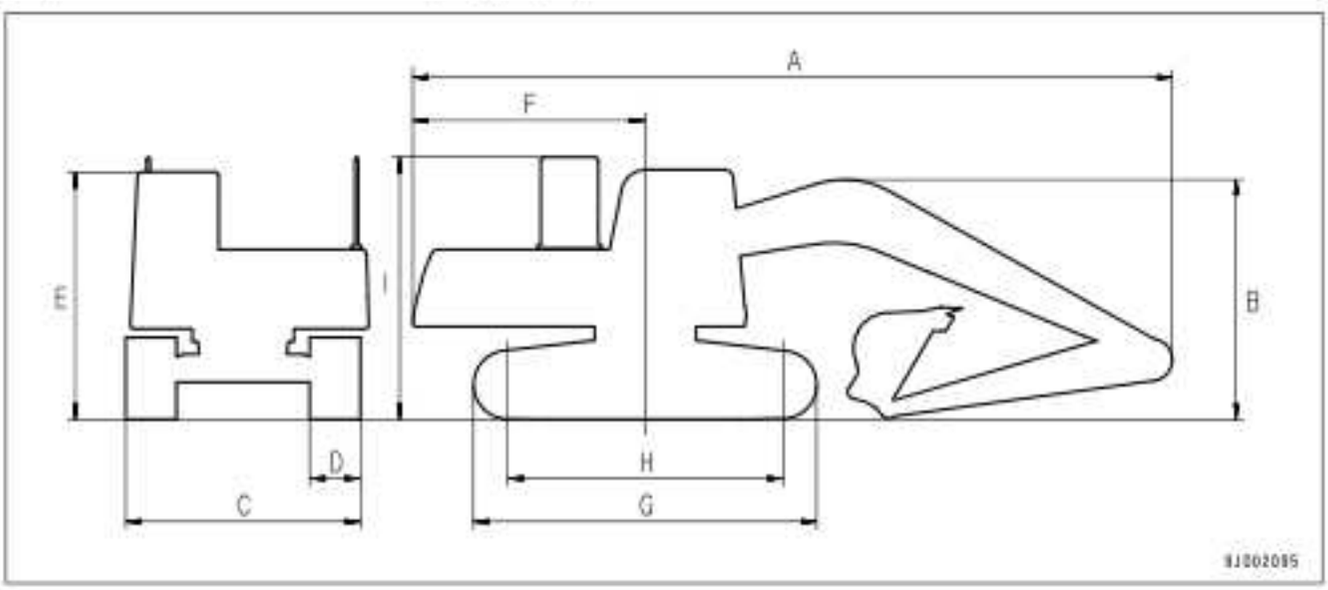

MidWestTech | Komatsu PC490LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >