TEN00699-01

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC210LC-11

SERIAL NUMBERS 500077 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance Manua... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

FOREWORD ... 1-1
READ THIS MANUAL ... 1-2
SAFETY INFORMATION ... 1-3
INTRODUCTION ... 1-4
MAIN USE OF MACHINE ... 1-4
DIRECTIONS OF MACHINE ... 1-4
VISIBILITY FROM OPERATOR'S SEAT ... 1-4
ENGINE TECHNOLOGY TO CONFORM EXHAUST GAS EMISSION ... 1-5
PRODUCT INFORMATION ... 1-6
LOCATION OF PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ... 1-6
LOCATION OF ENGINE NUMBER PLATE ... 1-6
SERVICE METER LOCATION ... 1-7
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR ... 1-7
SAFETY ... 2-1
SAFETY LABELS ... 2-2
LOCATION OF SAFETY LABELS ... 2-3
CONTENTS OF SAFETY LABELS ... 2-5
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE ... 2-13
PRECAUTIONS BEFORE STARTING OPERATION ... 2-13
PREPARATIONS FOR SAFE OPERATION ... 2-13
PRECAUTIONS TO PREVENT FIRE ... 2-15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE ... 2-17
DO NOT GET CAUGHT IN WORK EQUIPMENT ... 2-18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES ... 2-19
PROTECTION AGAINST FALLING, FLYING OR INTRUDING OBJECTS ... 2-19
UNAUTHORIZED MODIFICATION ... 2-19
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS ... 2-20
PRECAUTIONS RELATED TO CAB GLASS ... 2-20
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING ... 2-20
PRECAUTIONS FOR OPERATION ... 2-21
PRECAUTIONS FOR JOBSITE ... 2-21
START ENGINE ... 2-24
PRECAUTIONS FOR OPERATION ... 2-26
PRECAUTIONS FOR TRANSPORTATION ... 2-35
TOWING AND BEING TOWED ... 2-36
LIFTING OPERATION BY USING BUCKET WITH HOOK ... 2-36
PRECAUTIONS FOR MAINTENANCE ... 2-38
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE ... 2-38
PRECAUTIONS FOR CHECK AND MAINTENANCE ... 2-42
PRECAUTIONS FOR DEF ... 2-48
GENERAL CHARACTER AND PRECAUTIONS FOR HANDLING ... 2-48
PRECAUTIONS FOR ADDING ... 2-48
PRECAUTIONS FOR STORING ... 2-48
PRECAUTIONS FOR FIRE HAZARD AND LEAKAGE ... 2-48
OTHER PRECAUTIONS ... 2-48
OPERATION ... 3-1
GENERAL VIEW ... 3-2
MACHINE EQUIPMENT NAME ... 3-2
CAB EQUIPMENT NAMES ... 3-4
CONTROLS AND GAUGES NAMES ... 3-5
EXPLANATION OF COMPONENTS ... 3-9
EXPLANATION OF MACHINE MONITOR EQUIPMENT ... 3-9
SWITCHES ... 3-93
CONTROL LEVERS AND PEDALS ... 3-101
OTHER EQUIPMENT ... 3-105
MACHINE OPERATIONS AND CONTROLS ... 3-145

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >


CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE 3-145
METHOD FOR STARTING ENGINE 3-178
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE 3-181
METHOD FOR STOPPING ENGINE 3-194
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE 3-196
METHOD FOR STEERING MACHINE 3-199
METHOD FOR SWINGING MACHINE 3-201
METHOD FOR OPERATING WORK EQUIPMENT 3-202
HANDLE WORKING MODE 3-204
PROHIBITED OPERATIONS 3-206
PRECAUTIONS FOR OPERATION 3-211
PRECAUTIONS FOR WORKING ON SLOPE 3-213
METHOD FOR ESCAPING FROM MUD 3-215
RECOMMENDED APPLICATIONS 3-216
EFFECTIVE USE OF HYDRAULIC EXCAVATOR 3-217
METHOD FOR REPLACING AND INVERTING BUCKET 3-218
METHOD FOR PARKING MACHINE 3-221
METHOD FOR CHECKING AFTER FINISHING WORK 3-222
LOCK 3-223
HANDLE AIR CONDITIONER 3-233
EXPLANATION OF AIR CONDITIONER EQUIPMENT 3-234
METHOD FOR OPERATING AIR CONDITIONER 3-239
HANDLE RADIO 3-247
EXPLANATION OF RADIO EQUIPMENT 3-247
METHOD FOR CONTROLLING RADIO 3-250
STOW ANTENNA 3-252
TRANSPORTATION 3-253
PRECAUTIONS FOR TRANSPORTING MACHINE 3-253
SELECT TRANSPORTATION METHOD 3-253
LOADING AND UNLOADING WITH TRAILER 3-254
METHOD FOR LIFTING MACHINE 3-266
COLD WEATHER OPERATION 3-268
COLD WEATHER OPERATION INFORMATION 3-268
PRECAUTIONS AFTER DAILY WORK COMPLETION IN COLD WEATHER 3-270
AFTER COLD WEATHER SEASON 3-270
PRECAUTIONS FOR LONG-TERM STORAGE 3-271
PREPARATION FOR LONG-TERM STORAGE 3-271
MAINTENANCE DURING LONG-TERM STORAGE 3-271
STARTING MACHINE AFTER LONG-TERM STORAGE 3-272
TROUBLES AND ACTIONS 3-273
ACTIONS WHEN RUNNING OUT OF FUEL 3-273
PHENOMENA THAT ARE NOT FAILURES 3-273
PRECAUTIONS FOR TOWING MACHINE 3-274
PRECAUTIONS FOR SEVERE JOB CONDITION 3-275
PRECAUTIONS FOR DISCHARGED BATTERY 3-276
OTHER TROUBLE 3-281
MAINTENANCE 4-1
PRECAUTIONS FOR MAINTENANCE 4-2
CHECK SERVICE METER READING 4-2
KOMATSU GENUINE REPLACEMENT PARTS 4-2
KOMATSU GENUINE LUBRICANTS 4-2
ALWAYS USE CLEAN WASHER FLUID 4-2
FRESH AND CLEAN LUBRICANTS 4-2
CHECK DRAINED OIL AND USED FILTER 4-2
PRECAUTIONS FOR REFILLING OIL OR FUEL 4-2
PRECAUTIONS FOR ADDING DEF 4-2
PRECAUTIONS FOR WELDING 4-2

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

DO NOT DROP THINGS INSIDE MACHINE 4-2
PRECAUTIONS FOR KDPF 4-2
PRECAUTIONS FOR SCR ASSEMBLY 4-3
DUSTY JOBSITES 4-3
AVOID MIXING OIL 4-3
LOCK INSPECTION COVERS 4-3
BLEED AIR FROM HYDRAULIC CIRCUIT 4-3
PRECAUTIONS WHEN INSTALLING HYDRAULIC HOSES 4-3
CHECKS AFTER INSPECTION AND MAINTENANCE 4-3
FUEL AND LUBRICANTS TO MATCH THE AMBIENT TEMPERATURE 4-3
CLOSE ENGINE HOOD SECURELY 4-4
OUTLINE OF MAINTENANCE 4-5
HANDLE OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC 4-6
HANDLE ELECTRICAL COMPONENTS 4-10
STANDARD TIGHTENING TORQUE FOR BOLTS AND NUTS 4-11
MAINTENANCE SCHEDULE 4-13
MAINTENANCE SCHEDULE TABLE 4-13
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER 4-15
MAINTENANCE PROCEDURE 4-16
WHEN REQUIRED 4-16
CHECKS BEFORE STARTING 4-44
EVERY 100 HOURS MAINTENANCE 4-45
EVERY 250 HOURS MAINTENANCE 4-46
EVERY 500 HOURS MAINTENANCE 4-51
EVERY 1000 HOURS MAINTENANCE 4-63
EVERY 2000 HOURS MAINTENANCE 4-72
EVERY 4000 HOURS MAINTENANCE 4-84
EVERY 4500 HOURS MAINTENANCE 4-88
EVERY 5000 HOURS MAINTENANCE 4-89
EVERY 8000 HOURS MAINTENANCE 4-91
EVERY 9000 HOURS MAINTENANCE 4-92
SPECIFICATIONS 5-1
SPECIFICATIONS 5-2
SPECIFICATIONS: PC210LC-11 5-2
ATTACHMENTS AND OPTIONS 6-1
PRECAUTIONS FOR USING ATTACHMENT AND OPTIONS 6-2
PRECAUTIONS WHEN SELECTING 6-2
READ THE OPERATION AND MAINTENANCE MANUAL THOROUGHLY 6-2
PRECAUTIONS WHEN REMOVING AND INSTALLING 6-2
PRECAUTIONS FOR USING 6-2
HANDLE BUCKET WITH HOOK 6-4
PRECAUTIONS FOR OPERATION 6-4
HANDLE MACHINE READY FOR INSTALLATION OF ATTACHMENT 6-5
EXPLANATION OF COMPONENTS ON MACHINE EQUIPPED WITH ATTACHMENT 6-5
METHOD FOR CHANGE-OVER AND CONNECT HYDRAULIC CIRCUIT FOR MACHINE READY FOR INSTALLATION OF ATTACHMENT 6-9
METHOD FOR REMOVING AND INSTALLING ATTACHMENT 6-11
METHOD FOR OPERATING ATTACHMENT 6-16
LONG-TERM STORAGE 6-20
MAINTENANCE OF ADDITIONAL FILTER FOR BREAKER 6-20
SPECIFICATIONS 6-24
ATTACHMENTS AND OPTIONS 6-25
INSTALL ATTACHMENT 6-25
TRACK SHOES SELECTION 6-27
HANDLE RUBBER PAD SHOES AND ROAD LINERS 6-28
BUCKET TEETH SELECTION 6-30
HANDLE TRAPEZOIDAL BUCKET 6-31
HANDLE EXTENSION ARM 6-32

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

SWITCHES

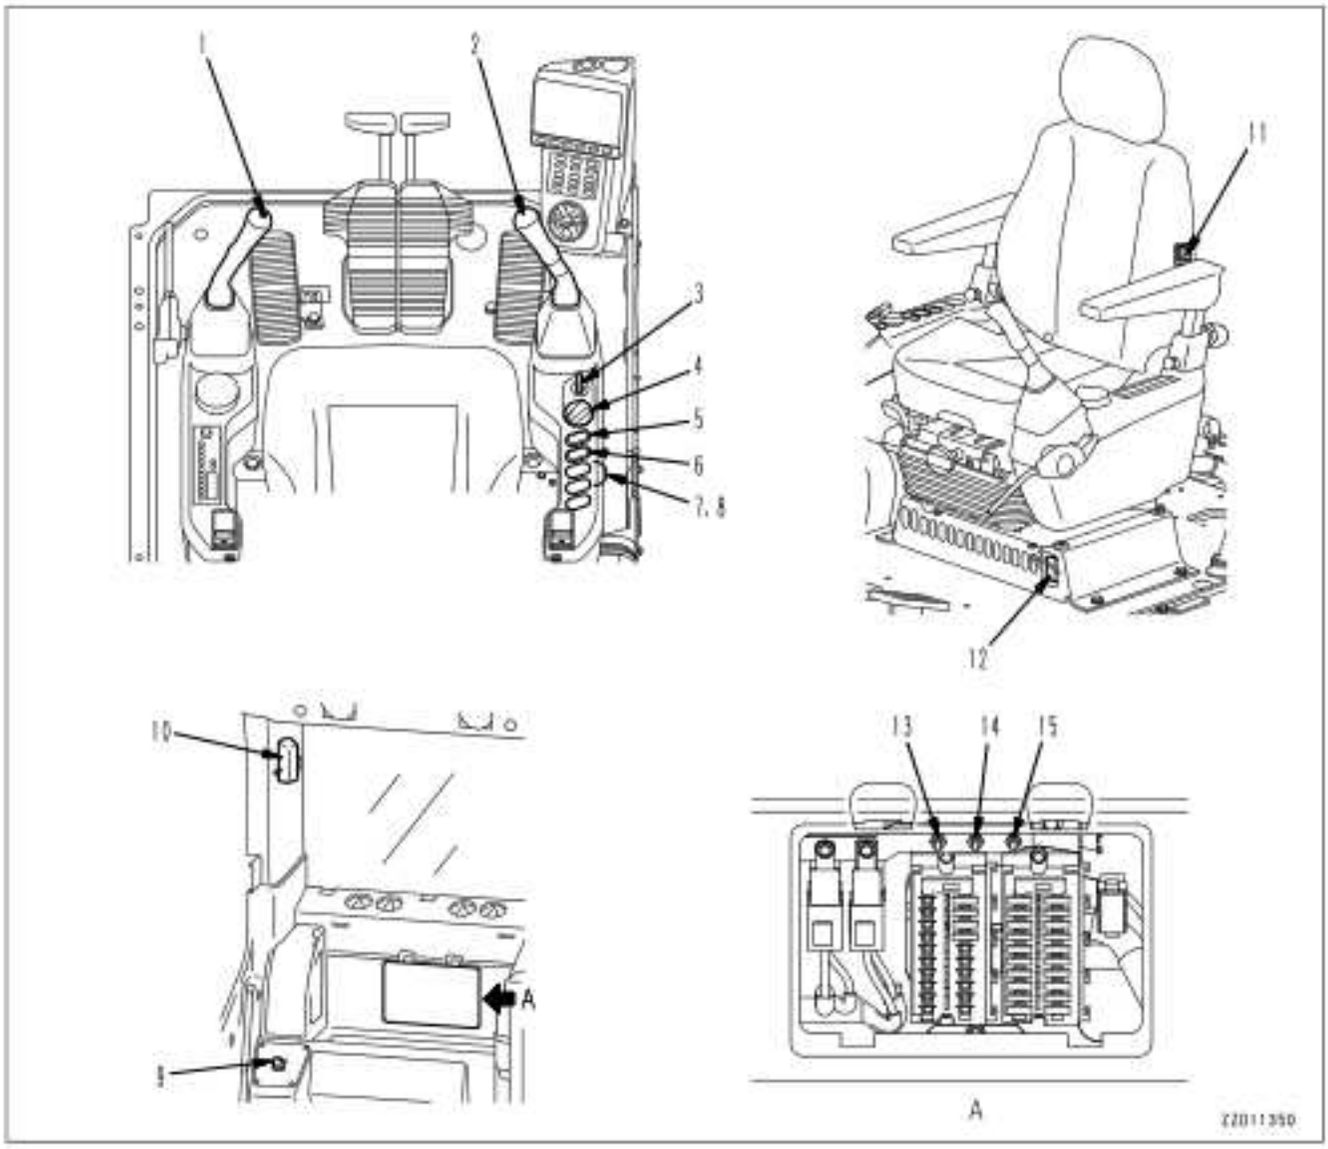


(1) One-touch power maximizing switch
(2) Horn switch
(3) Starting switch
(4) Fuel control dial
(5) Lamp switch
(6) Swing lock switch
(7) Revolving lamp switch (if equipped)
(8) Ceiling window wiper switch (if equipped)
(9) Cigarette lighter
(10) Room lamp switch
(11) Seat heater switch (if equipped)
(12) Engine shutdown secondary switch
(13) Pump secondary drive switch
(14) Swing parking brake cancel switch
(15) Lock lever automatic lock cancel switch

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

DEF FILTER

DEF filter is an filter element to clean DEF sucked from the DEF tank by DEF pump, and to supply it to DEF injector.

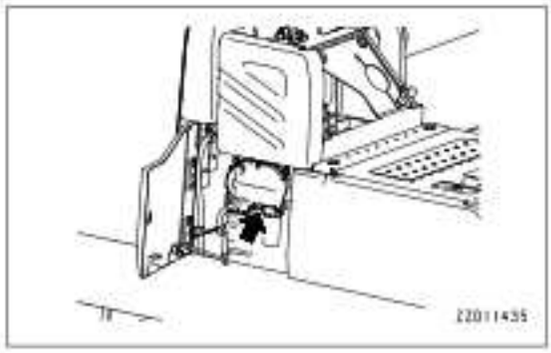

NOTICE


- **The DEF filter element needs to be replaced every 2000 hours.**
- **If the machine is operated without DEF filter attached, or with the filter other than Komatsu genuine parts, foreign materials may enter into DEF pump and DEF injector which will cause failure of the machine. Never operate the machine without DEF filter attached, nor use the filter other than Komatsu genuine parts.**
- **DEF filter cannot be flushed. Flushing or regenerating of it will degrade the performance of DEF filter, and will contaminate DEF pump and DEF injector which will cause the failure of the machine. Never reuse the DEF filter.**

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

SPECIFICATIONS

SPECIFICATIONS: PC210LC-11

	Item		Unit	PC210LC-11
	Operating weight		kg {lb}	21700 {47848.5}
	Bucket capacity		m^3 {cu/yd}	0.8 {1.1}
	Engine model		-	Komatsu SAA6D107E-3 diesel engine
	Rated horse-power	SAE J1995 (gross)	kW {HP} / min^{-1} {rpm}	123.2 {165} / 2000 {2000}
		ISO 9249/SAE J1349* (net)		123 {165} / 2000 {2000}
A	Overall length		mm {ft in}	9705 {31' 10"}
B	Overall height (work equipment)		mm {ft in}	2970 {9' 9"}
C	Overall width		mm {ft in}	3080 {10' 1"}
D	Shoe width		mm {ft in}	700 {2' 4"}
E	Cab height		mm {ft in}	3045 {10' 0"}
F	Tail swing radius		mm {ft in}	3020 {9' 11"}
G	Overall length of track		mm {ft in}	4450 {14' 7"}
H	Distance between tumbler centers		mm {ft in}	3655 {12' 0"}
I	Height of handrail		mm {ft in}	3135 {10' 3"}
	Min. ground clearance		mm {ft in}	440 {1' 5"}
	Travel speed (Lo/Mi/Hi)		km/h {MPH}	3.0/4.1/5.5 (1.9/2.5/3.4)
	Swing speed		min^{-1} {rpm}	12.4 {12.4}

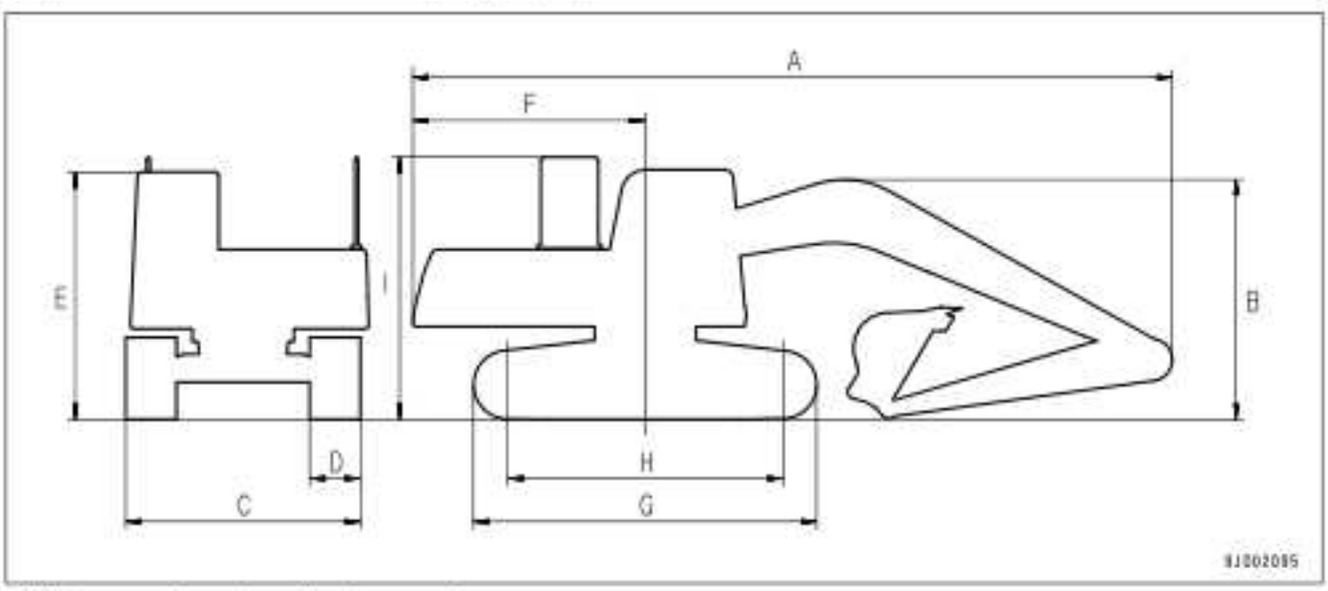

*: Minimum values of cooling fan speed

MidWestTech | Komatsu PC210LC-11 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >