PART NO. TO18N-E-00

HITACHI

Technical Manual
Operational Principle

EX
5500-6
Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TO18N-E
Technical Manual (Troubleshooting)	: Vol. No.TT18N-E
Workshop Manual	: Vol. No.W18N-E

MidWestTech | Hitachi EX5500-6 Excavator Operational Principle Technical Service Manual | Publication TO18N-E-00

Order the manual at mid-west-tech.com >

SECTION 1
GENERAL

CONTENTS

Group 1 Specifications

Specifications T1-1-1
Working Range T1-1-2

Group 2 Component Specifications


Engine T1-2-1
Engine Accessories T1-2-4
Hydraulic Component T1-2-6
Electrical Component T1-2-12
Filter T1-2-14
Others T1-2-15

Group 3 Component Layout

Main Component T1-3-1
Left Frame T1-3-2
Cab T1-3-3
Relay Panel T1-3-7
Control Box T1-3-8
Relay Box T1-3-10
Pilot Piping (L) T1-3-11
Pump Room (L) T1-3-16
Engine Room (L) T1-3-20
Folding Stairway T1-3-24
Center Frame T1-3-27
Pilot Piping T1-3-32
Control Valve T1-3-34
Hydraulic Oil Tank T1-3-38
Fuel Tank T1-3-40
Travel Alarm, Fast-Filling Device T1-3-42
Right Frame T1-3-44
Oil Cooler Room T1-3-45
Pilot Piping (R) T1-3-47
Auto-Lubrication Device T1-3-49
Pump Room (R) T1-3-50
Engine Room (R) T1-3-53
Engine Oil Reserve Tank (R) T1-3-56
Undercarriage T1-3-57


MidWestTech | Hitachi EX5500-6 Excavator Operational Principle Technical Service Ma... Order the manual at mid-west-tech.com >

CONTROL BOX

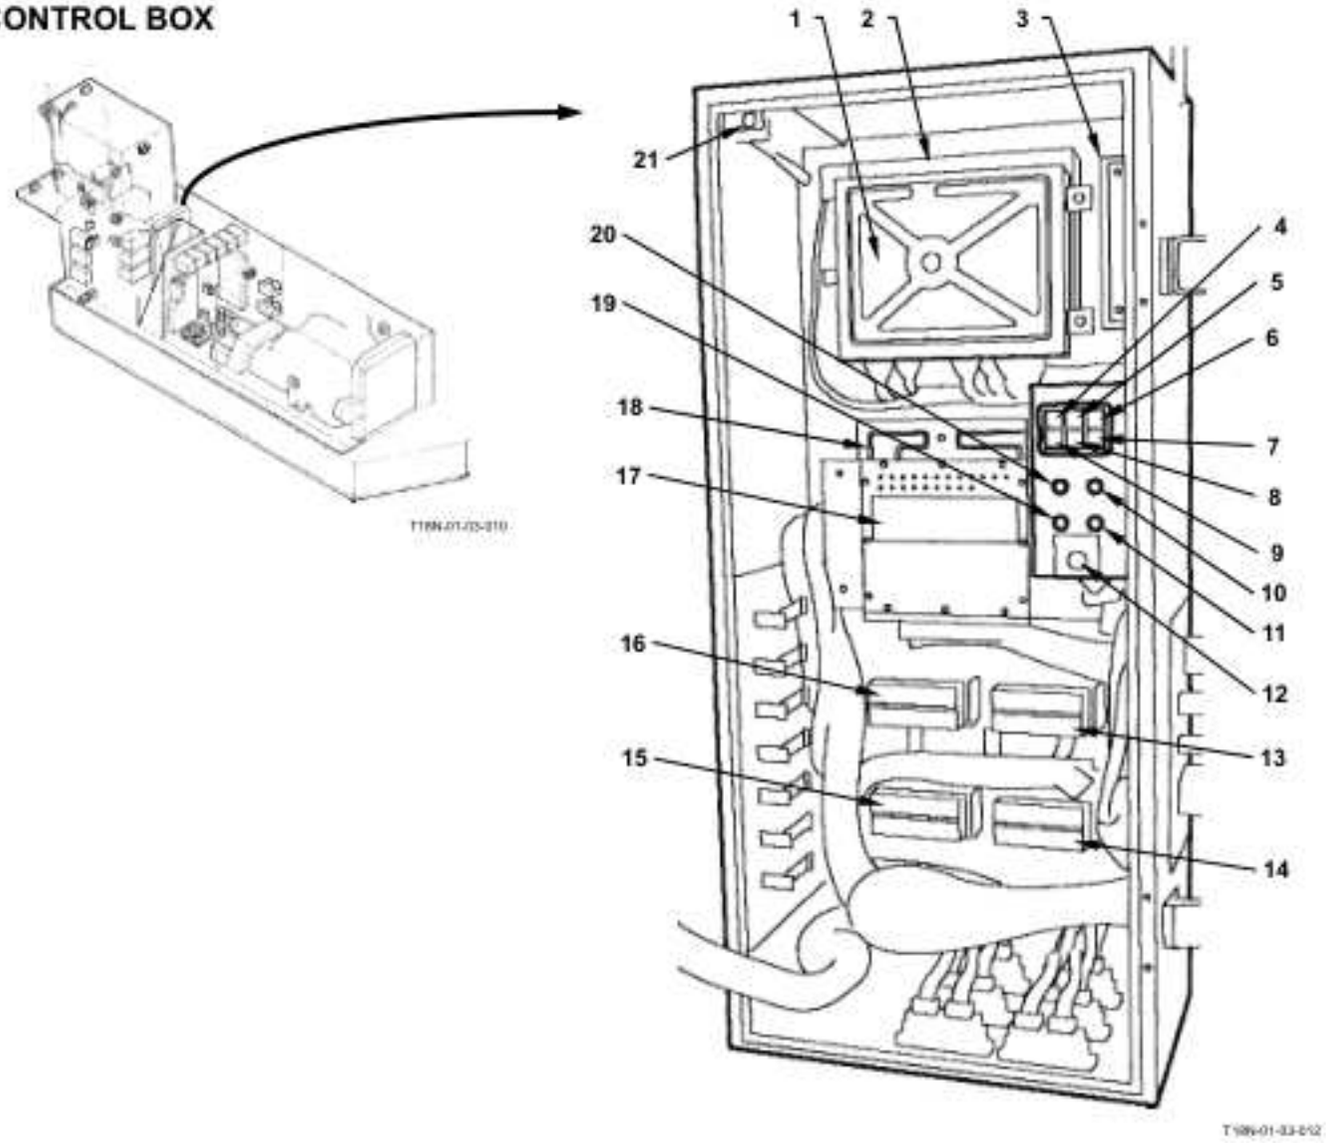

1 - MC (Main Controller)
2 - HMU (HYD. System Monitoring Unit)
3 - MMS (Modular Mining System) (Optional)
4 - Engine Maintenance Lamp (L)
5 - Engine Warning Lamp (L)
6 - Engine Stop Lamp (L)
7 - Engine Stop Lamp (R)
8 - Engine Warning Lamp (R)
9 - Engine Maintenance Lamp (R)
10 - Engine Troubleshooting Switch (R)
11 - Engine Failure Code Display Selection Switch (R)
12 - Auto-Lubrication Interval Switch
13 - Fuse Box 2 (#21 to 40)
14 - Fuse Box 4 (#61 to 80)
15 - Fuse Box 3 (#41 to 60)
16 - Fuse Box 1 (#1 to 20)
17 - CSU (Contami. Sensing Unit)
18 - EHU (Engine Heat-Balance Control Unit)
19 - Engine Failure Code Display Selection Switch (L)
20 - Engine Troubleshooting Switch (L)
21 - Limit Switch

MidWestTech | Hitachi EX5500-6 Excavator Operational Principle Technical Service Ma... Order the manual at mid-west-tech.com >

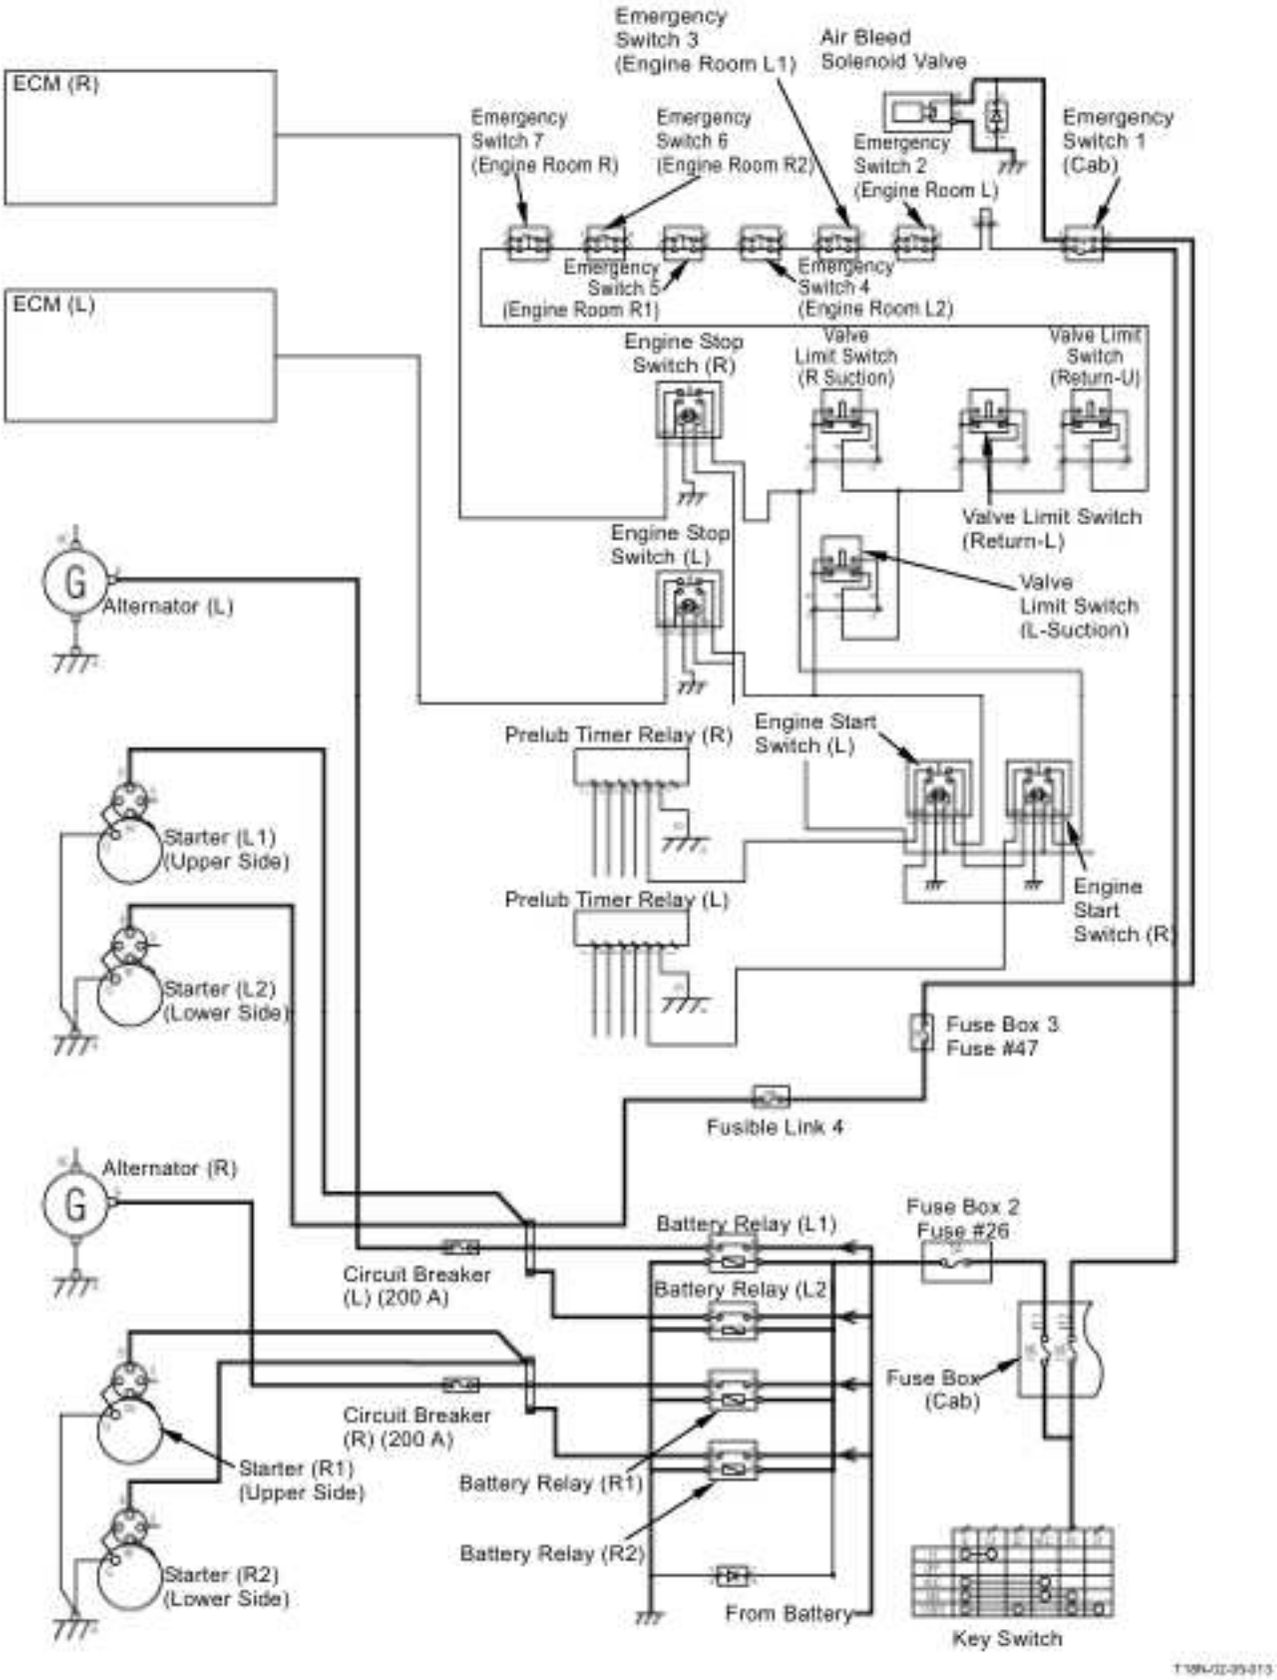

MidWestTech | Hitachi EX5500-6 Excavator Operational Principle Technical Service Ma... Order the manual at mid-west-tech.com >