PART NO. TOPSY-EN-00

HITACHI

Reliable solutions

Service manual

ZW

65-6 75-6 95-6
Wheel loader

VIN: Valid from W09P85201FBA08900...
Status: 23.02.2016

Order the manual at mid-west-tech.com >

Contents

1 Notes for the Reader 5
1.1 Validity 5
1.2 Illustrations 5
1.3 Accentuated text 5
1.3.1 Pictograms 5
1.3.2 Safety Note 6
1.3.3 Safety instructions 6
1.3.4 Warning notes 7
1.3.5 Guideline 7

2 Description 9
2.1 Parts of the wheel loader 9
2.2 Front section 10
2.2.1 Overview 10
2.2.2 Hydraulic hoses 10
2.3 Cab - interior 11
2.3.1 Multi-function panel 11
2.3.2 Display 11
2.4 Cab - exterior 15
2.4.1 Overview 15
2.4.2 Central electrical system 16
2.5 Engine compartment 18
2.5.1 Overview 18
2.5.2 Diagnosis interface - engine control system 18
2.6 Diagnostic unit 19
2.6.1 Overview 19
2.6.2 Error messages 20

3 Service tasks 21
3.1 Checks 21
3.1.1 Checking the front axle oil level 21
3.1.2 Checking the rear axle oil level 24
3.1.3 Checking the planetary gear oil level 26
3.1.4 Checking the reduction gear oil level 28
3.1.5 Checking the electrical functions and connections 30
3.1.6 Checking the hydraulic hoses 30
3.2 Repair work 31
3.2.1 Changing a wheel 31
3.2.2 Changing the V-belt 34
3.2.3 Changing the fuel pre-filter 38
3.2.4 Changing the fuel filter 41
3.2.5 Changing the fresh air filter 43
3.2.6 Changing the hydraulic fluid filter 44
3.2.7 Changing the engine oil filter 47
3.2.8 Changing the air filter 49
3.3 Changing the consumables 54
3.3.1 Changing the engine oil 54
3.3.2 Changing the gearbox oil of the front axle 57
3.3.3 Changing the gearbox oil of the rear axle 61
3.3.4 Changing the gearbox oil of the planetary gear 64
3.3.5 Changing the gearbox oil of the reduction gear 67
3.3.6 Refilling with diesel fuel 71

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Pub... Order the manual at mid-west-tech.com >

3.4 Lubrication 73
3.4.1 Lubrication plan 73
3.4.2 Lubrication points - engine hood 73
3.4.3 Lubrication points - doors 74

4 Circuit diagrams 75

5 Annex 77
5.1 Spare Parts 77
5.1.1 Filter 77
5.1.2 Consumables 78
5.2 Deutz error messages 78

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Pub... Order the manual at mid-west-tech.com >

5. Tighten all eight wheel nuts to 500 Nm .

! For fastening, use a suitable torque wrench.




The wheel has been mounted.

✓ Done.

Info

After approximately ten hours of operation, re-tighten the wheel nuts of the wheel that has been changed.

3.2.2 Changing the V-belt

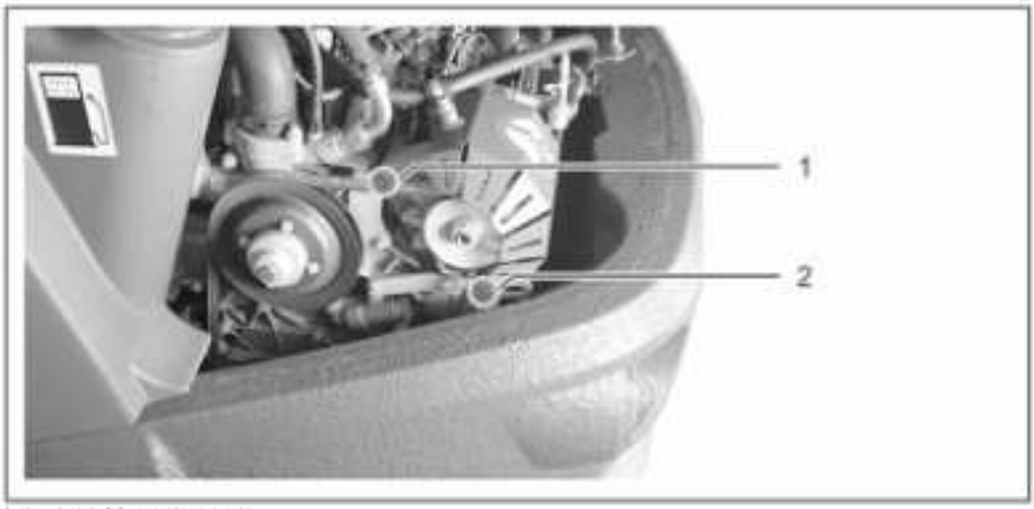

Location of fastening nuts

Key

No.	Designation
1	upper fastening nut
2	lower fastening nut

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Pub... Order the manual at mid-west-tech.com >

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Pub... Order the manual at mid-west-tech.com >

1.3.4 Warning notes

DANGER

Warning of injuries leading to fatality

Failure to observe the safety instruction will result in serious damage to health, including death.

➔ The arrow identifies a precautionary measure you have to take to avoid the hazard.

WARNING

Warning: Serious Injuries.

Failure to observe the warning can cause serious damage to health, or even death.

➔ The arrow identifies a precautionary measure you have to take to avoid the hazard.

CAUTION

Warning: Injuries.

Failure to observe the warning can result in serious damage to health.

➔ The arrow identifies a precautionary measure you have to take to avoid the hazard.

NOTICE

Warning: Damage to property.

Ignoring the warning instructions can result in serious damage to the wheel loader or in its surroundings

➔ The arrow identifies a precautionary measure you have to take to avoid the hazard.

1.3.5 Guideline

Carry out the following steps: = Start of a set of instructions.

1. First step in a sequence of operations.
   Required settings . . . . . Setting values
2. Second step in a sequence of operations.

➥ The result of this step.

✓ The operation is complete, the goal has been achieved.

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Pub... Order the manual at mid-west-tech.com >

Deutz-Code / SPN / Fehlername	Seite
11 / 107 / AirFltSysReac	3
12 / 91 / APP1	3
14 / 91 / APPPwm	3
15 / 91 / APPPwmPer	4
16 / 108 / APSCD	4
17 / 729 / ArHt1	4
18 / 730 / ArHt2	5
19 / 676 / ArHtCD_NoLd	5
20 / 676 / ArHtCD_RlyErr	5
22 / 168 / BattCD	6
23 / 168 / BattCDSysReac	6
24 / 523561 / BIPCyl1	6
25 / 523562 / BIPCyl2	7
26 / 523563 / BIPCyl3	7
27 / 523564 / BIPCyl4	7
28 / 523565 / BIPCyl5	8
29 / 523566 / BIPCyl6	8
30 / 523567 / BIPCyl7	8
31 / 523568 / BIPCyl8	9
32 / 102 / BPSCD	9
33 / 102 / BPSCDSysReac	9
37 / 111 / CLSCDSysReac	10
38 / 1323 / CmbChbMisfire1	10
39 / 1324 / CmbChbMisfire2	10
40 / 1325 / CmbChbMisfire3	11
41 / 1326 / CmbChbMisfire4	11
42 / 1327 / CmbChbMisfire5	11
43 / 1328 / CmbChbMisfire6	12
44 / 1450 / CmbChbMisfire7	12
45 / 1451 / CmbChbMisfire8	12
46 / 1322 / CmbChbMisfireMul	13
47 / 1346 / CmbChbSysReac	13
48 / 1109 / CoEngShDflDemIgr	13
52 / 1072 / CRERCD	14
53 / 1081 / CSLpCD	14
54 / 704 / CTLpCD	14
55 / 110 / CTSCD	15
56 / 110 / CTSCDSysReac	15
57 / 701 / Dummy1CD_Max	15
58 / 701 / Dummy1CD_Min	16
59 / 701 / Dummy1CD_SigNpl	16
60 / 702 / Dummy2CD_Max	16
61 / 702 / Dummy2CD_Min	17
62 / 702 / Dummy2CD_SigNpl	17
69 / 2791 / EGRCD_Max	17
70 / 2791 / EGRCD_Min	18
71 / 2791 / EGRCD_SigNpl	18
72 / 2791 / EGRCDIntEGR	18
74 / 923 / EngCDTrqCalcOut	19
75 / 190 / EngMBackUp	19
76 / 190 / EngMCaS1	19
77 / 190 / EngMCrS1	20
78 / 190 / EngMOfsCaSCrS	20
79 / 190 / EngPrtSysReacFOC	20
80 / 190 / EngPrtSysReacORC	21
81 / 703 / ESLpCD	21
82 / 1074 / ExFICD	21
83 / 975 / FanCD	22
85 / 1639 / FanCDEval	22
86 / 523602 / FanCDSysReac	22
87 / 97 / FIFCD	23
89 / 97 / FIFCD_WtLvl	23
90 / 94 / FIPSCD	23
91 / 94 / FIPSCDSysReac	24
94 / 523239 / FrmMngDecVT	24
95 / 523240 / FrmMngFunModCtl	24
106 / 523212 / FrmMngTOEngPrt	25
110 / 523216 / FrmMngTOPrHtEnCmd	25
112 / 523218 / FrmMngTORxCCVS	25
113 / 523604 / FrmMngTORxEngTemp	26
117 / 523238 / FrmMngTOSwtOut	26
118 / 523222 / FrmMngTOTCO1	26
120 / 523605 / FrmMngTOTSC1AE	27
121 / 523606 / FrmMngTOTSC1AR	27
122 / 523607 / FrmMngTOTSC1DE	27
123 / 523608 / FrmMngTOTSC1DR	28
124 / 523609 / FrmMngTOTSC1PE	28
125 / 898 / FrmMngTOTSC1TE	28
126 / 520 / FrmMngTOTSC1TR	29
127 / 523610 / FrmMngTOTSC1VE	29
128 / 523611 / FrmMngTOTSC1VR	29
131 / 523500 / FrmMngTxTO	30
133 / 174 / FTSCD	30
134 / 174 / FTSCDSysReac	30
136 / 523618 / GOTSCD	31
137 / 523619 / GOTSCDSysReac	31
138 / 29 / HdThrt	31
139 / 1638 / HOTSCD	32
140 / 1638 / HOTSCDSysReac	32
141 / 523617 / HWEMonCom	32
142 / 630 / HWEMonEEPROM	33
143 / 523612 / HWEMonRcyLocked	33
144 / 523612 / HWEMonRcySuppressed	33
145 / 523612 / HWEMonRcyVisible	34
146 / 523612 / HWEMonUMaxSupply	34
147 / 523612 / HWEMonUMinSupply	34
149 / 105 / IATSCD	35
150 / 105 / IATSCDSysReac	35
153 / 523350 / InjVlvBnk1A	35
154 / 523351 / InjVlvBnk1B	36
155 / 523352 / InjVlvBnk2A	36
156 / 523353 / InjVlvBnk2B	36
157 / 523354 / InjVlvChipA	37
158 / 523355 / InjVlvChipB	37
159 / 651 / InjVlvCyl1A	37
160 / 651 / InjVlvCyl1B	38
161 / 652 / InjVlvCyl2A	38
162 / 652 / InjVlvCyl2B	38
163 / 653 / InjVlvCyl3A	39
164 / 653 / InjVlvCyl3B	39
165 / 654 / InjVlvCyl4A	39

MidWestTech | Hitachi ZW65-6, ZW75-6, ZW95-6 Wheel Loader Service Manual | Publication TOPSY-EN-00
Order the manual at mid-west-tech.com >