PART NO. TTDCE-EN-00

HITACHI

Reliable solutions

Technical Manual
Troubleshooting

ZX
240-5G
240LC-5G
250H-5G
250LCH-5G

Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TODCE-EN
Technical Manual (Troubleshooting)	: Vol. No.TTDCE-EN
Workshop Manual	: Vol. No.WDCE-EN
Engine Manual	: Vol. No.EDCD-EN

MidWestTech | Hitachi ZX240-5G, ZX240LC-5G, ZX250H-5G, ZX250LCH-5G Excavator Troubleshooting Technical Service Manual | Publication TTDCE-EN-00

Order the manual at mid-west-tech.com >

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction
Operational Performance Tests T4-1-1
Preparation for Performance Tests T4-1-2

Group 2 Standard
Operational Performance Standard Table T4-2-1
Main Pump P-Q Diagram T4-2-7
Sensor Activating Range T4-2-9
MPDr. Monitor Indicating Values T4-2-10

Group 3 Engine Test
Engine Speed T4-3-1
Engine Compression Pressure T4-3-4
Valve Clearance T4-3-6
Nozzle T4-3-8
Injection Timing T4-3-10
Lubricant Consumption T4-3-12

Group 4 Machine Performance Test
Travel Speed T4-4-1
Track Revolution Speed T4-4-2
Mistrack Check T4-4-3
Travel Parking Leakage T4-4-4
Swing Speed T4-4-5
Swing Function Drift Check T4-4-6
Swing Motor Leakage T4-4-8
Maximum Swingable Slant Angle T4-4-10
Swing Bearing Play T4-4-12
Hydraulic Cylinder Cycle Time T4-4-14
Dig Function Drift Check T4-4-16
Control Lever Operating Force T4-4-19
Control Lever Stroke T4-4-20
Combined Operation of Boom Raise / Swing Function Check T4-4-21
Combined Operation of Boom Raise / Arm Roll-In Function Check T4-4-22

Group 5 Component Test
Primary Pilot Pressure T4-5-1
Secondary Pilot Pressure T4-5-3
Solenoid Valve Set Pressure T4-5-4
Main Pump Delivery Pressure T4-5-6
Main Relief Set Pressure T4-5-8
Relief pressure (when relieving swing) T4-5-12
Overload Relief Valve Set Pressure T4-5-14
Main Pump Flow Rate Measurement T4-5-16
Swing Motor Drainage T4-5-24
Travel Motor Drainage T4-5-26

Group 6 Adjustment
Engine Speed Adjustment and Engine Learning T4-6-1
Governor Lever and Fuel Cut Lever Position T4-6-6

MidWestTech | Hitachi ZX240-5G, ZX240LC-5G, ZX250H-5G, ZX250LCH-5G Excavato... Order the manual at mid-west-tech.com >

List of Frequency Distribution Data

Item	Details
Pump Load	Frequency distribution of average pump delivery pressure of pumps 1 and 2
Average Pump Delivery Pressure in Digging Operation	Frequency distribution of average delivery pressure from pumps during digging operation
Average Pump Delivery Pressure in Travel Operation	Frequency distribution of average delivery pressure from pumps during travel operation
Radiator Coolant Temperature (79 °C or less)	Total hours when coolant temperature is less than 80 °C during a day.
Radiator Coolant Temperature (80 to 93 °C)	Total hours when coolant temperature is 80 °C or more and less than 94 °C during a day.
Radiator Coolant Temperature (94 to 104 °C)	Total hours when coolant temperature is 94 °C or more and less than 105 °C during a day.
Radiator Coolant Temperature (105 °C or more)	Total hours when coolant temperature is 105 °C or more during a day.
Hydraulic Oil Temperature (49 °C or less)	Total hours when hydraulic oil temperature is less than 50 °C during a day.
Hydraulic Oil Temperature (50 to 89 °C)	Total hours when hydraulic oil temperature is 50 °C or more and less than 90 °C during a day.
Hydraulic Oil Temperature (90 to 99 °C)	Total hours when hydraulic oil temperature is 90 °C or more and less than 100 °C during a day.
Hydraulic Oil Temperature (100 °C or more)	Total hours when hydraulic oil temperature is 100 °C or more during a day.

MidWestTech | Hitachi ZX240-5G, ZX240LC-5G, ZX250H-5G, ZX250LCH-5G Excavato... Order the manual at mid-west-tech.com >

Monitor Controller (Monitor) Fault Code List

Fault Code	Trouble	Cause	Remedy
13002-2	ECF Communication Error	Faulty monitor controller Faulty CAN0 harness	Check the CAN0 harness. Replace monitor controller.
13003-2	MC Communication Error 1	Faulty monitor controller Faulty CAN0 harness	Check the CAN0 harness. Replace monitor controller.
13004-2	MC Communication Error 2	Faulty monitor controller Faulty CAN1 harness	Check the CAN1 harness. Replace monitor controller.
13005-2	Monitor Controller (Information) Communication Error 1	Faulty monitor controller Faulty CAN0 harness	Check the CAN0 harness. Replace monitor controller.
13006-2	Monitor Controller (Information) Communication Error 2	Faulty monitor controller Faulty CAN1 harness	Check the CAN1 harness. Replace monitor controller.
13007-2	Wiper / Light Controller Communication Error	Faulty monitor controller Faulty CAN1 harness	Check the CAN1 harness. Replace monitor controller.
20113-2	System Failure Alarm	Faulty CAN communication bus line.	Check the CAN harness.


MidWestTech | Hitachi ZX240-5G, ZX240LC-5G, ZX250H-5G, ZX250LCH-5G Excavato... Order the manual at mid-west-tech.com >

MC Fault Codes 11304, 11307

Preparation

- Check the wiring connections first.
- Connect the test harness (ST 6703) and dummy sensor equivalent to #4436535.
- Before inspection, set the key switch to the ON position.

Fault Code	Trouble	Inspection Method	Evaluation	Cause
11304-3	Travel Pilot Pressure Sensor Circuit High Input	Retry by using MPDr.	Un-displayed fault code	Faulty sensor.
		Measurement of voltage between B and body	Voltage: more than 4.5 V	Shorted circuit in harness #1 and #2.
11304-4	Travel Pilot Pressure Sensor Circuit Low Input	Retry by using MPDr.	Un-displayed fault code	Faulty sensor.
		Measurement of voltage between A and body	0 V	Open circuit in harness #1.
		Measurement of voltage between A and C (GND)	0 V	Open circuit in harness #3.
		-	Normal in above check.	Open circuit in harness #2.
11307-3	Front Pilot Pressure Sensor Circuit High Input	Retry by using MPDr.	Un-displayed fault code	Faulty sensor.
		Measurement of voltage between B and body	Voltage: more than 4.5 V	Shorted circuit in harness #1 and #2.
11307-4	Front Pilot Pressure Sensor Circuit Low Input	Retry by using MPDr.	Un-displayed fault code	Faulty sensor.
		Measurement of voltage between A and body	0 V	Open circuit in harness #1.
		Measurement of voltage between A and C (GND)	0 V	Open circuit in harness #3.
			Normal in above check.	Open circuit in harness #2.

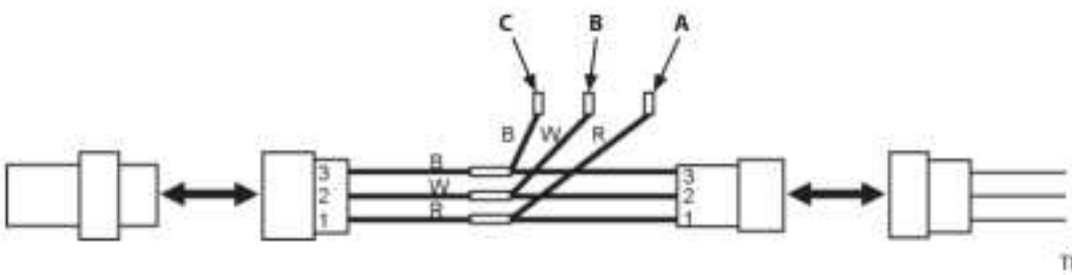

TDAA-05-06-003

MidWestTech | Hitachi ZX240-5G, ZX240LC-5G, ZX250H-5G, ZX250LCH-5G Excavato... Order the manual at mid-west-tech.com >