Operation & Maintenance Manual

VEAM440103

WA380-6

WHEEL LOADER

SERIAL NUMBERS H60051 AND UP

ORIGINAL INSTRUCTIONS

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual | Publi... Order the manual at mid-west-tech.com >

1.5 Contents

1. Foreword 1-1

1.1 Foreword 1-2
EU Directives 1-3

1.2 Safety information 1-4
1.2.1 **Signal words 1-4**
1.2.2 **Safety labels 1-6**

1.3 Introduction 1-7
1.3.1 Intended use. 1-7
1.3.2 Directions of machine. 1-8
1.3.3 Visibility from operator's seat 1-9

1.4 Necessary information 1-10
1.4.1 Product Identification Number (PIN)/Machine serial no. plate and position 1-10
1.4.2 Engine serial no. plate and position 1-11
1.4.3 ROPS/FOPS-Cab serial no. plate 1-11
1.4.4 Axle serial no. plate 1-12
1.4.5 Transmission serial no. plate 1-12
1.4.6 Seat operator serial no. plate 1-13
1.4.7 Position of service meter 1-13
1.4.8 Table to enter serial no. and distributor 1-14
1.4.9 Declaration of conformity (for machines placed on the market as from 29th December 2009) 1-14

1.5 Contents 1-15

1.6 Dimensions, weights and operating data 1-23
1.6.1 WA380-6: Dimensions, weights and operating data 1-23

1.7 CE-Conforming equipment. 1-24
1.7.1 CE-Conforming equipment. 1-24
1.7.2 Retrofitting by third-party suppliers. 1-25

2. Safety 2-1

2.1 Safety labels. 2-2
2.1.1 Location of safety labels. 2-2
2.1.2 Presentation of safety labels 2-3

2.2 General precautions 2-8

2.3 Precautions for operation. 2-21
2.3.1 Starting engine 2-21
2.3.2 Operation 2-23
Machine speed limitation 2-23
2.3.3 Transportation 2-31
2.3.4 Battery 2-33
2.3.5 Towing 2-36

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

2.4 Precautions for maintenance 2-37

2.5 Precautions with tires 2-48

3. Operation 3-1

3.1 General view 3-2
3.1.1 General view of machine 3-2
3.1.2 General view of controls and gauges 3-3

3.2 Explanation of components 3-7
3.2.1 Machine monitor 3-7
Types of warning 3-8
Central warning lamp 3-9
Character display portion 3-10
Emergency stop item 3-17
Caution items 3-20
Inspection and maintenance item 3-23
Pilot display portion 3-27
Meter display portion 3-33
Other functions of machine monitor 3-36
3.2.2 Switches 3-42
3.2.3 Control levers, pedals 3-60
3.2.4 Steering tilt lock lever 3-67
3.2.5 Cap with lock 3-68
3.2.6 Safety bar 3-69
3.2.7 Towing pin 3-70
3.2.8 Grease pump 3-70
3.2.9 Cab door 3-71
3.2.10 Cab door open lock 3-71
3.2.11 Cab window open lock 3-72
Cab left window open lock reset knob 3-72
Cab right window open lock reset knob 3-72
Reset right window open lock for escape 3-73
3.2.12 Backup alarm 3-73
3.2.13 Fuse 3-74
Fuse capacity and name of circuit 3-74
3.2.14 Slow blow fuse 3-75
3.2.15 Location and presentation of relays 3-76
3.2.16 Power outlet 3-77
3.2.17 Air conditioner 3-78
General locations and function of control panel 3-78
Method of operation 3-81
Precautions when using 3-83
Precautions for inspection and maintenance 3-83
Cool box 3-84
3.2.18 Handling cab wiper 3-84
Preventing damage to wiper arm bracket 3-84

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

3.3 Operation ... 3-85
3.3.1 Check before starting engine, adjust ... 3-85
Walk-around check ... 3-85
Check before starting ... 3-88
Adjustment ... 3-96
Safety belt ... 3-97
Adjust lever stand ... 3-98
Operations and checks before starting engine ... 3-100
3.3.2 Starting engine ... 3-102
Normal starting ... 3-102
Ambient temperature range for operation and storage ... 3-103
Starting in cold weather ... 3-104
Automatic warming-up operation ... 3-105
3.3.3 Operations and checks after starting engine ... 3-106
Breaking-in the machine ... 3-106
Normal operation ... 3-107
3.3.4 Stopping engine ... 3-109
3.3.5 Check after stopping engine ... 3-109
3.3.6 Moving the machine (directional, speed), stopping the machine ... 3-110
Preparations for moving the machine ... 3-110
Changing gear speed ... 3-113
Changing direction ... 3-114
Using switch to change between forward and reverse ... 3-116
Stopping the machine ... 3-118
Transmission cut-off function ... 3-119
3.3.7 Turning ... 3-121
Emergency steering ... 3-122
3.3.8 Operation of work equipment ... 3-124
Lift arm operation ... 3-125
Bucket operation ... 3-125
3.3.9 Work possible using wheel loader ... 3-126
Digging operations ... 3-126
Leveling operation ... 3-130
Pushing operation ... 3-130
Load and carry operations ... 3-131
Loading operations ... 3-131
3.3.10 Precautions for operation ... 3-133
Permissible water depth ... 3-133
If wheel brake does not work ... 3-133
Precautions when driving up or down slopes ... 3-133
3.3.11 Adjusting work equipment posture ... 3-135
Adjusting boom kickout ... 3-136
Adjusting bucket positioner ... 3-136
Bucket level indicator ... 3-137
3.3.12 Parking machine ... 3-137
3.3.13 Checks after completion of operation ... 3-139
Before stopping engine ... 3-139
After stopping engine ... 3-139

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

Shipping

- When shipping the machine on a trailer, do as follows.
- The weight, transportation height, and overall length of the machine differ according to the work equipment, so be sure to confirm the dimensions.
- When passing over bridges or structures on private land, check first that the structure is strong enough to support the weight of the machine. When traveling on public roads, check first with the relevant authorities and follow their instructions.
- Lock the frame with the safety bar to prevent the machine from articulating.
- Fit chains to the front frame and the rear frame to hold the machine securely in position.
- For details of the shipping procedure, see "Transportation procedure (3-144)".

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


4.7 Maintenance schedule chart

4.7.1 Maintenance schedule chart

Service procedure		see page
4.9.1	**Initial 50 hours service (only after the first 50 hours)**	
	Check for loose wheel hub bolts, tighten	4-32
4.9.2	**Initial 250 hours service (only after the first 250 hours)**	
	Replace transmission oil filter cartridge	4-32
	Replace hydraulic tank filter element	4-32
4.9.3	**Initial 1000 hours service (only after the first 1000 hours)**	
	Check engine valve clearance, adjust	4-32
4.9.4	**When required**	
	Clean, replace air cleaner element	4-33
	Clean inside of cooling system	4-36
	Check transmission oil level, add oil	4-40
	Check axle oil level, add oil	4-41
	Clean axle case breather	4-42
	Clean air conditioner condenser	4-43
	Check window washing fluid level, add fluid	4-43
	Clean radiator fins and cooler fins	4-44
	Check electrical intake air heater	4-47
	Turn, replace bolt on cutting edge	4-48
	Replace bucket teeth	4-49
	Check air conditioner	4-52
	Replace slow blow fuse	4-54
	Checking function of accumulator	4-55
	Selection and inspection of tires	4-56
	Check central lubrication system, fill up grease	4-58
4.9.5	**Check before starting**	
	Check before starting	4-60
4.9.6	**Every 50 hours service**	
	Drain water, sediment from fuel tank	4-60

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

1. Lift arm control lever (3-lever control)

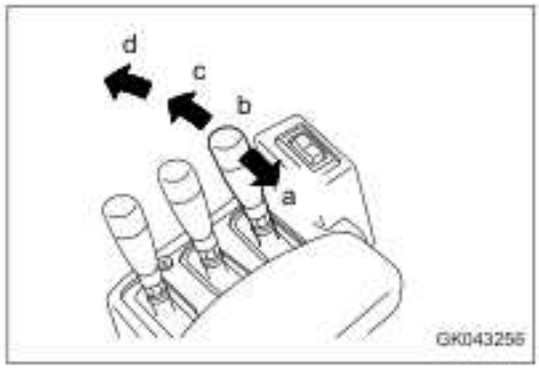

This lever (1) is used to operate the lift arm.

NOTE
Do not use the FLOAT position when lowering the bucket. Use the FLOAT position when leveling, see "Leveling operation (3-130)".

Position (a): RAISE


When the lift arm control lever is pulled further from the RAISE position, the lever is stopped in this position until the lift arm reaches the preset position of the kickout, and the lever is returned to the HOLD position.

Position (b): HOLD


The lift arm is kept in the same position.

Position (c): LOWER

Position (d): FLOAT
The lift arm moves freely under external force.

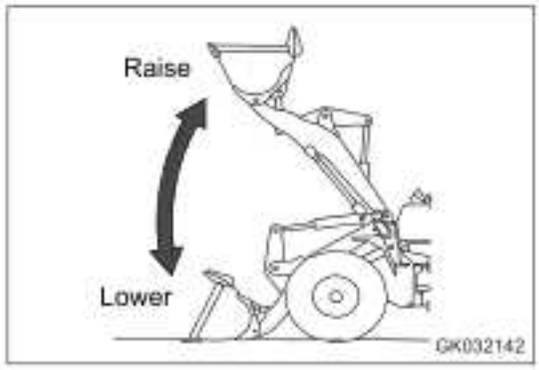

2. Bucket control lever (3-lever control)

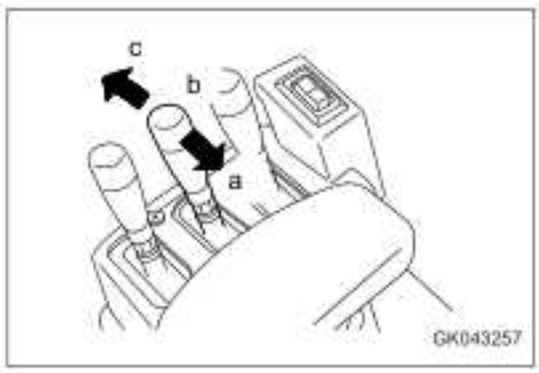

This lever (2) operates the bucket.


Position (a): TILT

When the bucket control lever is pulled further from the TILT position, the lever is stopped in this position until the bucket reaches the preset position of the positioner, and the lever is returned to the HOLD position.

Position (b): HOLD

The bucket is kept in the same position.

Position (c): DUMP

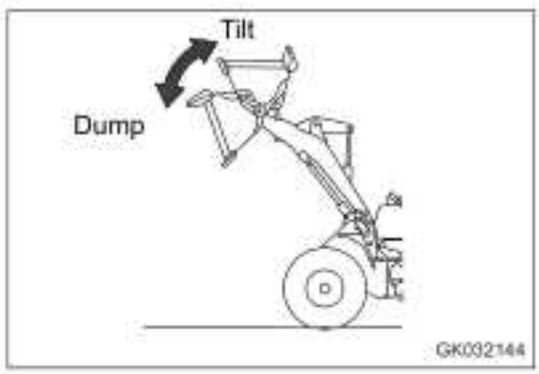

MidWestTech | Komatsu WA380-6 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >