VEAM934100

Operation & Maintenance Manual

WA150-5H

WHEEL LOADER

SERIAL NUMBERS H50051 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual | Pub... Order the manual at mid-west-tech.com >

1.5 Contents

1. Foreword 1-1

1.1 Foreword 1-2
1.1.1 EU Directives 1-3

1.2 Safety information 1-4
1.2.1 Signal words 1-4
1.2.2 Safety labels 1-5

1.3 Introduction 1-6
1.3.1 Intended use 1-6
1.3.2 Directions of machine 1-6

1.4 Necessary information 1-7
1.4.1 PIN/Machine serial no. plate and position 1-7
1.4.2 Engine serial no. plate and position 1-7
1.4.3 ROPS/FOPS-Cab serial no. plate 1-8
1.4.4 Axle serial no. plate 1-8
1.4.5 Transmission serial no. plate 1-8
1.4.6 Seat operator serial no. plate 1-9
1.4.7 Position of service meter 1-9
1.4.8 Table to enter serial no. and distributor 1-9

1.5 Contents 1-10

1.6 Dimensions, weights and operating data 1-17
1.6.1 WA150-5H: Dimensions, weights and operating data 1-17

1.7 CE-Conforming equipment 1-18
1.7.1 CE-Conforming equipment 1-18
1.7.2 Manufacturer-supplied CE-Conforming equipment, according to document 416-93-H1120 1-19

2. Safety 2-1

2.1 Safety labels 2-2
2.1.1 Location of safety labels 2-2
2.1.2 Presentation of safety labels 2-3

2.2 General precautions 2-6

2.3 Precautions for operation 2-16
2.3.1 Starting engine 2-16
2.3.2 Operation 2-18
2.3.3 Transportation 2-25
2.3.4 Battery 2-26
2.3.5 Towing 2-28

2.4 Precautions for maintenance 2-29

2.5 Precautions with tires 2-37

MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

3. Operation 3-1

3.1 General view 3-2
3.1.1 General view of machine 3-2
3.1.2 General view of controls and gauges 3-3

3.2 Explanation of components 3-5
3.2.1 Machine monitor 3-5
Monitor system 3-6
Types of warning 3-7
Central warning lamp 3-7
Character display portion 3-8
Emergency stop item 3-14
Caution items 3-17
Warning/Limit functions for travel speed 3-19
Inspection and maintenance item 3-20
Pilot display portion 3-22
Meter display portion 3-25
Other functions of machine monitor 3-27
3.2.2 Switches 3-30
3.2.3 Control levers, pedals 3-39
3.2.4 Steering tilt lock lever 3-44
3.2.5 Cap and cover with lock 3-44
3.2.6 Safety bar 3-45
3.2.7 Towing pin 3-46
3.2.8 Grease pump 3-46
3.2.9 Cab door inner lock 3-46
3.2.10 Cab door open lock 3-47
3.2.11 Cab window open lock cancel knob 3-47
3.2.12 Fuse 3-48
Fuse capacity and name of circuit 3-48
3.2.13 Slow blow fuse 3-49
3.2.14 Power outlet 3-50
3.2.15 Storage box 3-50
3.2.16 Air conditioner 3-51
General locations and function of control panel 3-51
Method of operation 3-53
Precautions when using 3-54
3.2.17 Handling cab wiper 3-54
Preventing damage to wiper arm bracket 3-54

3.3 Operation 3-55
3.3.1 Check before starting engine, adjust 3-55
Walk-around check 3-55
Check before starting 3-58
Adjustment 3-63
Safety belt 3-64
Operations and checks before starting engine 3-66
3.3.2 Starting engine 3-68
Normal starting 3-68

MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


Starting in cold weather . . . 3-70
3.3.3 Operations and checks after starting engine . . . 3-72
Breaking-in the machine . . . 3-72
Normal operation . . . 3-73
3.3.4 Stopping engine . . . 3-74
3.3.5 Moving the machine (directional, speed), stopping the machine . . . 3-75
Moving the machine . . . 3-75
Changing direction . . . 3-77
Using switch to change between forward and reverse . . . 3-78
Stopping the machine . . . 3-80
3.3.6 Turning . . . 3-81
Emergency steering . . . 3-82
3.3.7 Operation of work equipment . . . 3-83
3.3.8 Work possible using wheel loader . . . 3-85
Digging operations . . . 3-85
Leveling operation . . . 3-87
Pushing operation . . . 3-87
Load and carry operations . . . 3-88
Loading operations . . . 3-88
3.3.9 Precautions for operation . . . 3-90
Permissible water depth . . . 3-90
If wheel brake does not work . . . 3-90
Precautions when driving up or down slopes . . . 3-90
3.3.10 Adjusting work equipment posture . . . 3-92
Adjusting boom kickout . . . 3-92
Adjusting bucket positioner . . . 3-93
Bucket level indicator . . . 3-93
3.3.11 Parking machine . . . 3-94
3.3.12 Check after stopping engine . . . 3-96
3.3.13 Checks after completion of operation . . . 3-96
3.3.14 Locking . . . 3-96
3.3.15 Handling the tires . . . 3-97
Precautions when handling tires . . . 3-97
Tire pressure . . . 3-97
Precautions for using load and carry method . . . 3-98

3.4 Transportation . . . 3-99
3.4.1 Transportation procedure . . . 3-99
3.4.2 Loading, unloading work with trailers . . . 3-99
Loading . . . 3-100
Securing machine . . . 3-100
Unloading . . . 3-101
3.4.3 Lifting machine . . . 3-102
Location of lifting position mark . . . 3-103
Weight table . . . 3-103
Lifting procedure . . . 3-104

3.5 Cold weather operation . . . 3-105
3.5.1 Precautions for low temperature . . . 3-105
Fuel and lubricants . . . 3-105


MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

3. Operate work equipment control lever (3) to set the work equipment to the travel posture shown in the diagram on the right.

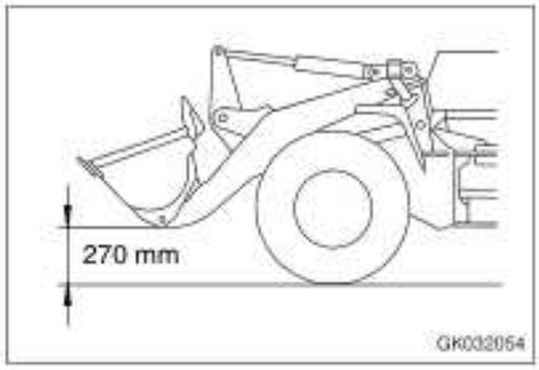

4. Depress brake pedal (4) and turn parking brake lever (5) to the FREE position to release the parking brake.

   Keep brake pedal (4) depressed.

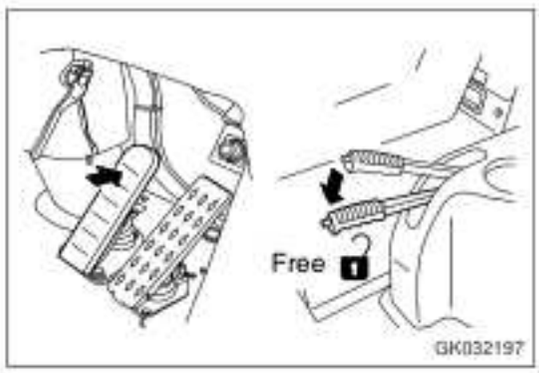


5. Set speed range selector switch (6) to the desired position.

   Position (a): 1st

   Position (b): 2nd

   Position (c): 3rd

   Position (d): 4th

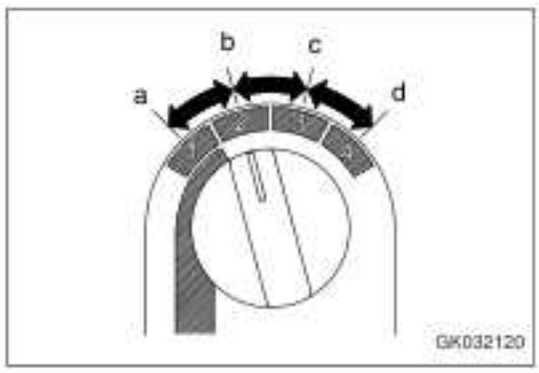

6. Set directional lever (7) to the desired position.


   Position (a): FORWARD

   Position N: NEUTRAL

   Position (b): REVERSE

   Check that the backup alarm sounds when the directional lever is set to REVERSE. If the backup alarm does not sound, please contact your KOMATSU distributor for repairs.

7. Release brake pedal (4), then depress accelerator pedal (8) to move the machine.

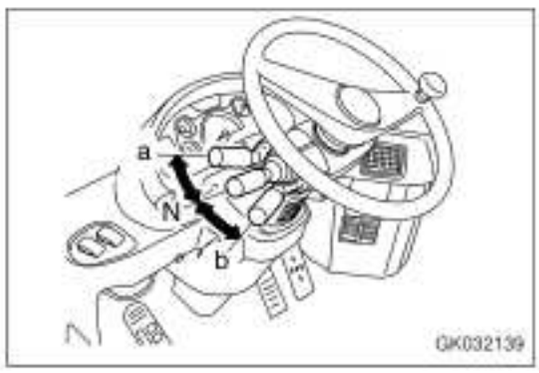



MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

4.4.2 Proper selection of fuel, coolant and lubricants

WA150-5H	LUBRICANTS, FUELS AND FILLING CAPACITIES					
	Lubricant and operating medium	Short code / cask lettering	Quality grade	Temperature range	Viscosity range	Filling capacity in litres
Engine	Engine oil	EO 0030A EO 0540A EO 10 EO 30 EO 1030A EO 1540A	CCMC D4 or, if not available: API CD or API CE or API CF -4	-30° up to 40° C -25° up to 40° C -20° up to 10° C 0° up to 40° C -20° up to 40° C - 15° up to 50° C	SAE 0W-30 SAE 5W-40 SAE 10 SAE 30 SAE 10W-30 SAE 15W-40 *)	14 (12.5 **)
Transfer case	Engine oil	EO 10	CCMC D4 or, if not available: API CD or API CE or API CF -4	-30° up to 40° C	SAE 10W*)	4.9 (4.4 **)
Hydraulic system	Hydraulic oil	HYD 0530 HYD 1030	HVLP, HVLP D	-30° up to 40° C -20° up to 30° C	ISO VG46 *) ISO VG68	104 (47**)
Axle with standard differential	Axle oil	AXO 80 AXO	Shell: DONAX TD5W30 ***		80W SAE 5W-30 *)	front 14 rear 14.5
	or Engine oil	EO 30	CCMC D4 or, if not available: API CD or API CE or API CF -4	0° up to 40° C	SAE 30	
Axle with limited-slip differential (*3)	Axle oil (*4)	AXO	Shell: DONAX TD 5W-30*** Esso: TORQUE FLUID56**** Mobil: MOBILFLUID 424 Fuchs: TITAN HYDRA ZF 20W-40		SAE 5W-30 *) SAE 20W-40	
Fuel tank	Diesel fuel	ASTM D975 No.1 ASTM D975 No.2 DIN-EN 590	CFPP class B CFPP class D CFPP class F	-30° up to -10° C -10° up to 40° C 0° up to 40° C -10° up to 40° C - 20° up to 40° C	–	133
Grease nippels	Multi purpose grease on a lithium base	MPG-A	KP2N-20	-30° up to 40° C	NLGI-No. 2	–
Grease box of central lubrication unit	Multi purpose grease on a lithium base	MPG-A	KP2N-20	-30° up to 40° C	NLGI-No. 2	–
Cooling system	Water and coolant	SP-C	Add antifreeze with corrosion resistor			17
Air conditioner	Coolant	NRS	R134a (CFC-free)			860 g

* Work filling
** Top-up quantity
*** North American manufacted DONAX TD 20W-40 must not be used.
**** North American manufacted TORQUE FLUID 56 must not be used.

MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

Replace element in air conditioner recirculation air filter, fresh air filter

Remove both the recircuration air filter and fresh air filter in the same way as when cleaning, and replace them with new parts.

For details of cleaning the recircuration air filter, see "Clean element in air conditioner recirculation filter (4-48)".

For details of cleaning the fresh air filter, see "Clean element in air conditioner fresh air filter (4-41)".

Check alternator, starting motor

The brush may be worn or have no grease on the bearing, so contact your KOMATSU distributor for inspection or repair.

If the engine is started frequently, carry out inspection every 1000 hours.

Check engine valve clearance, adjust

As special tool is required for removing and adjusting the parts, request your KOMATSU distributor for service.

MidWestTech | Komatsu WA150-5H Wheel Loader Operation & Maintenance Manual |...
Order the manual at mid-west-tech.com >