Operation & Maintenance Manual

VEAM980500

WA95-3

WHEEL LOADER

SERIAL NUMBERS HA980376 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

Contents

Information on these Operating Instructions 1-1
Why You Should Read these Operating Instructions 1-3
Notes on Safety Regulations 1-4
Correct Use 1-4
Safety Notes in the Operating Instructions 1-4
Standards and Guidelines 1-6
CE-Conforming Equipment 1-8
CE-Conforming Equipment of the Manufacturer According to Document 42W-93-11130 1-10

Loading and Transporting the Machine 2-1
Loading and Transporting the Machine 2-3
Securing the Articulated Steering 2-3
Lifting the Machine 2-3
Driving Machine Onto Loading Area of Transport Vehicle 2-4
Securing the Machine During Transport 2-5
After Transport 2-5
Dimensions, Weights, and Operating Values 2-6
Technical Data 2-7

Safety 3-1
General Safety Measures 3-2
Safety Instructions 3-2
Safety Devices 3-2
Emergency Exit 3-2
Clothing and Personal Protection 3-2
Machine Modifications 3-3
Before You Leave the Driver's Seat 3-3
Mounting and Dismounting 3-3
Fire Prevention and Fire Fighting 3-4
Protection Against Asbestos Dust 3-5
Protection Against Injuries 3-5
Working at High Temperatures 3-5
Roll-Over Protection System (ROPS) 3-6
Attachment for Protection Against Falling Objects (FOPS) 3-6
Attachments 3-6
Battery 3-7
Before You Start the Engine 3-8
Workplace Safety 3-8
In the Driver's Cab 3-8
In-Door Operation 3-9
Gas, Dust, and Inflammable Vapours 3-9
Mirrors, Windows, and Lighting 3-9
Machine Operation 3-10
Before You Start the Engine 3-10
Reversing 3-10
Driving 3-10
Driving On Slopes 3-11
Emergency Lowering System 3-11
Working Close to Overhead Power Transmission Lines 3-12
Loading 3-12
Good Vision 3-13
Working On Snow 3-13
Height Limitation 3-13
Brakes 3-13

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

Working On Loose Soil 3-13
Working with the Forklift Truck Attachment 3-14
Parking the Machine 3-15
Transport 3-16
Loading and Unloading the Machine 3-16
Transport 3-16
Safety Measures During Maintenance 3-17
Personnel 3-17
Prior to Start of Maintenance Measures 3-17
During Maintenance 3-19
Tyres 3-23
Labeling 3-24
Positions of Safety Labels 3-24
Information Labels 3-25

Controls and Indicators 4-1
Overall View of the Machine 4-3
Controls and Indicators 4-4
Overall View 4-4
Instrument Panel 4-5
Warning Lights 4-6
Control Lamps 4-8
Measuring Indicators 4-11
Switches 4-13
Control Levers, Pedals 4-19
Articulated Steering Catch 4-23
Traction Device 4-23
Socket 4-23
Door Unlocking System 4-23
Alarm Horn for Reverse Driving (Option) 4-23

Operation 5-1
Running in the Machine 5-3
Preparing the Machine Start 5-4
Visual Checks (also refer to chapter "Maintenance Prior to Machine Start") 5-4
Adjustments Prior to Machine Start 5-6
Adjusting the Driver's Seat 5-6
Adjusting the Steering Column 5-7
Adjusting the Armrest 5-7
Adjusting the Rear-View Mirrors 5-7
Adjusting the Heating and Ventilation System 5-8
Operating the Air Conditioning 5-9
Putting on the Safety Belt 5-10
Starting and Switching Off the Engine 5-11
Starting the Engine 5-11
Switching Off the Engine 5-12
Driving 5-13
Start-Up 5-13
Driving with the high-speed gear 5-14
Changing the Driving Direction 5-15
Reverse Driving 5-15
Turning 5-16
Braking 5-17
Stopping 5-18
Longer-Distance Driving 5-19
Operating the Machine 5-20
Tyre-Appropriate Operation 5-22
Adjusting the Bucket Positioner 5-23
Loading 5-24
Transporting 5-26

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

Dumping/Unloading 5-26
Planing 5-27
Working With the Forklift Truck Attachment 5-28
Precautions For Special Operations 5-29
After the work is finished 5-29
Instructions for Winter Operation 5-30
Longer Standstill Periods of the Machine 5-31

Troubleshooting 6-1


Troubleshooting 6-3
Warning Lights and Indicators 6-3
Electrical System 6-4
Engine 6-5
Hydraulic System 6-8
Brakes 6-10
Axles 6-11
Driver's cab 6-11
Emergency Steering Characteristics 6-12
Emergency Lowering System 6-12
Starting the Engine with a Battery Jumper Cable 6-13
Towing the Machine 6-15
Inadequate Braking Effect 6-17

Maintenance 7-1

Maintenance Basics 7-3
Cleaning the Machine 7-4
Working-Area-Dependent Maintenance 7-5
Lubricants and Operating Agents 7-6
Replacing Safety-Related Parts 7-11
Spare Parts and Consumable Components 7-12
Electrical System 7-13
Tyres 7-15
Tools 7-17
Torque for Standard Nuts and Bolts 7-18
Maintenance Schedule 7-21
Maintenance Prior to Start 7-23
Cooling System, Checking the Coolant Level, Topping Up Coolant 7-23
Engine, Checking the Oil Level, Topping Up Oil 7-24
Engine, Draining Off Oil 7-24
Checking the Fuel Level, Refuelling 7-25
Checking the Controls 7-25
Checking the Electrical Connections 7-26
Heater / Air conditioning: checking rate of air flow 7-26
Other Maintenance Measures Prior to Start 7-26
Maintenance upon Demand 7-27
Checking the Air Conditioning System 7-27
Maintenance Every 10 Operating Hours 7-28
Lubrication 7-28
Maintenance After the First 50 Operating Hours 7-29
Engine, Changing Oil and Replacing the Oil Filter Cartridge 7-29
Replacing the Oil Filter Cartridge 7-30
V-Belt, Checking the Condition 7-31
V-Belt, Checking and Adjusting the Tension 7-31
Hydraulic System, Replacing the Filter Insert 7-32
Checking and Tightening the Wheel Nuts 7-32
Front and Rear Axle, Oil Change 7-33
Transfer Box Gearing - Changing Oil 7-34
Maintenance Every 50 Operating Hours 7-35
Checking the Cooling System, Coolant Level in the Radiator and expanion tank 7-35
Draining Off Water and Dirt Deposits From the Fuel Tank 7-36
Checking the Service Brake and Oil Level, Refilling Oil 7-36

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >


Dimensions, Weights, and Operating Values

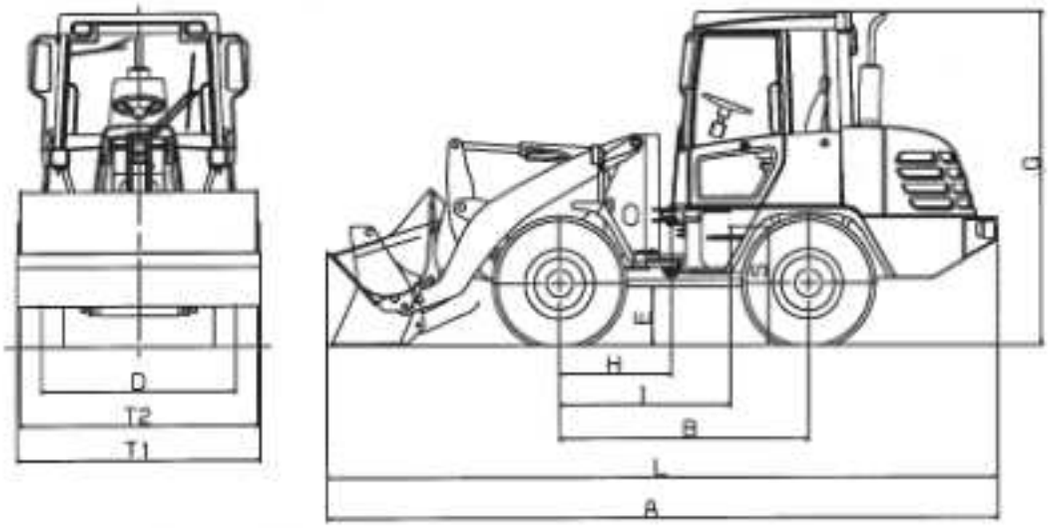

	Dimensions, Operating Values			
	Bucket capacity according to ISO 7546	**m³**	**1.1**	
	Loose weight	t/m³	2.0	
	Stat. tipping load, straight	kg	4860	
	Stat. tipping load, bent by 40°	kg	4200	
	Working load without CTW Working load with CTW	kg kg	2500 2600	
	Tear-out force, hydraulic	kN	72.5	
	Hydr. lifting capacity on ground	kN	57.0	
	Operating weight	kg	5830	
	Turning radius over bucket	mm	4455	
L	Bucket length in transport position	mm	5550	
A	Bucket length during planing	mm	5580	
T1	Width with bucket	mm	2150	The 1.1 m³ standard bucket given in the table is also available with blade attachment.
T2	Width without bucket (above wheels)	mm	2060	
G	Height, including ROPS	mm	2750	
D	Track (front section) Track (rear section)	mm mm	1590 1590	Special buckets: 125 m³ light weight material bucket 1.6 m³ light weight material bucket 0.9 m³ multi-purpose bucket
B	Width over tyres	mm	2150	
H	Distance articulated steer. - front axle	mm	1035	These values apply to machines with 455/70 R20 tyres
E	Ground clearance, axle / transfer gear ground clearance, cardan shaft	mm mm	396 505	
F	Centre of gravity, height above axle centre	mm	420	*) CTW = additional counterweight
I	Centre of gravity, distance to front axle	mm	1440	
				ABM_95E.TBL

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

Control Lamps

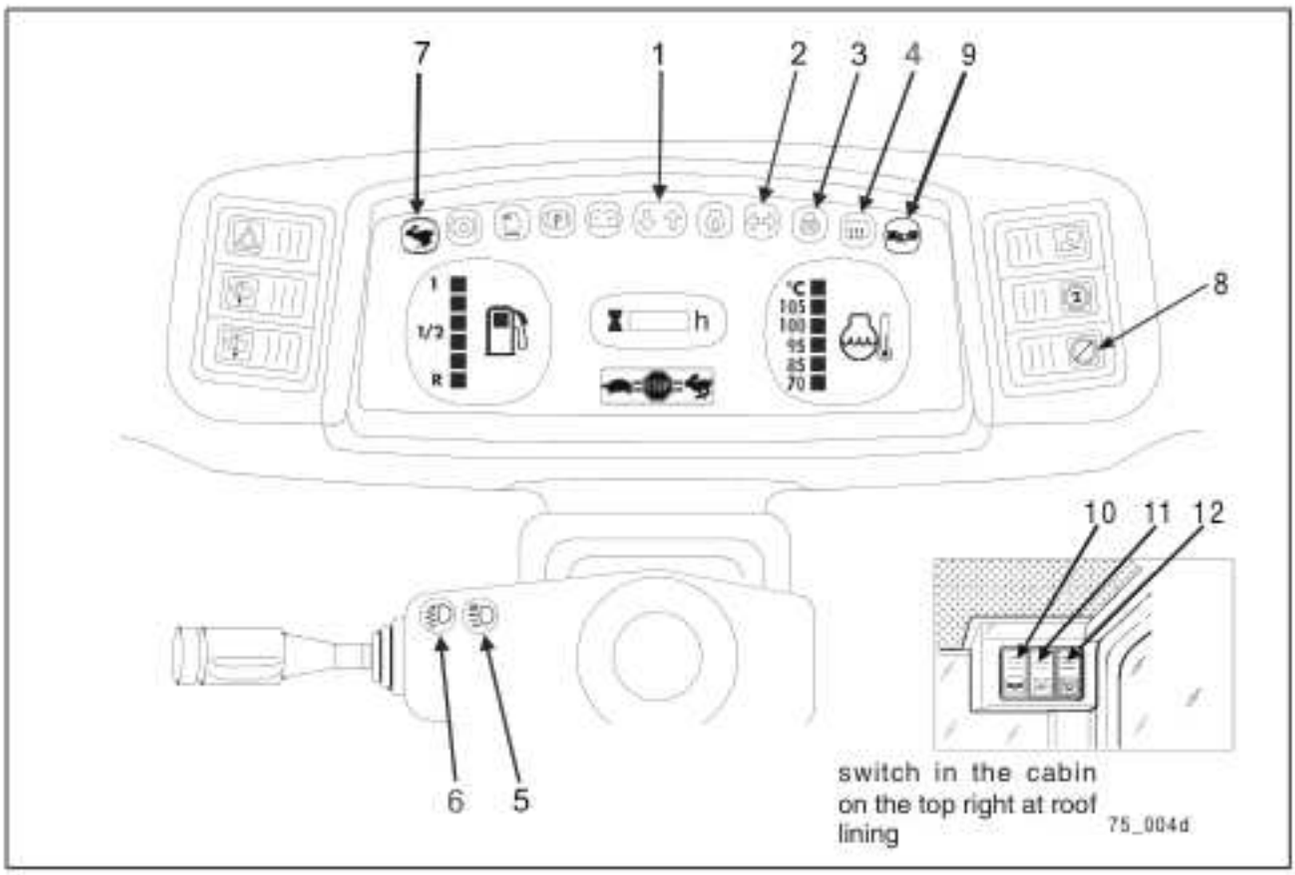



(1) Driving direction switch indicator
(2) Direction indicator control lamp
(3) Air preheater control lamp
(4) Heated rear windscreen indicator
(5) High beam control lamp
(6) Low beam control lamp
(7) High-speed gear control lamp, high-speed gear switched on (active only with high speed version)
(8) Control lamp in the high-speed gear switch, high-speed gear switched off (option)
(9) ALS-Electronics control lamp (active only with built in ALS-Electronics)
(10) Control lamp in the ALS-Electronics switch (option)
(11) Control lamp in the air conditioning switch (option)
(12) Warning beacon control lamp (option)


MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

Replacing the Oil Filter Cartridge

10. Turn the filter screwdriver anti-clockwise to unscrew the filter cartridge (1).
11. Clean the filter holder. Completely fill up the new filter cartridge with engine oil. Slightly oil both the gasket and the thread of the cartridge with engine oil. Screw in the filter cartridge again.
12. When installing the filter cartridge, make sure that the sealing surface of the cartridge slightly touches the filter holder. Then, tighten the filter cartridge according to the filter manufacturer's specification.
13. After replacing the filter cartridge, fill in clean engine oil until the oil level reaches up to the (H) marking on the oil dipstick.
    For details on recommended engine oils see section "Lubricants and Service Fluids".
14. Close the oil filler (2).
15. Let the engine run in idle for about five minutes and check whether oil is leaking out.
16. Switch off the engine.
17. Wait about ten minutes, then check the oil level again. The oil level must be between the 'H' and 'L' markings on the oil dipstick.
    For further details see section "Checks Prior to Start".

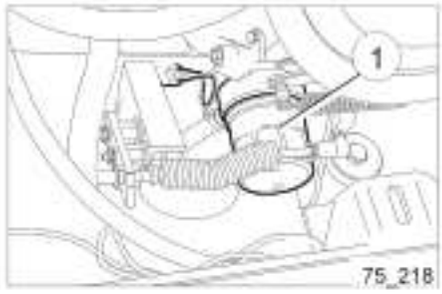

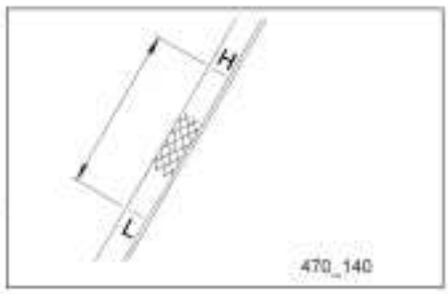

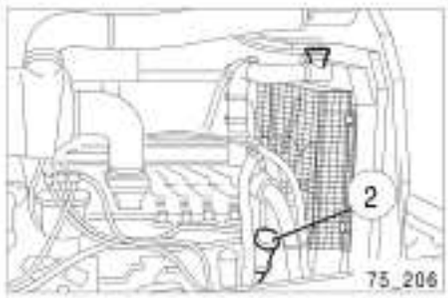

MidWestTech | Komatsu WA95-3 Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >