Workshop Manual

VEBM200100

20F 20FS

WHEEL LOADER

MidWestTech | Komatsu 20F, 20FS Wheel Loader Service Manual | Publication VEBM200100

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

	Page
Preface	0-2
Description of the machine	0-7
Machine identification	0-8
Noise emission levels; Vibration levels	0-11
Dimensions, weights	0-12
Loading and bracing	0-16

Safety precautions

Warning information and symbols	1-1
Use as intended	1-1
Organizational measures	1-1
Personnel selection, qualification and basic duties	1-2
Notes on safety in particular phases of operation	1-3
References to specific hazards	1-6
Hauling, towing and re-commissioning	1-8
Operation	1-9
Safety covers	1-9
Genuine HANOMAG spare parts	1-9
Parking the machine	1-10
Articulation lock	1-10
Locking the control levers; Supporting the engine cover	1-13
Safety precautions: Machines with forks	1-15
Driving; handling and stacking loads	1-16
Environmentally acceptable use of the machine	1-17

MidWestTech | Komatsu 20F, 20FS Wheel Loader Service Manual | Publication VEBM... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Page

Instruments and controls 2-3

Symbols 2-4
Starter switch; Socket 2-7
Service hour meter; Engine coolant temperature gauge; Fuel gauge; Fuel tank 2-8

Warning lights for parking brake, battery charging, engine oil pressure; Air cleaner service indicator 2-11
Lighting; Turn signals; Horn 2-12

Windscreen wiper, windscreen washer 2-15
Cab doors 2-16
Operator's seat 2-19

Stowage compartment; Engine cover 2-20
Heating and ventilating system 2-23

Operation

Starting and stopping the engine; Flame start system 3-2

Transmission lever 3-5
Accelerator pedal; Brake pedal 3-6
Parking brake; Steering system 3-9
Stopping the machine 3-10
Driving on the road 3-13
Towing the machine 3-14

Loader hydraulics

Control levers 3-17
Arm rest; Locking the control levers 3-18
Bucket position indicator 3-21
Quick-attach coupler 3-22
Quick-attach coupler (4-in-1 bucket) 3-25

MidWestTech | Komatsu 20F, 20FS Wheel Loader Service Manual | Publication VEBM... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Page

INSPECTION AND MAINTENANCE

Running-in period 4-1

Inspection and maintenance chart 4-3


Lubricant, fuel and coolant specifications; refill capacities 4-4

Lubricants:	Engine oils, hydraulic oils, gear oils	4-5
Diesel fuels		4-6
Cooling system protection		4-7

Description of the inspection and maintenance operations

Engine	Oil level	4-8
	Oil change; Oil filter element; Crankcase breather	4-11
	Valve clearance; Fuel injectors	4-12
	Drive belt tension	4-16
Fuel system	Fuel tank	4-19
	Water separator	4-20
	Fuel filter	4-23
	Priming the fuel system	4-24
Cooling system	Coolant level	4-28
	Changing the coolant	4-31
	Cleaning the radiator	4-31
Air cleaner	Main filter element	4-32
	Safety element	4-39
Battery	Electrolyte level and state of charge	4-40
Front axle	Oil level; Oil change	4-43
Rear axle	Oil level; Oil change	4-44
Transfer gear	Oil level; Oil change	4-47
Service brake	Oil level	4-51
	Changing the oil; Bleeding	4-52
	Brake disc wear	4-55
Parking brake	Adjusting	4-59
Hydraulic system	Oil level; Adding oil; Pressurizing the oil tank	4-60
	Oil change	4-63
	Filter elements	4-64
Lubricating the machine	Articulation joint, steering cylinder; Door hinges	4-67
	Universal shafts	4-68
Lubricating the equipment	Loader arms; Bucket cylinder; Tilt lever; Tilt link; Lift cylinder; Quick-attach coupler	4-71
System pressures	Checking	4-72

MidWestTech | Komatsu 20F, 20FS Wheel Loader Service Manual | Publication VEBM... Order the manual at mid-west-tech.com >

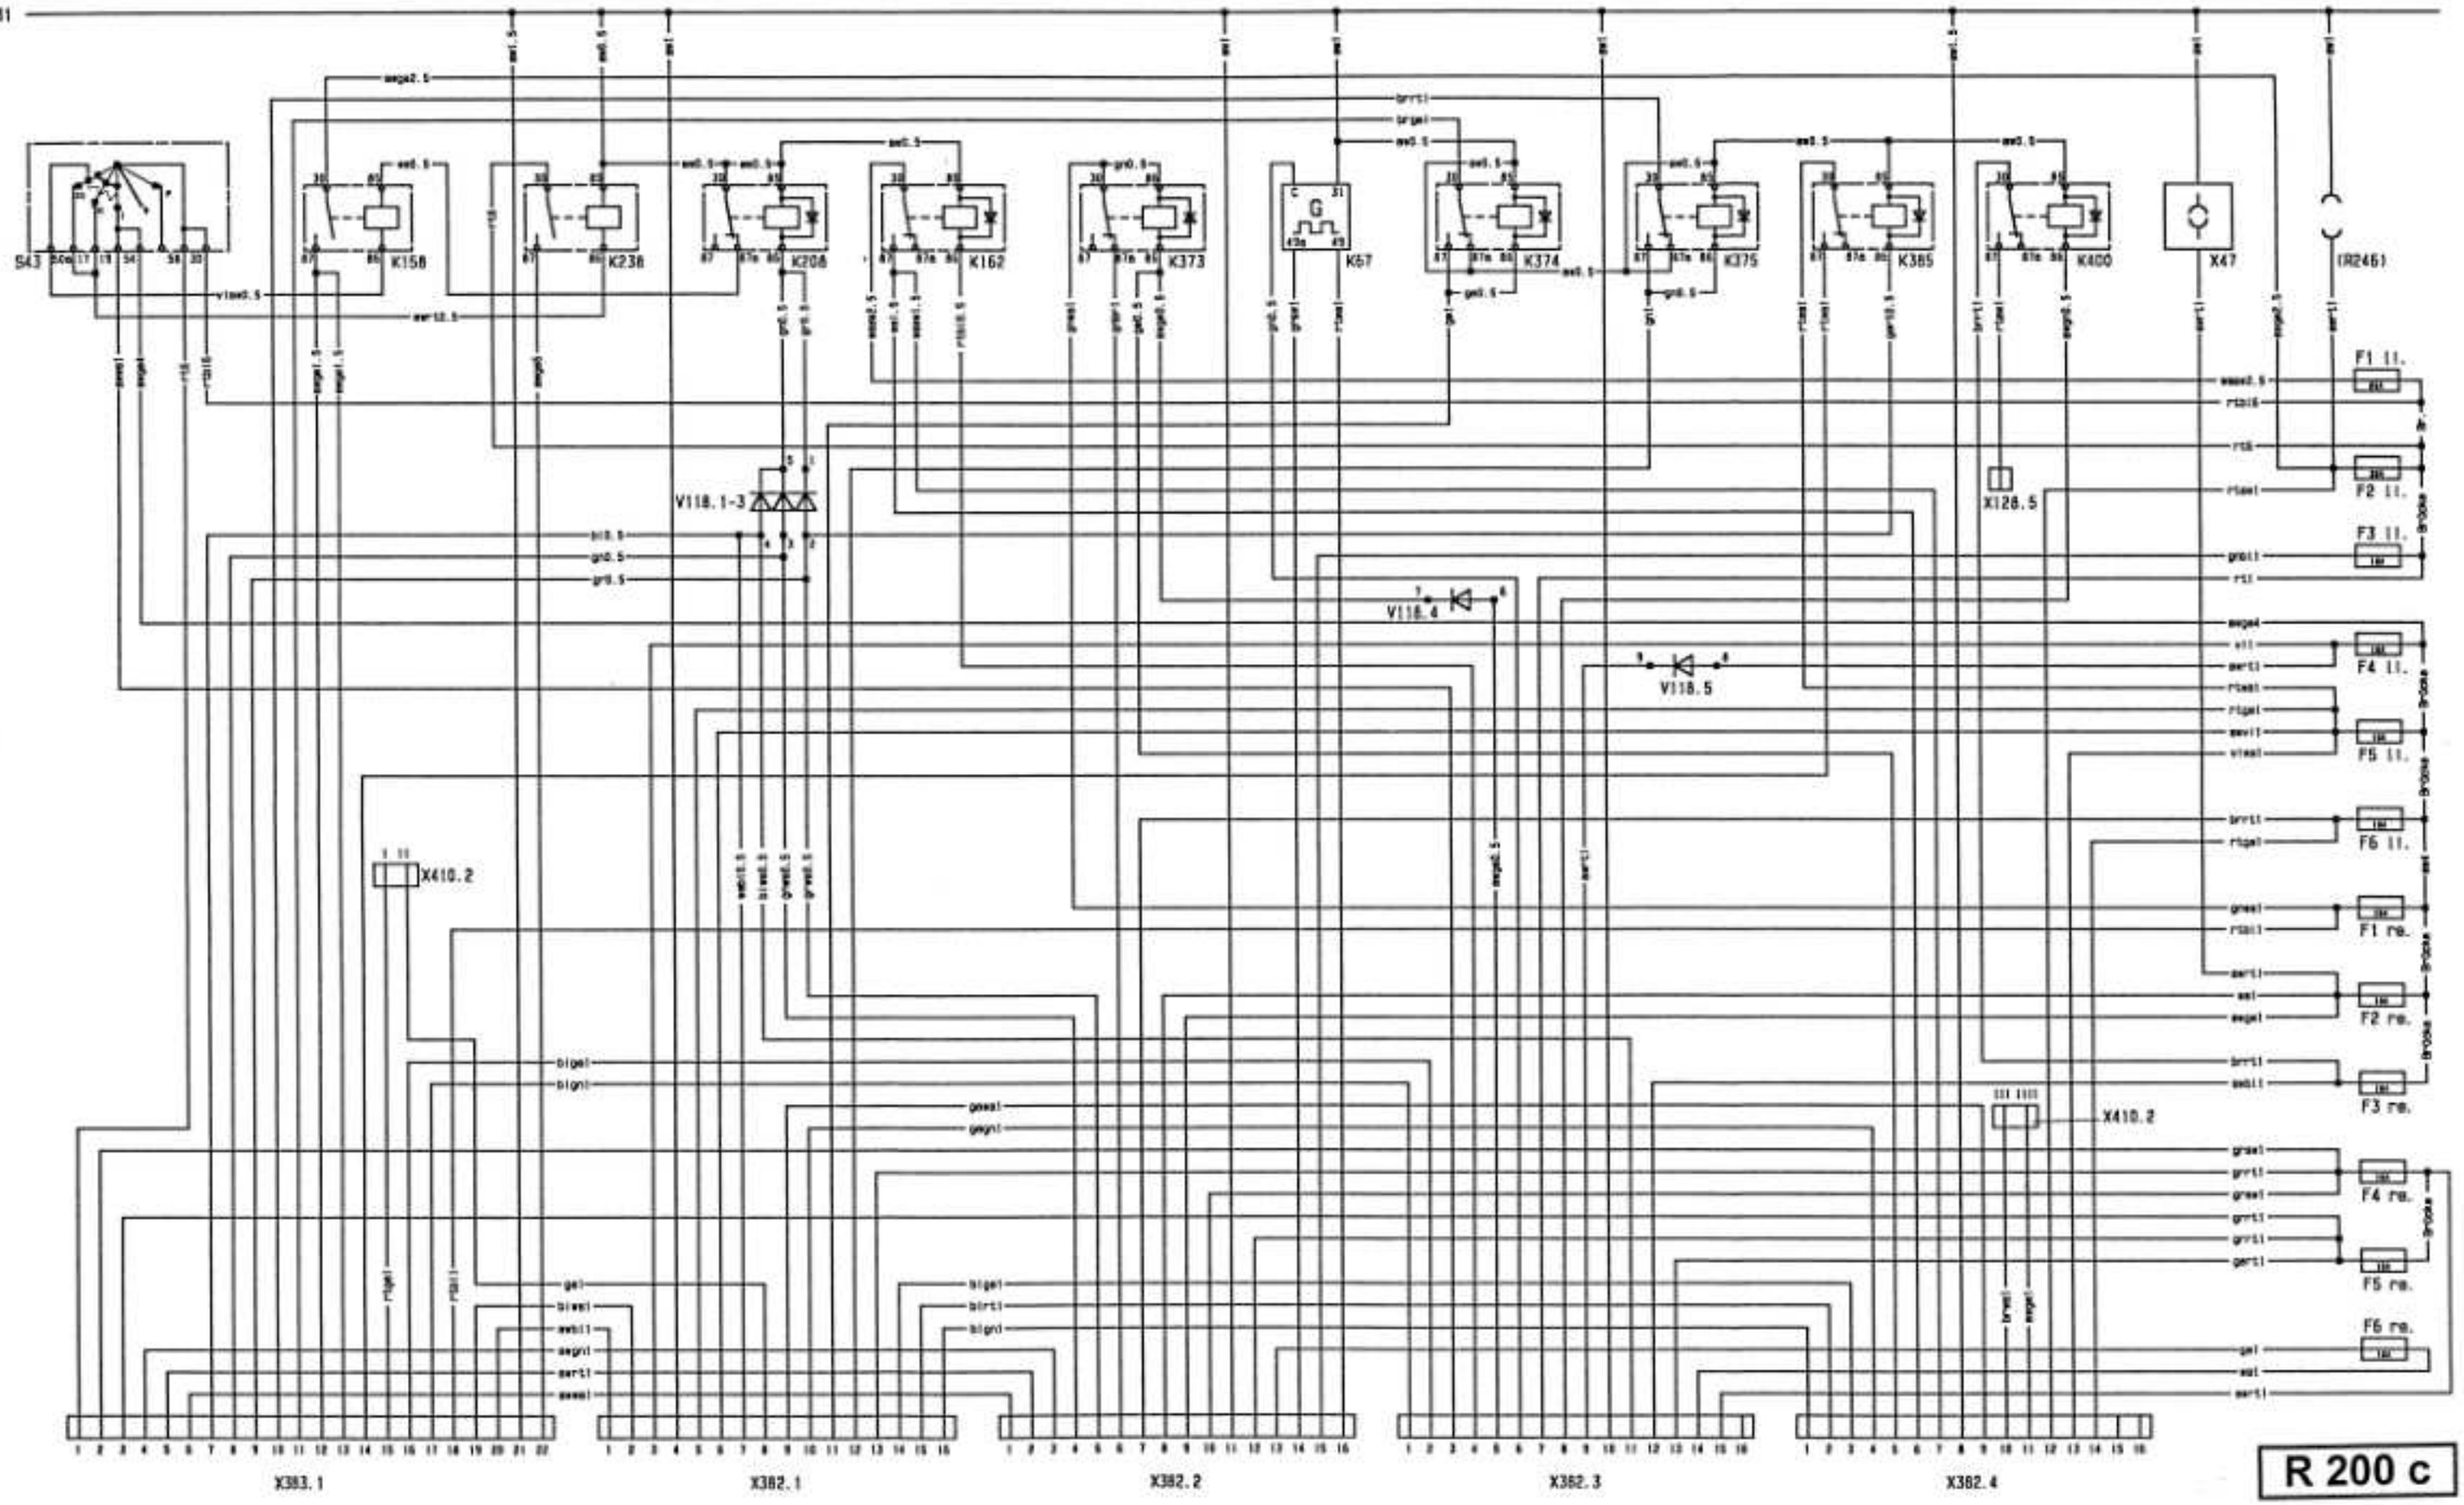

MidWestTech | Komatsu 20F, 20FS Wheel Loader Service Manual | Publication VEBM200100

Order the manual at mid-west-tech.com >