PART NO. WADCJ0-EN-00

HITACHI

Reliable solutions

Workshop Manual

ZX35U-5A

Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual	: Vol. No.TADCJ0-EN
Workshop Manual	: Vol. No.WADCJ0-EN
Engine Manual	: Vol. No.ETADB-EN, EWADB-EN

MidWestTech | Hitachi ZX35U-5A Excavator Workshop Service Manual | Publication WADCJ0-EN-00

Order the manual at mid-west-tech.com >

Safety Alert Symbol and Headline Notations

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury of machine damage.

⚠ This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury.
Never fail to follow the safety instructions prescribed along with the safety alert symbol.
The safety alert symbol is also used to draw attention to component/part weights.
To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

⚠ **CAUTION:**
Indicates potentially hazardous situation which could, if not avoided, result in personal injury or death.

IMPORTANT:
Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.

NOTE:
Indicates supplementary technical information or know-how.

Units Used

SI Units (International System of Units) are used in this manual. MKSA system units and English units are also indicated in parentheses just behind SI units.

Example: 24.5 MPa (250 kgf/cm², 3560 psi)


A table for conversion from SI units to other system units is shown below for reference purposes.

Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937
	mm	ft	0.003281
Volume	L	US gal	0.2642
	L	US qt	1.057
	m^3	yd^3	1.308
Weight	kg	lb	2.205
Force	N	kgf	0.10197
	N	lbf	0.2248
Torque	N·m	kgf·m	0.10197
Pressure	MPa	kgf/cm^2	10.197
	MPa	psi	145.0
Power	kW	PS	1.360
	kW	HP	1.341
Temperature	°C	°F	°C×1.8+32
Velocity	km/h	mph	0.6214
	min^{-1}	rpm	1.0
Flow rate	L/min	US gpm	0.2642
	mL/rev	cc/rev	1.0

NOTE: The numerical value in this manual might be different from the above-mentioned table.

MidWestTech | Hitachi ZX35U-5A Excavator Workshop Service Manual | Publication... Order the manual at mid-west-tech.com >

Lower Roller

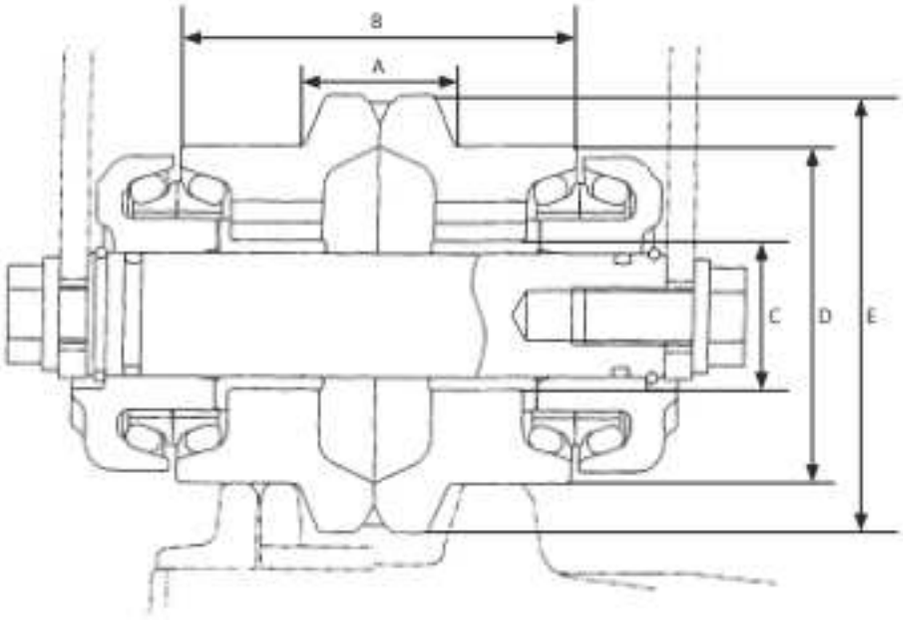

W1NG-03-06-001

Unit: mm (in)

	Standard	Allowable Limit	Remedy
A	31 (1.22)	23 (0.906)	Replace
B	110 (4.33)	-	
C	34 (1.34)	-	
D	85 (3.35)	77 (3.03)	
E	107 (4.21)	-	

Axle and Bushing

Unit: mm (in)

		Standard	Allowable Limit	Remedy
Axle	Outer Diameter	30 (1.18)	29.2 (1.15)	Replace
Bushing	Inner Diameter	30 (1.18)	30.5 (1.20)	
	Flange Thickness	2.0 (0.079)	1.5 (0.059)	

NOTE: Values in [ ] are just for reference.


Lubrication Oil

Engine Oil (API CD class, SAE #30)
Amount of oil: 50 ml (50 cm^3)

MidWestTech | Hitachi ZX35U-5A Excavator Workshop Service Manual | Publication... Order the manual at mid-west-tech.com >



WAD8-03-08-019

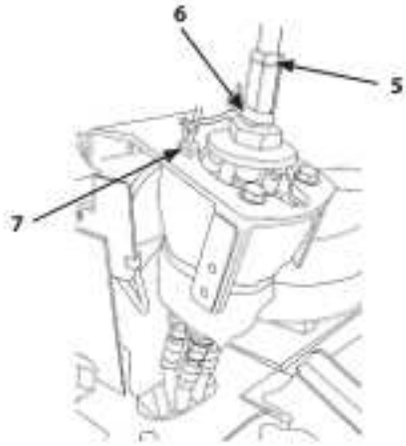

W1NG-02-06-001

8. Secure harness to the shaft mounting part of pilot valve (4) with clip bands (6).
9. Install boot (3) and the lever (1) assembly to pilot valve (4). Connect connector (2). Secure the lever (1) assembly to pilot valve (4) with lock nut (5).

MidWestTech | Hitachi ZX35U-5A Excavator Workshop Service Manual | Publication... Order the manual at mid-west-tech.com >

Installation

CAUTION: Front attachment weight: 416 kg (920 lb)

1. Hoist the front attachment. Fit the boom foot part to the mounting hole of the swing post. Insert the thrust plates to both right and left of the boom foot parts and adjust the right and left clearances within 1 mm.

CAUTION: Metal fragments may fly off when a hammer is used. Wear necessary protection, such as goggles, helmets, etc in order to prevent personal injury.


2. Install boom foot pin (3) by using a hammer.

IMPORTANT: Install nut (4) so that the clearance between nut (4) and the swing post boss should be 3 to 5 mm.


3. Apply LOCTITE #262 onto bolt (2). Install bolt (2) and nuts (4) (2 used).
   - : 19 mm
   - : 90 N·m (9 kgf·m, 66 lbf·ft)
4. Connect hoses (1) (4 used).
   - : 22 mm
   - : 40 N·m (4 kgf·m, 29.5 lbf·ft)
   - : 27 mm
   - : 80 N·m (8 kgf·m, 59 lbf·ft)
5. Connect hoses (8) (2 used) to bracket (9).
   - : 22 mm
   - : 40 N·m (4 kgf·m, 29.5 lbf·ft)

CAUTION: Boom cylinder (7) weight: 41 kg (91 lb)

6. Connect hoses (6) (2 used) to boom (5). Attach the nylon slings onto boom cylinder (7). Hoist and hold boom cylinder (7).
   - : 22 mm
   - : 40 N·m (4 kgf·m, 29.5 lbf·ft)

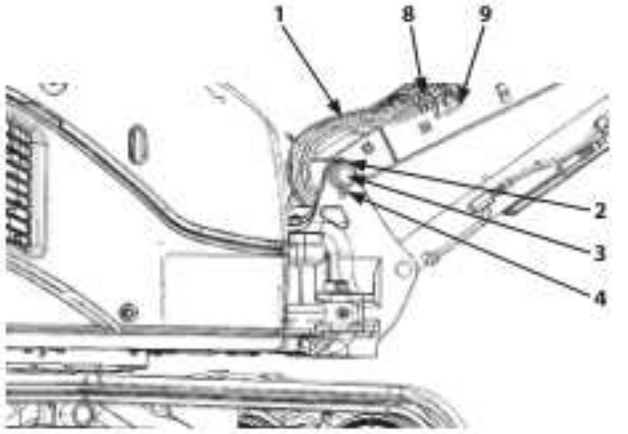

W1M7-04-01-004

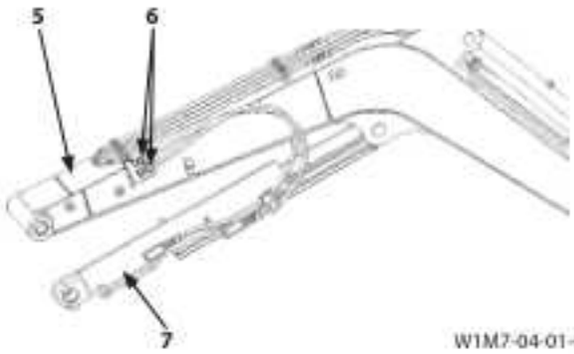

W1M7-04-01-002

MidWestTech | Hitachi ZX35U-5A Excavator Workshop Service Manual | Publication... Order the manual at mid-west-tech.com >