PART NO. WDEA-EN-00

HITACHI

Reliable solutions

Workshop Manual

ZX
70-5G
70LC-5G
Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TODEA-EN
Technical Manual (Troubleshooting)	: Vol. No.TTDEA-EN
Workshop Manual	: Vol. No.WDEA-EN
Engine Manual	: Vol. No.ETADB-EN, EWADB-EN

MidWestTech | Hitachi ZX70-5G, ZX70LC-5G Excavator Workshop Service Manual | Publication WDEA-EN-00

Order the manual at mid-west-tech.com >

Safety Alert Symbol and Headline Notations

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury of machine damage.

⚠ This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury. Never fail to follow the safety instructions prescribed along with the safety alert symbol.
The safety alert symbol is also used to draw attention to component/part weights.
To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

⚠ **CAUTION:**
Indicates potentially hazardous situation which could, if not avoided, result in personal injury or death.

IMPORTANT:
Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.

NOTE:
Indicates supplementary technical information or know-how.

Units Used

SI Units (International System of Units) are used in this manual. MKSA system units and English units are also indicated in parentheses just behind SI units.

Example: 24.5 MPa (250 kgf/cm², 3560 psi)

A table for conversion from SI units to other system units is shown below for reference purposes.


Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937
	mm	ft	0.003281
Volume	L	US gal	0.2642
	L	US qt	1.057
	m^3	yd^3	1.308
Weight	kg	lb	2.205
Force	N	kgf	0.10197
	N	lbf	0.2248
Torque	N·m	kgf·m	0.10197
Pressure	MPa	kgf/cm^2	10.197
	MPa	psi	145.0
Power	kW	PS	1.360
	kW	HP	1.341
Temperature	°C	°F	°C×1.8+32
Velocity	km/h	mph	0.6214
	min^{-1}	rpm	1.0
Flow rate	L/min	US gpm	0.2642
	mL/rev	cc/rev	1.0

NOTE: The numerical value in this manual might be different from the above-mentioned table.

MidWestTech | Hitachi ZX70-5G, ZX70LC-5G Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >

5. Loosen and remove bolts, washers (1) (4 used) for engine cover (2). Remove engine cover (2).


   : 17 mm

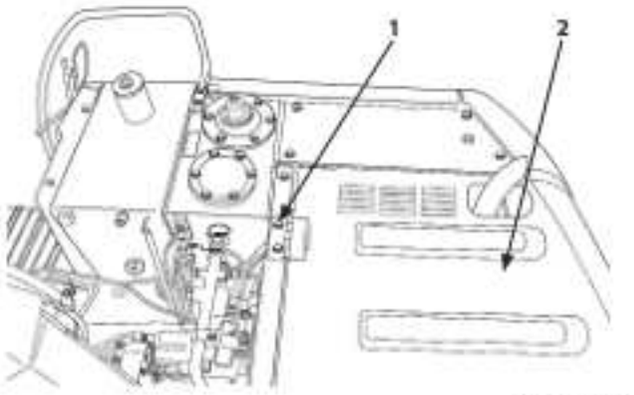

M1CD-01-008

6. Push coolant reservoir (6) upward. Remove coolant reservoir (6) from the mounting bracket. Remove bolts, washers (5) (2 used). Remove bracket (4) from radiator (3). Remove cap (10).

   : 17 mm

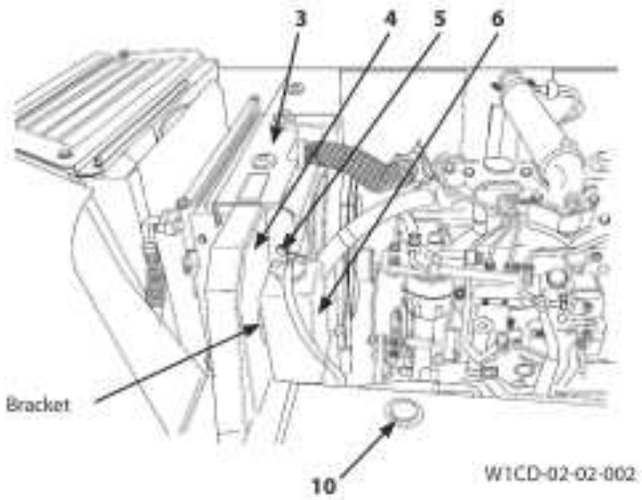


W1CD-02-02-002

CAUTION: Counterweight (7) weight: 800 kg (1770 lb)

7. Install Freno-Linkbolts (B-27, M27, pitch 3.0 mm) to counterweight (7). Attach the wire ropes onto the Freno-Linkbolts. Hold counterweight (7) by using a crane.
8. Loosen and remove bolts (9) (4 used) and washers (8) (4 used) for counterweight (7). Slightly float counterweight (7) by using a crane. Slide counterweight (7) backwards. Hoist and remove counterweight (7).

   : 30 mm

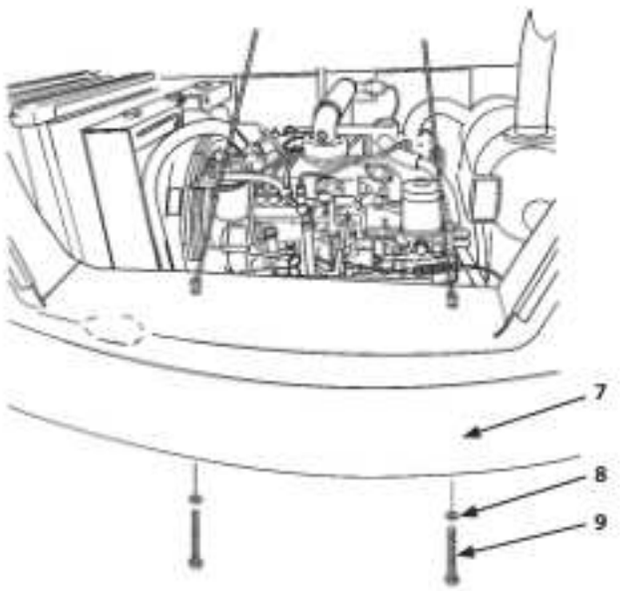

W1CD-02-02-003

MidWestTech | Hitachi ZX70-5G, ZX70LC-5G Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >

Disassembly of Front Idler

CAUTION: The idler (03A) assembly weight: 52 kg (115 lb)

1. Remove socket bolts (07) (4 used). Remove yoke (08) from bearings (00) (2 used).

   : 12 mm

CAUTION: The idler (03A) assembly weight: 42 kg (93 lb)

2. Place the idler (03A) assembly horizontally. Remove plug (06) on the lower side. Drain off engine oil from the idler (03A) assembly.

   : 6 mm


NOTE: Oil amount: 0.14 L (0.15 US qt)

CAUTION: Metal fragments may fly off when a hammer is used. Wear necessary protection, such as goggles, helmets, etc in order to prevent personal injury.

3. Remove pin (04) from bearing (00) on the upper side by using a round bar and a hammer.

NOTE: Diameter of round bar: 10 mm (0.4 in)


4. Put the matching marks on bearing (00) and axle (01). Remove the axle (01) assembly from the idler (03A) assembly by using a press.

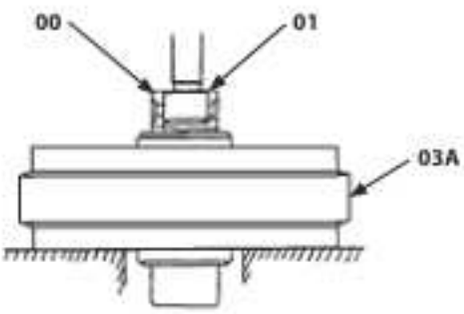

W105-03-05-008

IMPORTANT: Handle floating seals with care. (Refer to W4-5-3.)

5. Remove bearing (00) from the upper side of idler (03A). Remove floating seals (05) (2 used) from idler (03A) and bearing (00).

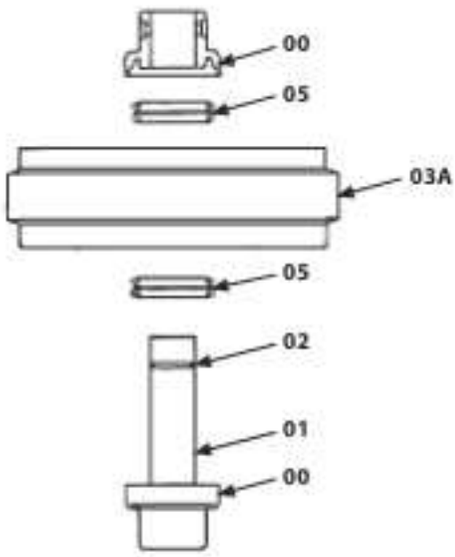

W105-03-05-009

MidWestTech | Hitachi ZX70-5G, ZX70LC-5G Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >