WEAM000101

Operation & Maintenance Manual

PC20R-8
PC27R-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC20R-8 - F30791 and up

PC27R-8 - F31103 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Maintenance... Order the manual at mid-west-tech.com >

Page

TABLE OF CONTENTS

1.1 FOREWORD **1**

1.2 INFORMATION ON SAFETY **2**

1.3 INTRODUCTION **4**

1.3.1 INTENDED USES 4

1.3.2 IMPROPER OR UNAUTHORIZED USES 4

1.3.3 MAIN CHARACTERISTICS 5

1.3.4 RUNNING-IN 5

1.4 PRODUCT IDENTIFICATION **6**

1.4.1 MACHINE SERIAL NUMBER 6

1.4.2 MACHINE IDENTIFICATION PLATE 6

1.4.3 ENGINE SERIAL NUMBER AND EXHAUST GAS EMISSION PLATE 7

1.4.4 TRAVEL REDUCTION GEAR SERIAL NUMBER 7

1.4.5 SWING MOTOR SERIAL NUMBER (for PC20R only) 8

1.4.6 SWING REDUCTION GEAR SERIAL NUMBER (for PC27R only) 8

1.4.7 CAB SERIAL NUMBER 8

1.4.8 SERIAL NUMBERS AND DEALER'S ADDRESS 9

SAFETY AND ACCIDENT PREVENTION

2.1 SAFETY, NOISE AND VIBRATION PLATES **20**

2.1.1 POSITION OF THE SAFETY PLATES 20

2.1.2 PICTOGRAMS AND RELEVANT MEANINGS 22

2.1.3 POSITION OF THE NOISE PLATES ON MACHINES WITH CAB 26

2.1.4 POSITION OF THE NOISE PLATES ON MACHINES WITH CANOPY 27

2.1.5 VIBRATIONS TO WHICH THE OPERATOR IS SUBJECTED 27

2.2 GENERAL PRECAUTIONS **28**

2.2.1 GENERAL SAFETY RULES 28

2.2.2 SAFETY DEVICES AND GUARDS 28

2.2.3 CLOTHING AND PERSONAL PROTECTION ITEMS 28

2.2.4 UNAUTHORIZED MODIFICATIONS 29

2.2.5 LEAVING THE OPERATOR'S SEAT 29

2.2.6 GETTING ON AND OFF THE MACHINE 30

2.2.7 PREVENTING FIRES DUE TO FUEL AND OIL 30

2.2.8 PREVENTING BURNS 31

2.2.9 PREVENTING DAMAGE DUE TO ASBESTOS POWDER 31

2.2.10 PREVENTING DAMAGE CAUSED BY THE WORK EQUIPMENT 32

2.2.11 FIRE EXTINGUISHERS AND FIRST AID KIT 32

2.2.12 PRECAUTIONS CONCERNING THE CAB STRUCTURE 32

2.2.13 PRECAUTIONS CONCERNING THE EQUIPMENT 32

2.3 PRECAUTIONS TO BE TAKEN BEFORE STARTING THE ENGINE **33**

2.3.1 SAFETY ON THE WORK SITE 33

2.3.2 FIRE PREVENTION 33

2.3.3 PRECAUTIONS TO BE TAKEN FOR THE OPERATOR'S CAB 33

2.3.4 ROOM VENTILATION 34

2.3.5 PRECAUTIONS TO BE TAKEN FOR THE LIGHTS 34

2.3.6 CLEANING THE WINDOWS - CHECKING THE WINDSHIELD WIPER BLADES 34

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >

Page

2.4 PRECAUTIONS TO BE TAKEN WHEN WORKING 35
2.4.1 STARTING THE ENGINE 35
2.4.2 CHECK THE DIRECTION BEFORE STARTING THE MACHINE 35
2.4.3 CHECKS FOR TRAVELLING IN REVERSE 35
2.4.4 MOVING THE MACHINE 36
2.4.5 MOVING ON SLOPES 37
2.4.6 WORKING ON SLOPES 38
2.4.7 UNAUTHORIZED OPERATIONS 38
2.4.8 PREVENTING ELECTROCUTION 39
2.4.9 VISIBILITY 40
2.4.10 WORKING ON ICY OR SNOW-COVERED SURFACES 40
2.4.11 PREVENTING DAMAGE CAUSED BY THE WORK EQUIPMENT 40
2.4.12 WORKING ON LOOSE GROUND 40
2.4.13 PARKING THE MACHINE 41
2.5 TRANSPORTING THE MACHINE ON MOTOR VEHICLES 42
2.5.1 LOADING AND UNLOADING 42
2.5.2 TRANSPORT 42
2.6 BATTERY 43
2.6.1 PREVENTING RISKS THAT MAY BE DUE TO THE BATTERY 43
2.6.2 STARTING WITH BOOSTER CABLES 43
2.7 PRECAUTIONS FOR THE REMOVAL 44
2.8 PRECAUTIONS FOR MAINTENANCE 45
2.8.1 WARNING PLATES 45
2.8.2 TOOLS 45
2.8.3 PERSONNEL 45
2.8.4 EQUIPMENT 46
2.8.5 WORKING UNDER THE MACHINE 46
2.8.6 CLEANING THE MACHINE 46
2.8.7 USE OF THE ENGINE DURING MAINTENANCE OPERATIONS 47
2.8.8 PERIODICAL CHANGE OF THE PARTS THAT ARE CRITICAL FOR SAFETY 47
2.8.9 STOP THE ENGINE BEFORE CARRYING OUT ANY MAINTENANCE OPERATION OR INSPECTION 47
2.8.10 RULES TO BE FOLLOWED DURING FUEL OR OIL TOPPING UP 48
2.8.11 CHECKING THE COOLANT LEVEL IN THE RADIATOR 48
2.8.12 USING LAMPS 48
2.8.13 PRECAUTIONS CONCERNING THE BATTERY AND THE ALTERNATOR 49
2.8.14 PRECAUTIONS CONCERNING THE STARTER 49
2.8.15 HANDLING HIGH-PRESSURE PIPES 50
2.8.16 PRECAUTIONS TO BE TAKEN WHEN HANDLING HIGH-PRESSURE OIL 50
2.8.17 PRECAUTIONS FOR MAINTENANCE OPERATIONS AT HIGH TEMPERATURES AND HIGH PRESSURE 50
2.8.18 COOLING FAN AND BELT 51
2.8.19 WASTE MATERIALS 51
2.8.20 PRECAUTIONS FOR THE USE OF THE synthetic biodegradable oil type HEES 51

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >

Page

DESCRIPTION AND USE OF THE MACHINE

3.1 SAFETY LOCKS 54
3.1.1 MACHINE LOCKS 54

3.2 GENERAL VIEWS 55
3.2.1 GENERAL VIEW OF THE MACHINE WITH CAB 55
3.2.2 GENERAL VIEW OF THE MACHINE WITH CANOPY 56
3.2.3 GENERAL VIEW OF THE DRIVER'S SEAT 57

3.3 INSTRUMENTS AND CONTROLS 58
3.3.1 INSTRUMENTS 58
3.3.2 WARNING LIGHTS 60
3.3.3 SWITCHES AND PUSH BUTTONS 62
3.3.4 ELECTRICAL ACCESSORIES 65
3.3.5 MACHINE CONTROLS 67


3.4 FUSES AND RELAYS 75
3.4.1 FUSES 75
3.4.1.1 EQUIPMENT FUSES 75
3.4.1.2 MAIN FUSE 76
3.4.2 RELAYS 77

3.5 GUARDS AND DRIVER'S SEAT 78
3.5.1 ENGINE HOOD 78
3.5.2 RIGHT COUNTERWEIGHT 79
3.5.3 CANOPY 79
3.5.4 CAB 80
3.5.5 VENTILATION AND HEATING 83
3.5.6 SEAT 84
3.5.7 SAFETY BELT 84
3.5.8 EMERGENCY EXIT 85
3.5.9 TECHNICAL DOCUMENTATION CASE 85
3.5.10 FIRE EXTINGUISHER 86
3.5.11 FIRST AID KIT 86


3.6 USE OF THE MACHINE 87
3.6.1 CHECKS BEFORE STARTING THE ENGINE 87
3.6.1.1 VISUAL CHECKS 87
3.6.1.2 DAILY CHECKS 87
3.6.1.3 OPERATIONAL CHECKS 88
3.6.2 STARTING THE ENGINE 89
3.6.2.1 STARTING WITH WARM ENGINE OR IN TEMPERATE CLIMATES 89
3.6.2.2 STARTING WITH COLD ENGINE OR IN COLD CLIMATES 90
3.6.3 WARMING THE ENGINE 91
3.6.4 HEATING THE HYDRAULIC OIL 91
3.6.5 HOW TO MOVE THE MACHINE 91
3.6.5.1 STEERING (CHANGING DIRECTION) 93
3.6.5.2 MOVING ON SLOPES 94
3.6.5.3 MAXIMUM IMMERSION DEPTH 95


MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >

3.3.5 MACHINE CONTROLS

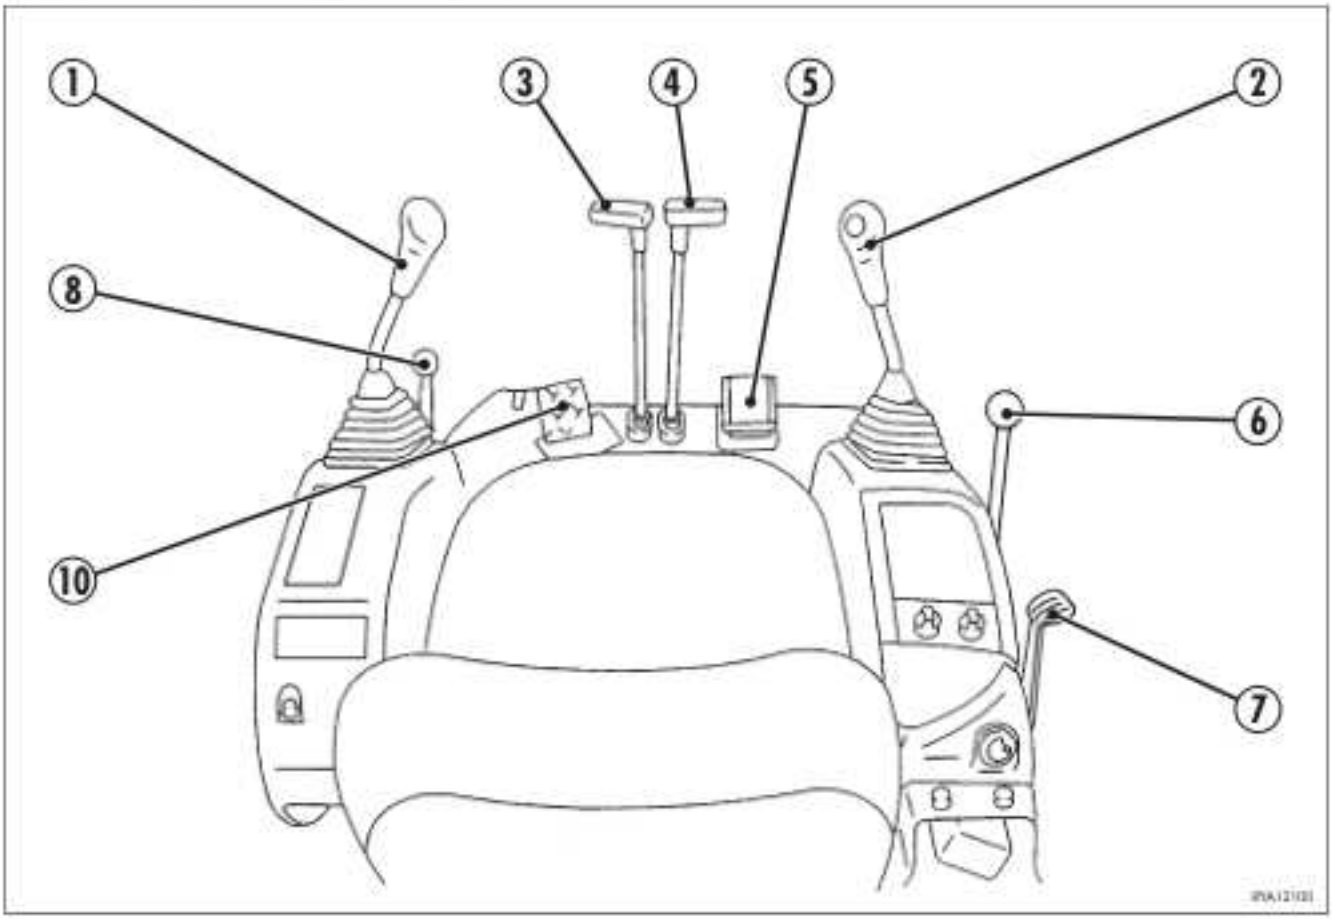

1 - Left equipment control lever
2 - Right equipment control lever
3 - Left travel and steering control lever
4 - Right travel and steering control lever
5 - Boom swing control pedal
6 - Blade control lever
7 - Accelerator lever
8 - Left safety device control lever
9 - Speed increase push button
10 - Optional equipment control pedal
11 - Upper structure rotation locking lever

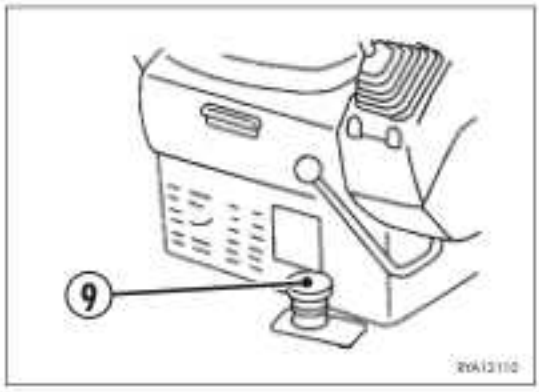

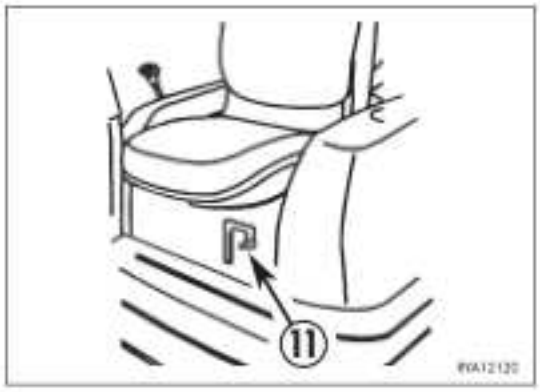

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >

4.7 MAINTENANCE PLAN

4.7.1 WHEN REQUIRED

N.	PART	OPERATION	PAGE
a	Cooling circuit	Wash	136
b	Fuel tank	Drain the condensate	137
c	Electrical system	Check	138
d	Steel tracks	Check and adjust the tension	138
e	Rubber tracks	Check	140
f	Rubber tracks	Check and adjust the tension	142
g	Rubber tracks	Change	144
h	Air cleaner	Check, clean or change	146

4.7.2 MAINTENANCE INTERVALS IN CASE OF USE OF THE DEMOLITION HAMMER (BREAKER)

N.	PART	OPERATION	PAGE
a	Hydraulic oil filter	Change the cartridge	147
b	Hydraulic oil tank	Change the oil	147

4.7.3 CHECKS BEFORE STARTING

N.	PART	OPERATION	PAGE
a	Various checks	—	148
b	Coolant	Check and top up	148
c	Fuel tank	Check and top up	149
d	Engine oil pan	Check and top up	149
e	Hydraulic oil tank	Check and top up	150
f	Air cleaner clogging indicator	Check	151
g	Fuel filter	Check	151

4.7.4 MAINTENANCE AFTER THE FIRST 50 HOURS OF OPERATION (Only for machines in which the synthetic biodegradable oil type HEES is used)


N.	PART	OPERATION	PAGE
a	Hydraulic oil drain filter (Only for machines with synthetic biodegradable oil)	Change	157

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >

5.1 TECHNICAL DATA


5.1.1 STANDARD OVERALL DIMENSIONS (for model PC20R only)

MACHINE WITH CAB

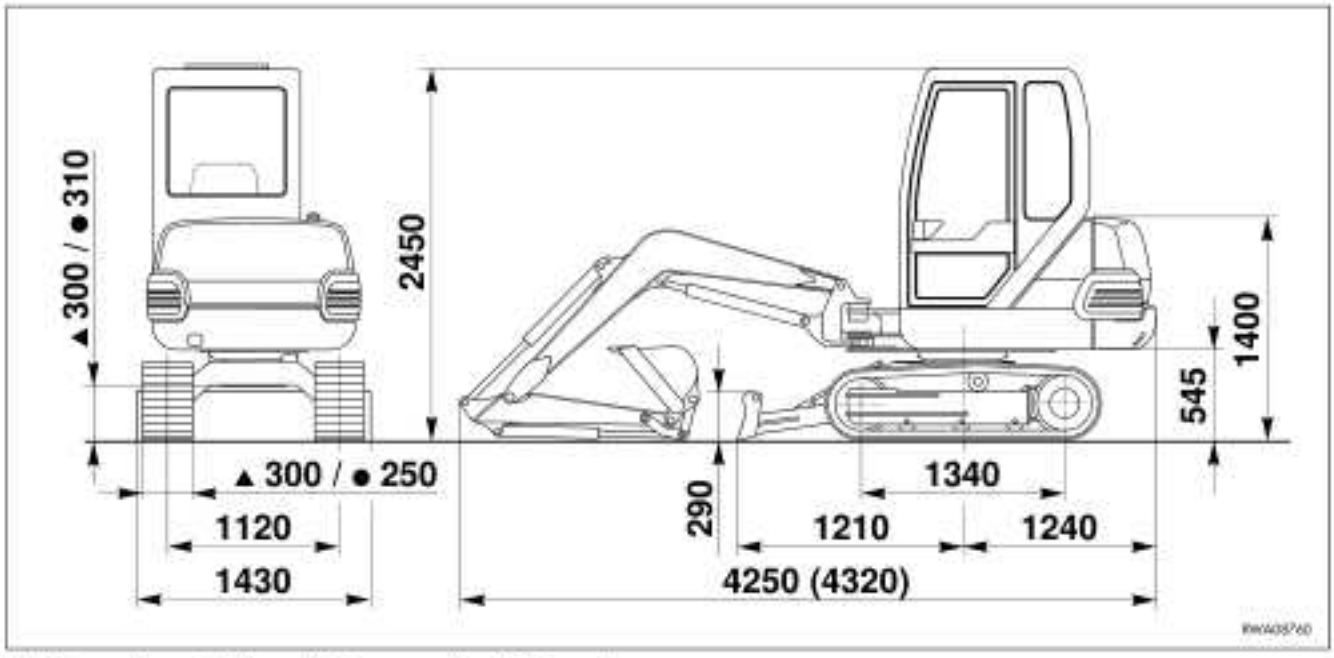

( ) Dimensions with long digging arm (L=1320 mm)
▲ Steel tracks
● Rubber tracks

MACHINE WITH CANOPY

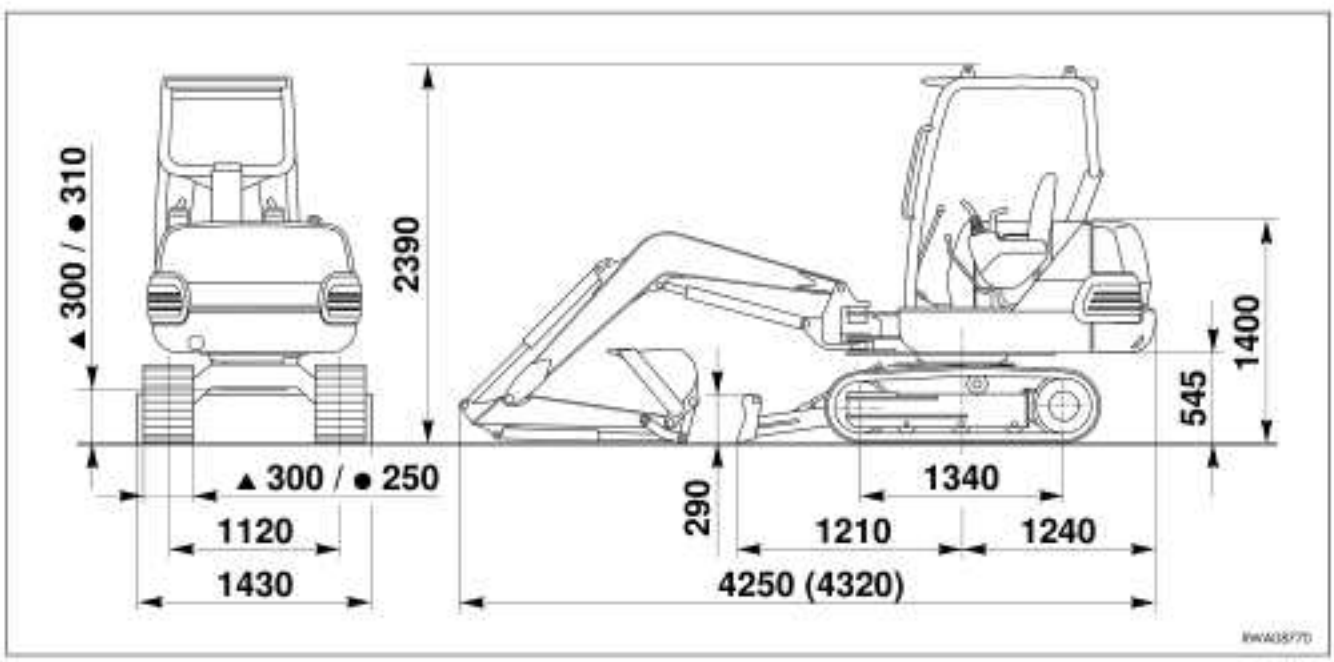

( ) Dimensions with long digging arm (L=1320 mm)
▲ Steel tracks
● Rubber tracks

MidWestTech | Komatsu PC20R-8, PC27R-8 Hydraulic Excavator Operation & Mainten... Order the manual at mid-west-tech.com >