WEBM004300

SHOP MANUAL

WB140PS-2
WB150PS-2
POWER-SHIFT

BACKHOE-LOADER

SERIAL NUMBER

WB140PS-2 140F50092 and up
WB150PS-2 150F50020 and up

This material is proprietary to Komatsu Utility Division and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu Utility Division.

It is our policy to improve our products whenever it is possible and pratical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

February 2002

Copyright 2002 Komatsu Utility Division

KOMATSU®

Order the manual at mid-west-tech.com >



10 STRUCTURE AND FUNCTION

Power train 2
Transmission 4
Drive shafts 9
Control valve block 11
Front axle 12
Rear axle 15
Hydraulic pump 20
Steering unit 41
Hydraulic circuit (WB140PS-2) 43
Hydraulic circuit (WB150PS-2) 44
Shovel control valve 46
Backhoe control valve 50
CLSS 57
Solenoid valve 71
Safety valve 72
Brake pump 74
Shovel cylinder 75
Backhoe cylinder 76
Air-conditioning unit 79
How the air-conditioning unit functions 80
Electrical diagram 81
Electrical diagram (Air conditioning) 83

MidWestTech | Komatsu WB140PS-2, WB150PS-2 Powershift Backhoe Loader Service... Order the manual at mid-west-tech.com >

★ The technical data of follow table are refered to a machine with max 500 kg shovel bucket, 600 mm (max. 160 kg) backhoe bucket and standard arm (or telescopic arm) closed.

FOR MACHINE

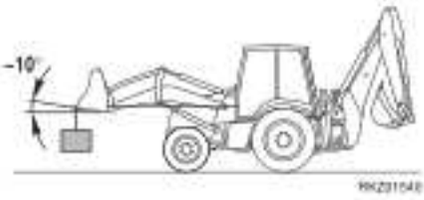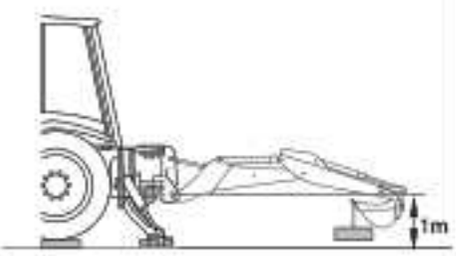
Machine model					WB140PS-2	
Classification		Check item	Test conditions	Unit	Standard value	Permissible value
Hydraulic drift working equipment	Front bucket	Complete working equipment (Tip lowering of bucket teeth)	Measuring posture  • In this position check in feedback of each cylinder and the leakage with applied load on the tip of bucket teeth. • Ground level. • Bucket: normal load (1500 kg) • Engine stopped • Oil temperature: 45 – 55°C • Check measures as soon as engine stops. • Check changes every 5 min. and the total change in 15 min	mm	250	400
		Cylinders (cylinder in)			30	45
		Bucket cylinder (cylinder in)			15	25
	Backhoe	Complete working equipment (Tip lowering of bucket teeth)	Measuring posture  • In this position check the extension of each cylinder and the leakage with normal load on the bucket. • On level ground. • Bucket: normal load (450 kg) • Engine stopped • Oil temperature: 45 – 55°C • Check measures as soon as engine stops. • Check changes every 5 min. and the total change in 15 min.	mm	300	450
		Boom cylinders (cylinder out)			35	50
		Arm cylinder (cylinder out)			15	25
		Bucket cylinder (cylinder in)			10	15

MidWestTech | Komatsu WB140PS-2, WB150PS-2 Powershift Backhoe Loader Service... Order the manual at mid-west-tech.com >

CHECKING AND SETTING PRESSURE IN THE ATTACHMENTS HYDRAULIC CIRCUIT

1. Introduction


- The machine is equipped with two control valves having following functions:
  Control valve No. 1 (2-3-spools):
  for front work attachments control.
  Control valve No. 2 (6-7-8-spools):
  for rear work attachments control.
- The two control valves are protected against overpressure by a main relief valve (or general and named Pressure cut off valve) with adjustable setting.

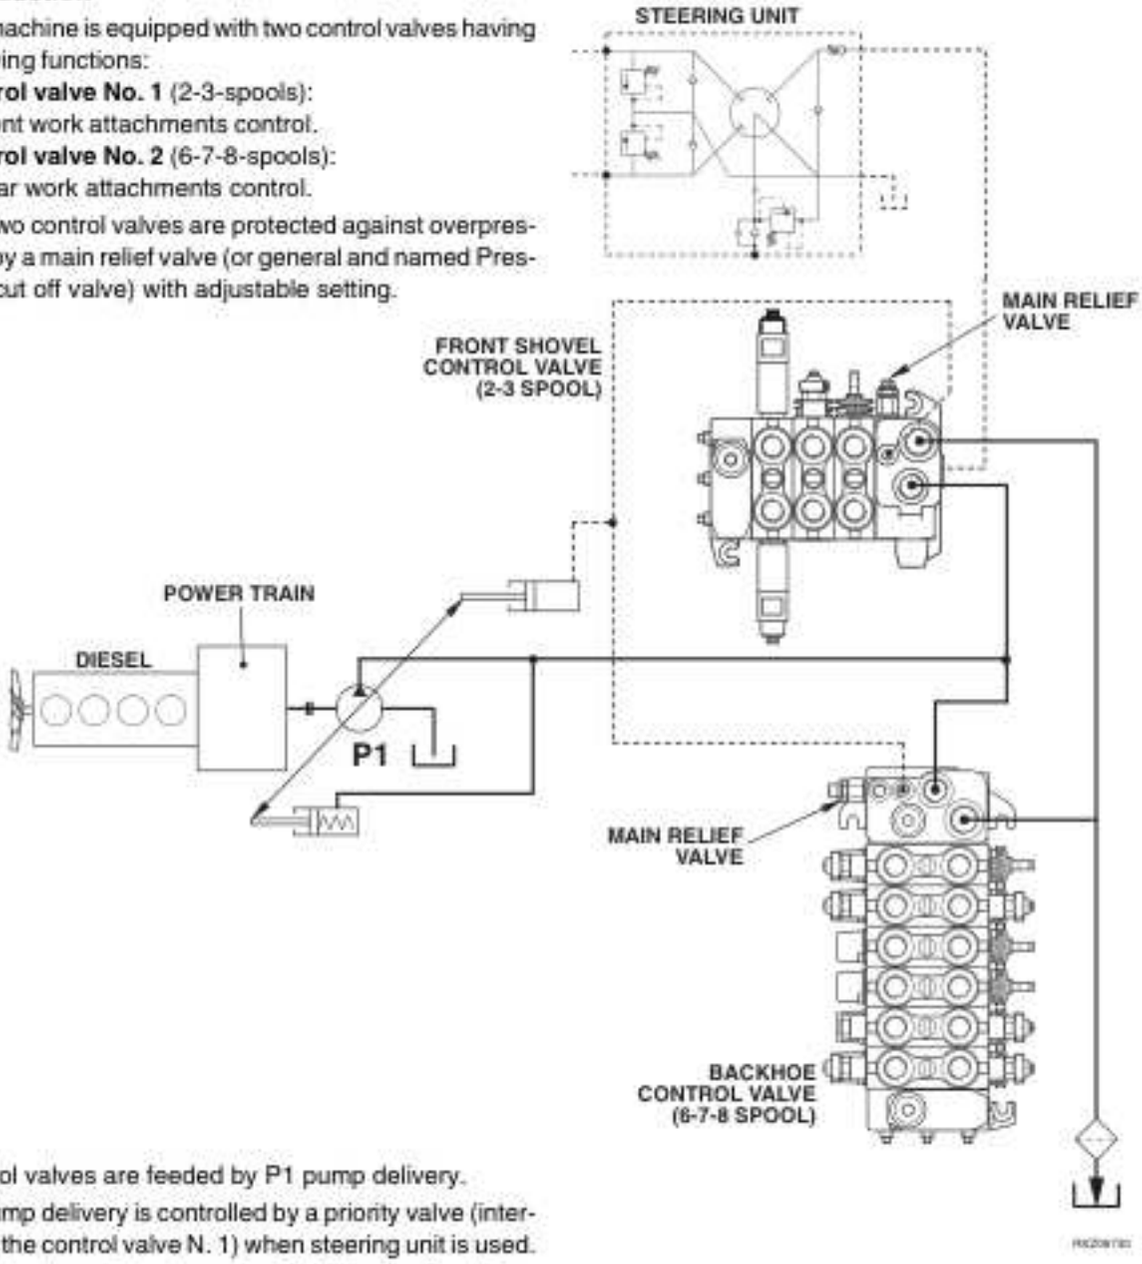

- Control valves are feeded by P1 pump delivery.
- P1 pump delivery is controlled by a priority valve (internal to the control valve N. 1) when steering unit is used.
- Control valves include spools with following functions:

2-SPOOL CONTROL VALVE

Control	Port
Loader arm (lifting - lowering)	A1 - B1
Front bucket (curled - dump)	A2 - B2

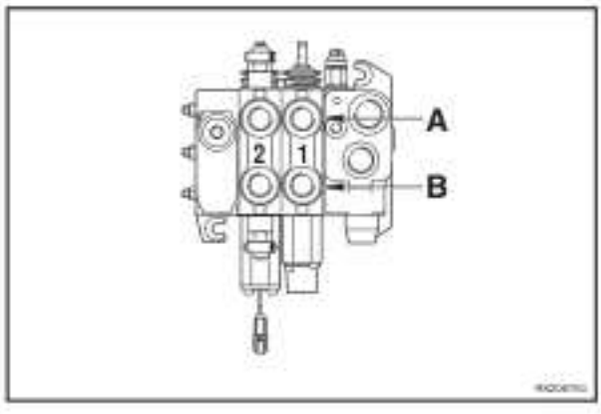

MidWestTech | Komatsu WB140PS-2, WB150PS-2 Powershift Backhoe Loader Service... Order the manual at mid-west-tech.com >

FRONT AXLE TROUBLESHOOTING

Wheel vibration; front tyre resistance; halfshaft breakage	
CAUSES	**REMEDY**
Incorrect installation	Correct installation
Defective axle	Replace the differential in case it does not survive any one of the test phases
Overloading/ incorrect weight distribution	Remove excessive weight and redistribute load, following instructions related to the vehicle
Different rotation radius of the tyres	Replace the tyre or adjust pressure to have same radius on both tyre
Bent halfshaft	Replace halfshaft


Steering is difficult; vehicle goes straight while its turning.	
CAUSES	**REMEDY**
Incorrect installation	Correct installation
Defective axle	Replace the differential in case it does not survive any one of the test phases
Overloading/ incorrect weight distribution	Remove excessive weight and redistribute load, following instructions related to the vehicle
Different rotation radius of the tyres	Replace the tyre or adjust pressure to have same radius on both tyre
Broken halfshaft	Replace halfshaft

No differential action; jamming while steering.	
CAUSES	**REMEDY**
Incorrect installation	Correct installation
Defective axle	Replace the differential in case it does not survive any one of the test phases
Broken halfshaft	Replace halfshaft
Bent halfshaft	Replace halfshaft

Excess of noise	
CAUSES	**REMEDY**
Incorrect installation	Correct installation
Defective axle	Replace the differential in case it does not survive any one of the test phases
Overloading/ incorrect weight distribution	Remove excessive weight and redistribute load, following instructions related to the vehicle
Different rotation radius of the tyres	Replace the tyre or adjust pressure to have same radius on both tyre
Bent or broken halfshaft	Replace halfshaft
Incorrect wheel adjustment	Verify group integrity and wheel side bearings.
Contamination in the axle box or incorrect assembly of parts	Look for foreign particles. Check assembly of the various parts of the axle.

MidWestTech | Komatsu WB140PS-2, WB150PS-2 Powershift Backhoe Loader Service... Order the manual at mid-west-tech.com >

ELECTRICAL DIAGRAM

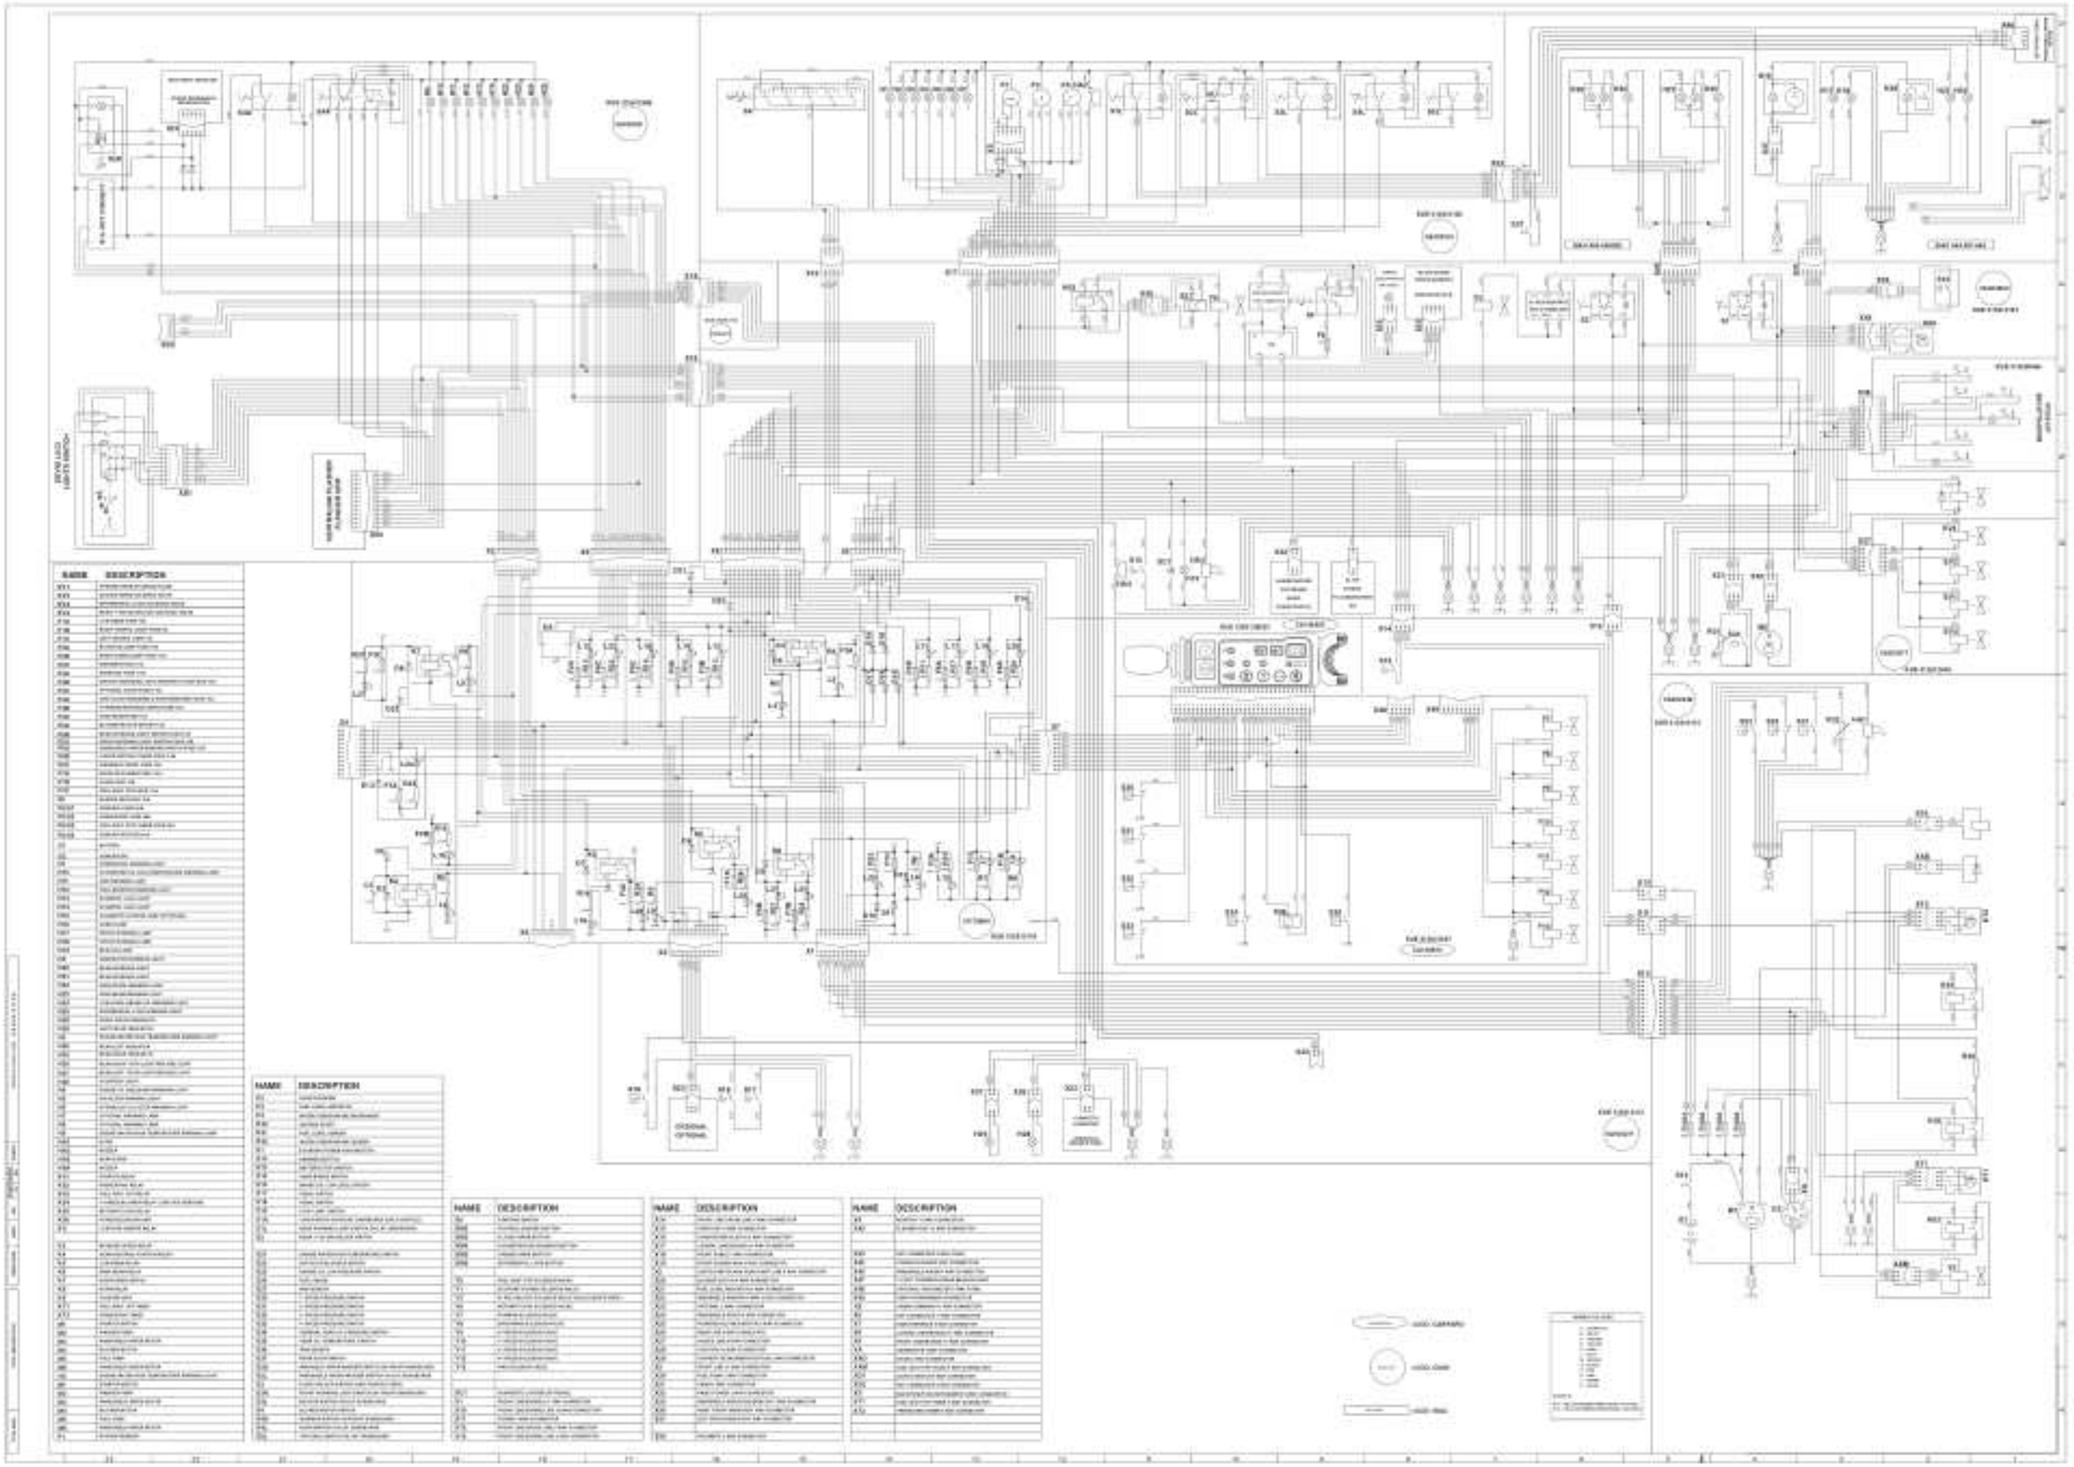

MidWestTech | Komatsu WB140PS-2, WB150PS-2 Powershift Backhoe Loader Service Manual | Publication WEBM004300 Order the manual at mid-west-tech.com >