PART NO. WNFB50-EN-01

HITACHI

Reliable solutions

Workshop Manual

ZW310-6

Wheel Loader

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TONFB50-EN
Technical Manual (Troubleshooting)	: Vol. No.TTNFB50-EN
Workshop Manual	: Vol. No.WNFB50-EN

MidWestTech | Hitachi ZW310-6 Wheel Loader Workshop Service Manual | Publication WN... Order the manual at mid-west-tech.com >

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling W1-1-1-1

Group 2 Tightening

Tightening Bolts and Nuts W1-2-1-1
Piping Joint W1-2-1-4

Group 3 Painting

Painting W1-3-1-1

Group 4 Bleeding Air

Bleeding Air from Hydraulic Oil Tank W1-4-1-1
Bleeding Air from Hydraulic System W1-4-1-2
Bleed Air from the Fuel System W1-4-1-3
Bleeding Air from Radiator W1-4-1-5
Bleeding Air from Brake (Axle) W1-4-1-6

Group 5 Pressure Release Procedure

Front Attachment Hydraulic Circuit Pressure Release Procedure W1-5-1-1
Ride Control Accumulator Pressure Release Procedure W1-5-1-2
Parking Brake Accumulator Pressure Release Procedure W1-5-1-3

Group 6 Preparation

Preparation before Inspection and Maintenance W1-6-1-1

MidWestTech | Hitachi ZW310-6 Wheel Loader Workshop Service Manual | Publicatio... Order the manual at mid-west-tech.com >

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body

Center Hinge.....W2-1-1-1
Pilot Valve (Two Lever Type).....W2-1-2-1

Group 2 Front Attachment

Pin and Bushing.....W2-2-1-1
Standard Dimensions for Lift Arm and Bucket....W2-2-2-1
Bucket Stopper Clearance W2-2-2-2

MidWestTech | Hitachi ZW310-6 Wheel Loader Workshop Service Manual | Publicatio... Order the manual at mid-west-tech.com >

SECTION 3

BODY

CONTENTS

Group 1 Cab
Removal and Installation of Cab W3-1-1-1

Group 2 Counterweight
Removal and Installation of Counterweight W3-2-1-1

Group 3 Center Hinge
Removal and Installation of Center Hinge W3-3-1-1
Removal and Installation of the Hydraulic Hoses of Front Chassis Side W3-3-2-1

Group 4 Engine
Removal and Installation of Engine W3-4-1-1
Removal and Installation of Exterior Parts W3-4-2-1
Removal and Installation of Air Cleaner W3-4-3-1

Group 5 Radiator Assembly
Replacement of Radiator, Oil Cooler, Intercooler, and Torque Converter Cooler W3-5-1-1

Group 6 Hydraulic Oil Tank
Removal and Installation of Hydraulic Oil Tank ..W3-6-1-1

Group 7 Fuel Tank
Removal and Installation of Fuel Tank W3-7-1-1

Group 8 Pump Device
Removal and Installation of Pump Device W3-8-1-1
Disassembly and Assembly of Pump Device W3-8-2-1
Disassembly of Main Pump W3-8-3-1
Assembly of Main Pump W3-8-3-4
Disassembly of Regulator W3-8-4-1
Assembly of Regulator W3-8-4-5
Removal and Installation of Pilot Pump W3-8-5-1
Disassembly of Pilot Pump W3-8-6-1
Assembly of Pilot Pump W3-8-6-3

Group 9 Control Valve
Removal and Installation of Control Valve W3-9-1-1
Disassembly and Assembly of Control Valve W3-9-2-1

Group 10 Pilot Valve
Removal and Installation of Pilot Valve (Single-Lever Type) W3-10-1-1
Removal and Installation of Pilot Valve (Two Lever Type) W3-10-2-1
Disassembly of Pilot Valve (Single-Lever Type) W3-10-3-1
Assembly of Pilot Valve (Single-Lever Type) W3-10-3-4
Disassembly of Pilot Valve (Two Lever Type) W3-10-4-1
Assembly of Pilot Valve (Two Lever Type) W3-10-4-6

Group 11 Brake Charge Valve
Removal and Installation of Brake Charge Valve W3-11-1-1
Structure of Brake Charge Valve W3-11-2-1
Disassembly of Brake Charge Valve W3-11-3-1
Assembly of Brake Charge Valve W3-11-3-3
Removal and Installation of Brake Accumulators W3-11-4-1

Group 12 Combination Valve
Removal and Installation of Combination Valve W3-12-1-1
Disassembly of Combination Valve (S/N 5001~5021) W3-12-2-1
Assembly of Combination Valve (S/N 5001~5021) W3-12-2-5
Disassembly of Combination Valve (S/N 5022~, 9001~) W3-12-3-1
Assembly of Combination Valve (S/N 5022~, 9001~) W3-12-3-5

Group 13 DEF Tank
Removal and Installation of DEF Tank W3-13-1-1
Replacement of DEF Suction Filter W3-13-1-9

Group 14 Flow Regulator Valve
Removal and Installation of Flow Regulator Valve W3-14-1-1
Structure of Flow Regulator Valve W3-14-2-1

Group 15 Cooling Fan System
Removal and Installation of Fan Control Valve W3-15-1-1
Structure of Fan Control Valve W3-15-2-1
Removal and Installation of Fan Motor W3-15-3-1

Group 16 Aftertreatment Device
Removal and Installation of Aftertreatment Device W3-16-1-1

Group 17 Ride Control Valve
Removal and Installation of Ride Control Valve and Accumulator (Option) W3-17-1-1
Disassembly of Ride Control Valve W3-17-2-1
Assembly of Ride Control Valve W3-17-2-4

MidWestTech | Hitachi ZW310-6 Wheel Loader Workshop Service Manual | Publicatio... Order the manual at mid-west-tech.com >


Piping Joint

IMPORTANT:

- **The torque given in table below are for general use only, however, a different torque is given for a specific application. Use the specified torque.**
- **Apply lubricant, such as the Grease Spray to the bolts and nuts in order to reduce friction coefficient of them.**
- **Torque tolerance is ±10 %.**
- **Slightly apply lubricant onto the threads first by using the Grease Spray.**

MidWestTech | Hitachi ZW310-6 Wheel Loader Workshop Service Manual | Publicatio... Order the manual at mid-west-tech.com >


ZW310-6 FAN, BRAKE CIRCUIT DIAGRAM

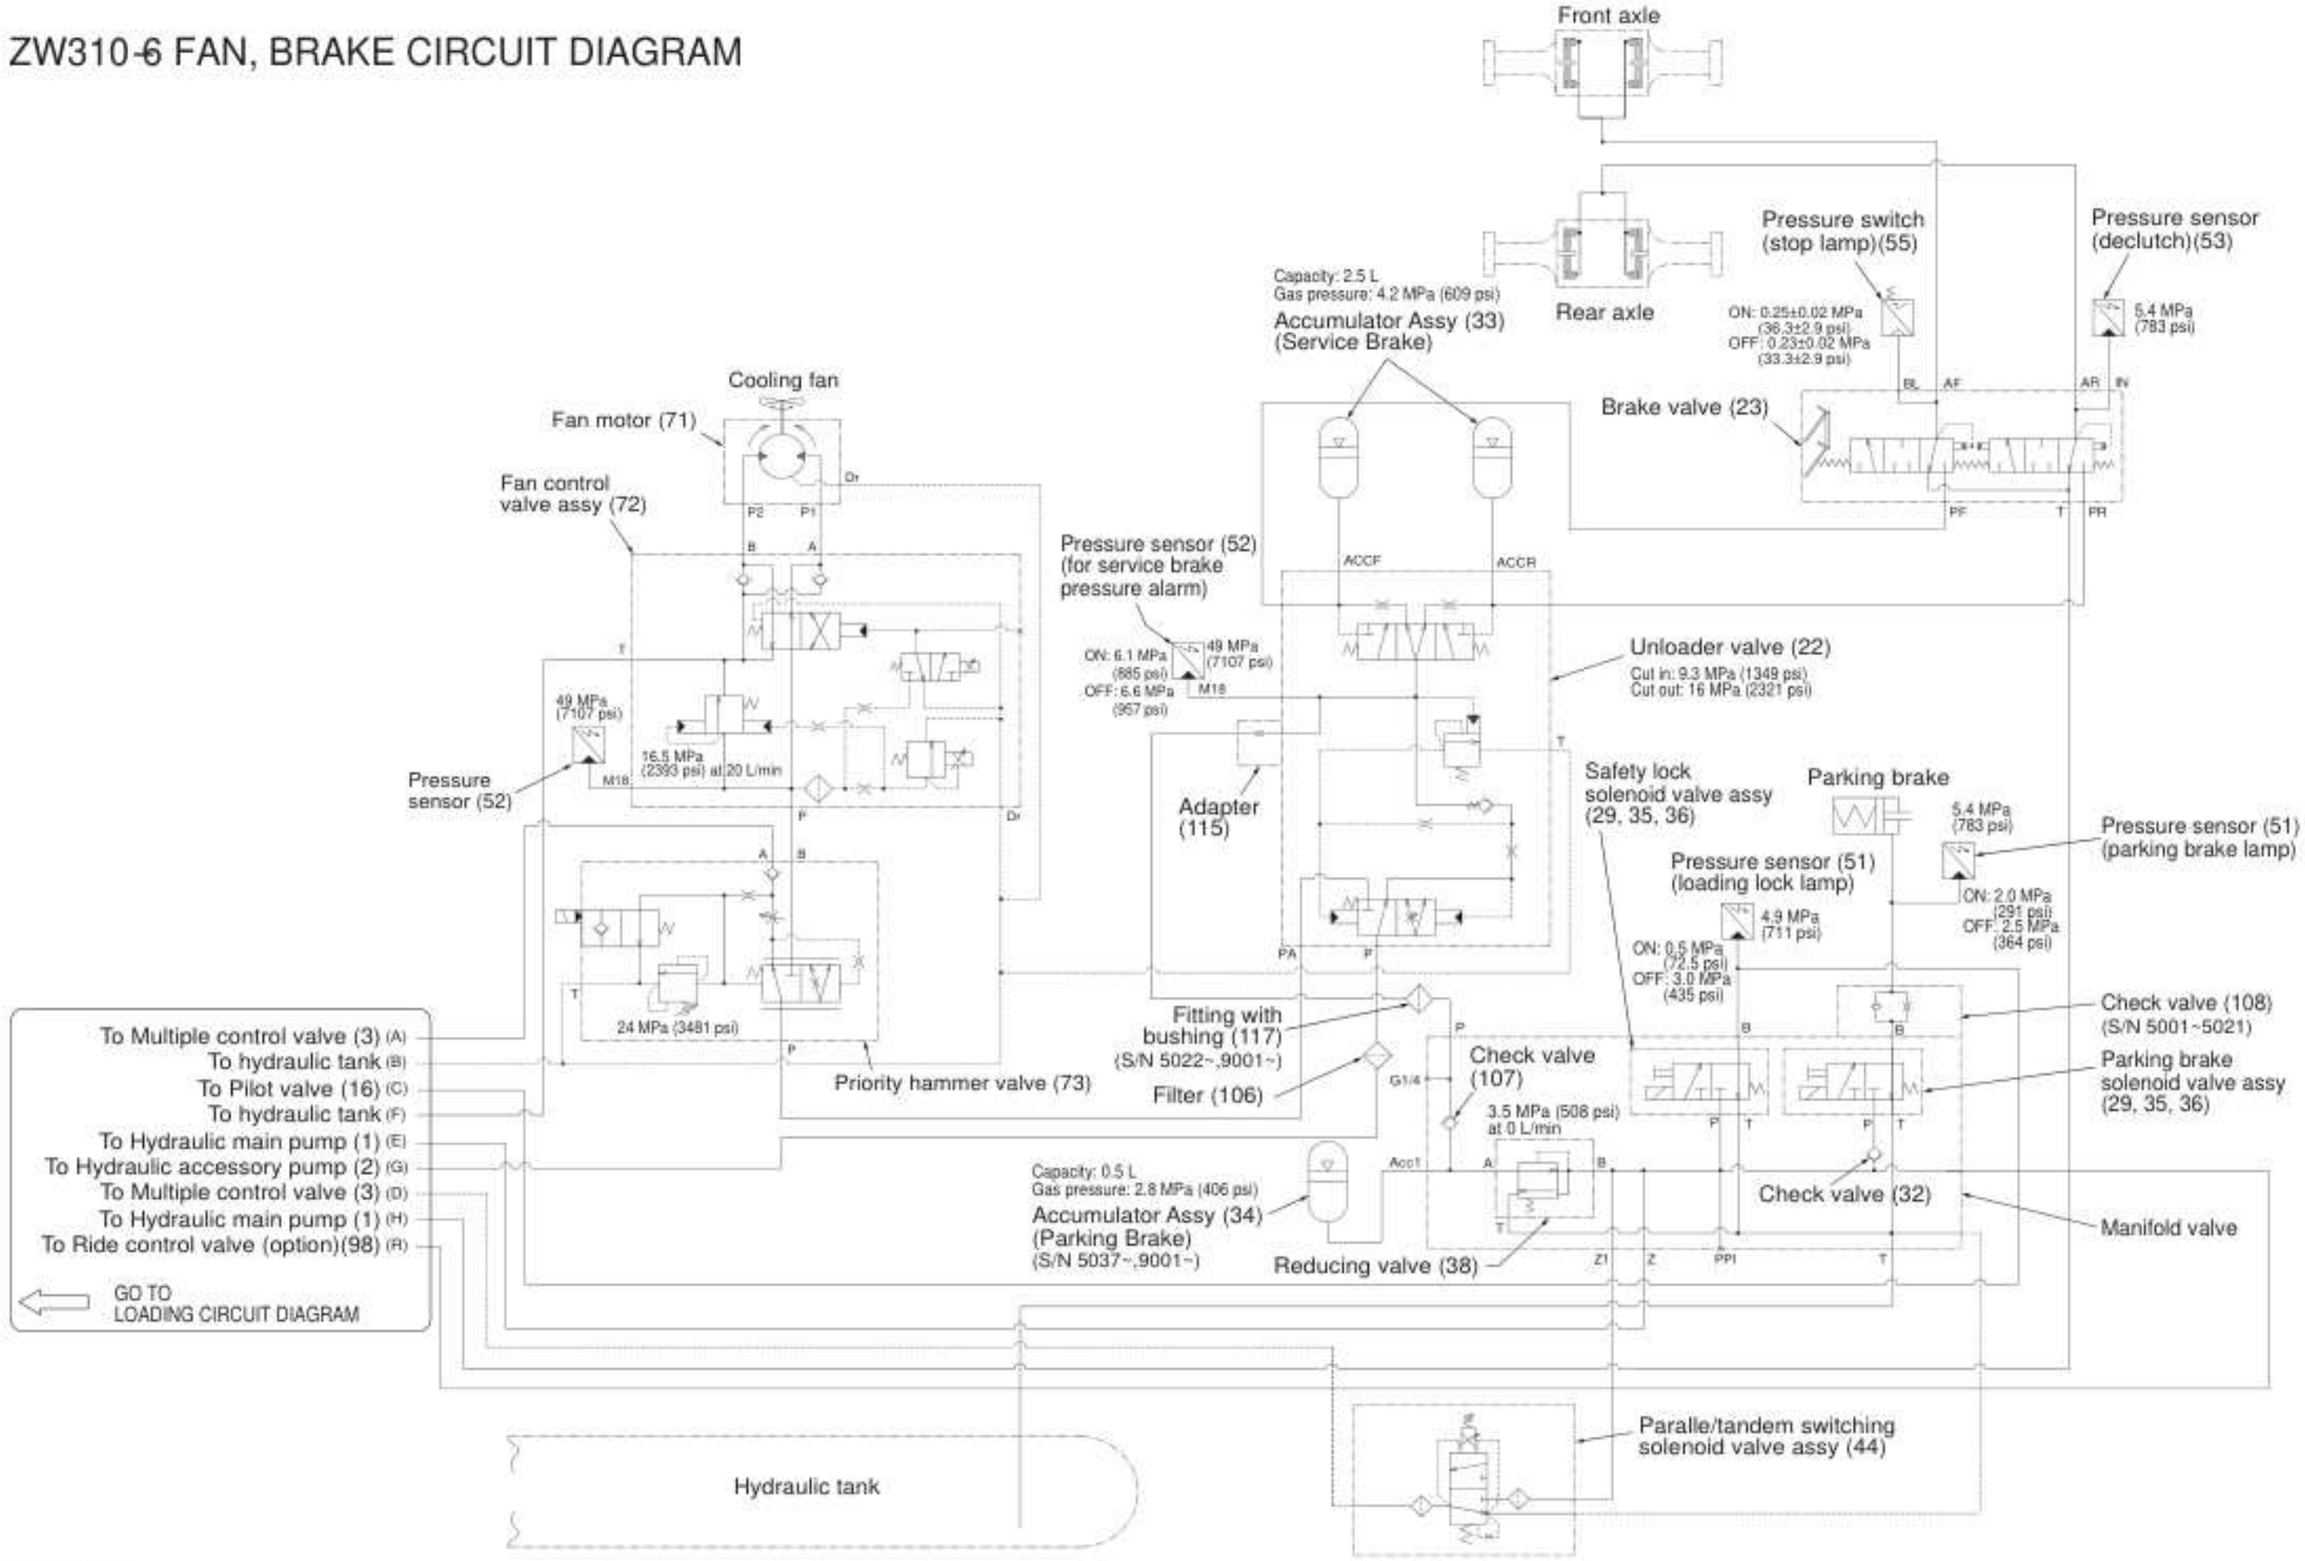

TTNFB50-EN-01_Circuit


Order the manual at mid-west-tech.com >

ZW310-6 FLOOR WIRING DIAGRAM (REAR CONSOLE) (1/4)

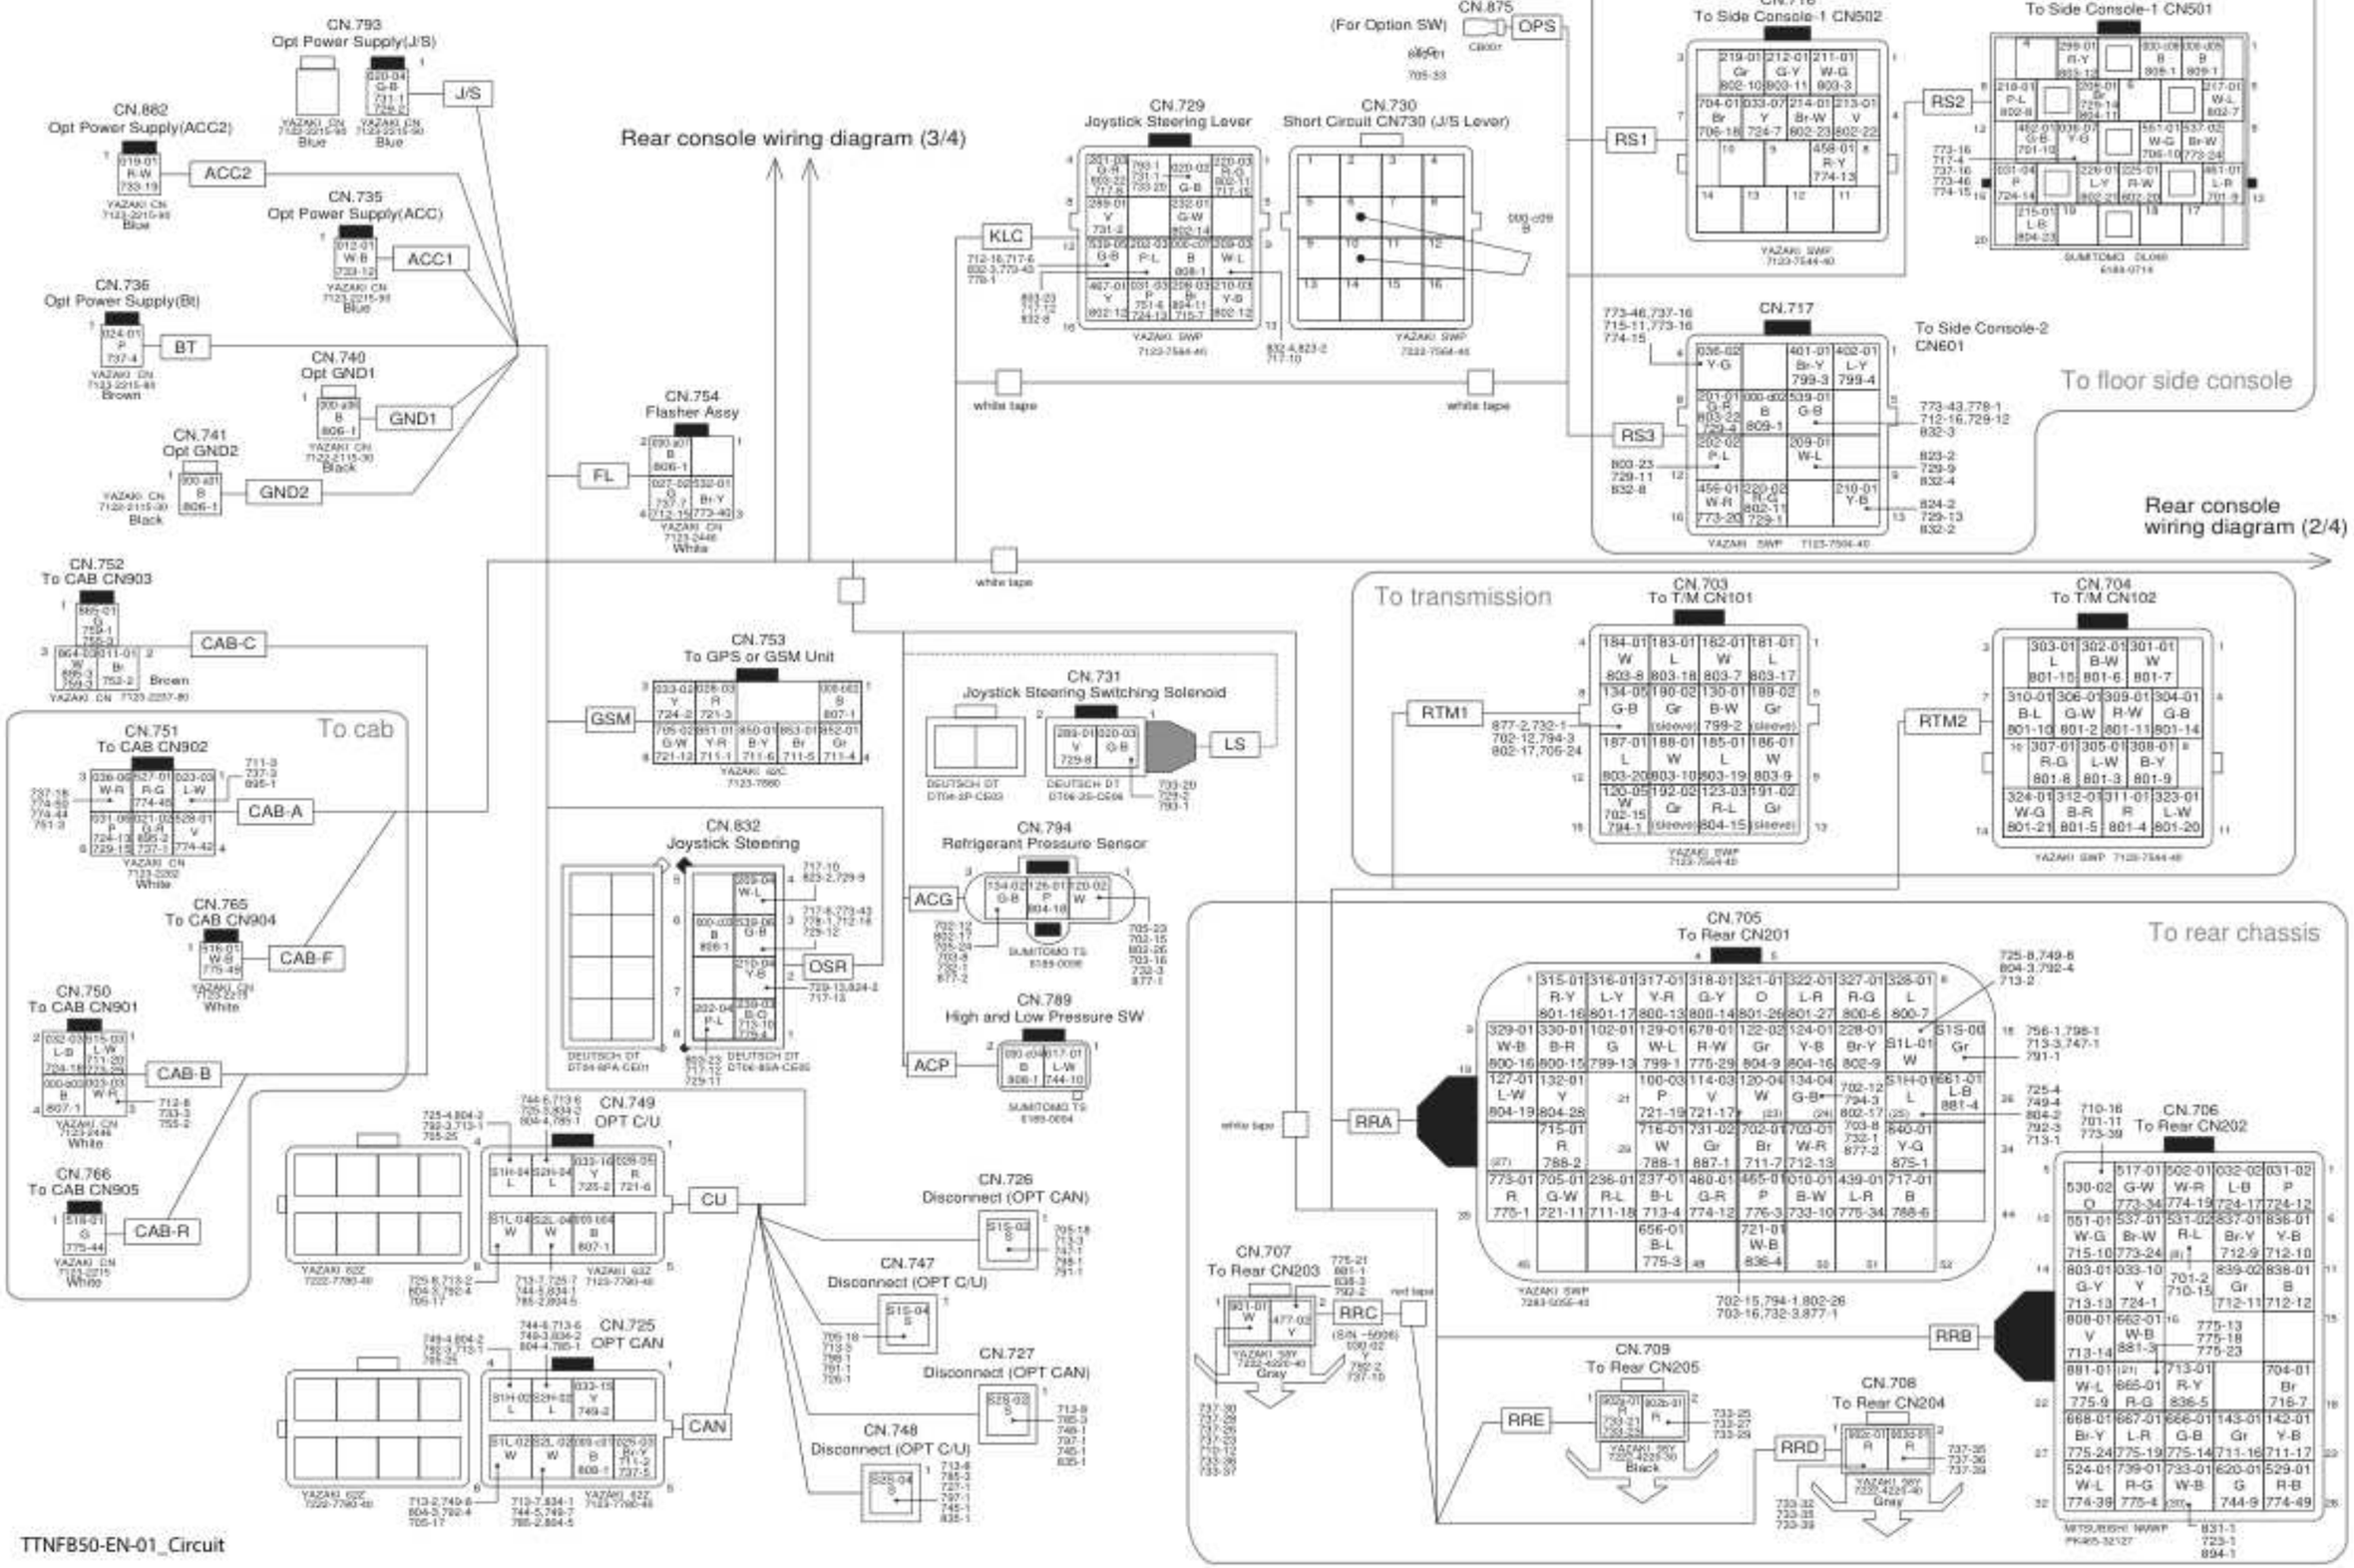

Order the manual at mid-west-tech.com >

ZW310-6 FLOOR WIRING DIAGRAM (REAR CONSOLE) (4/4)

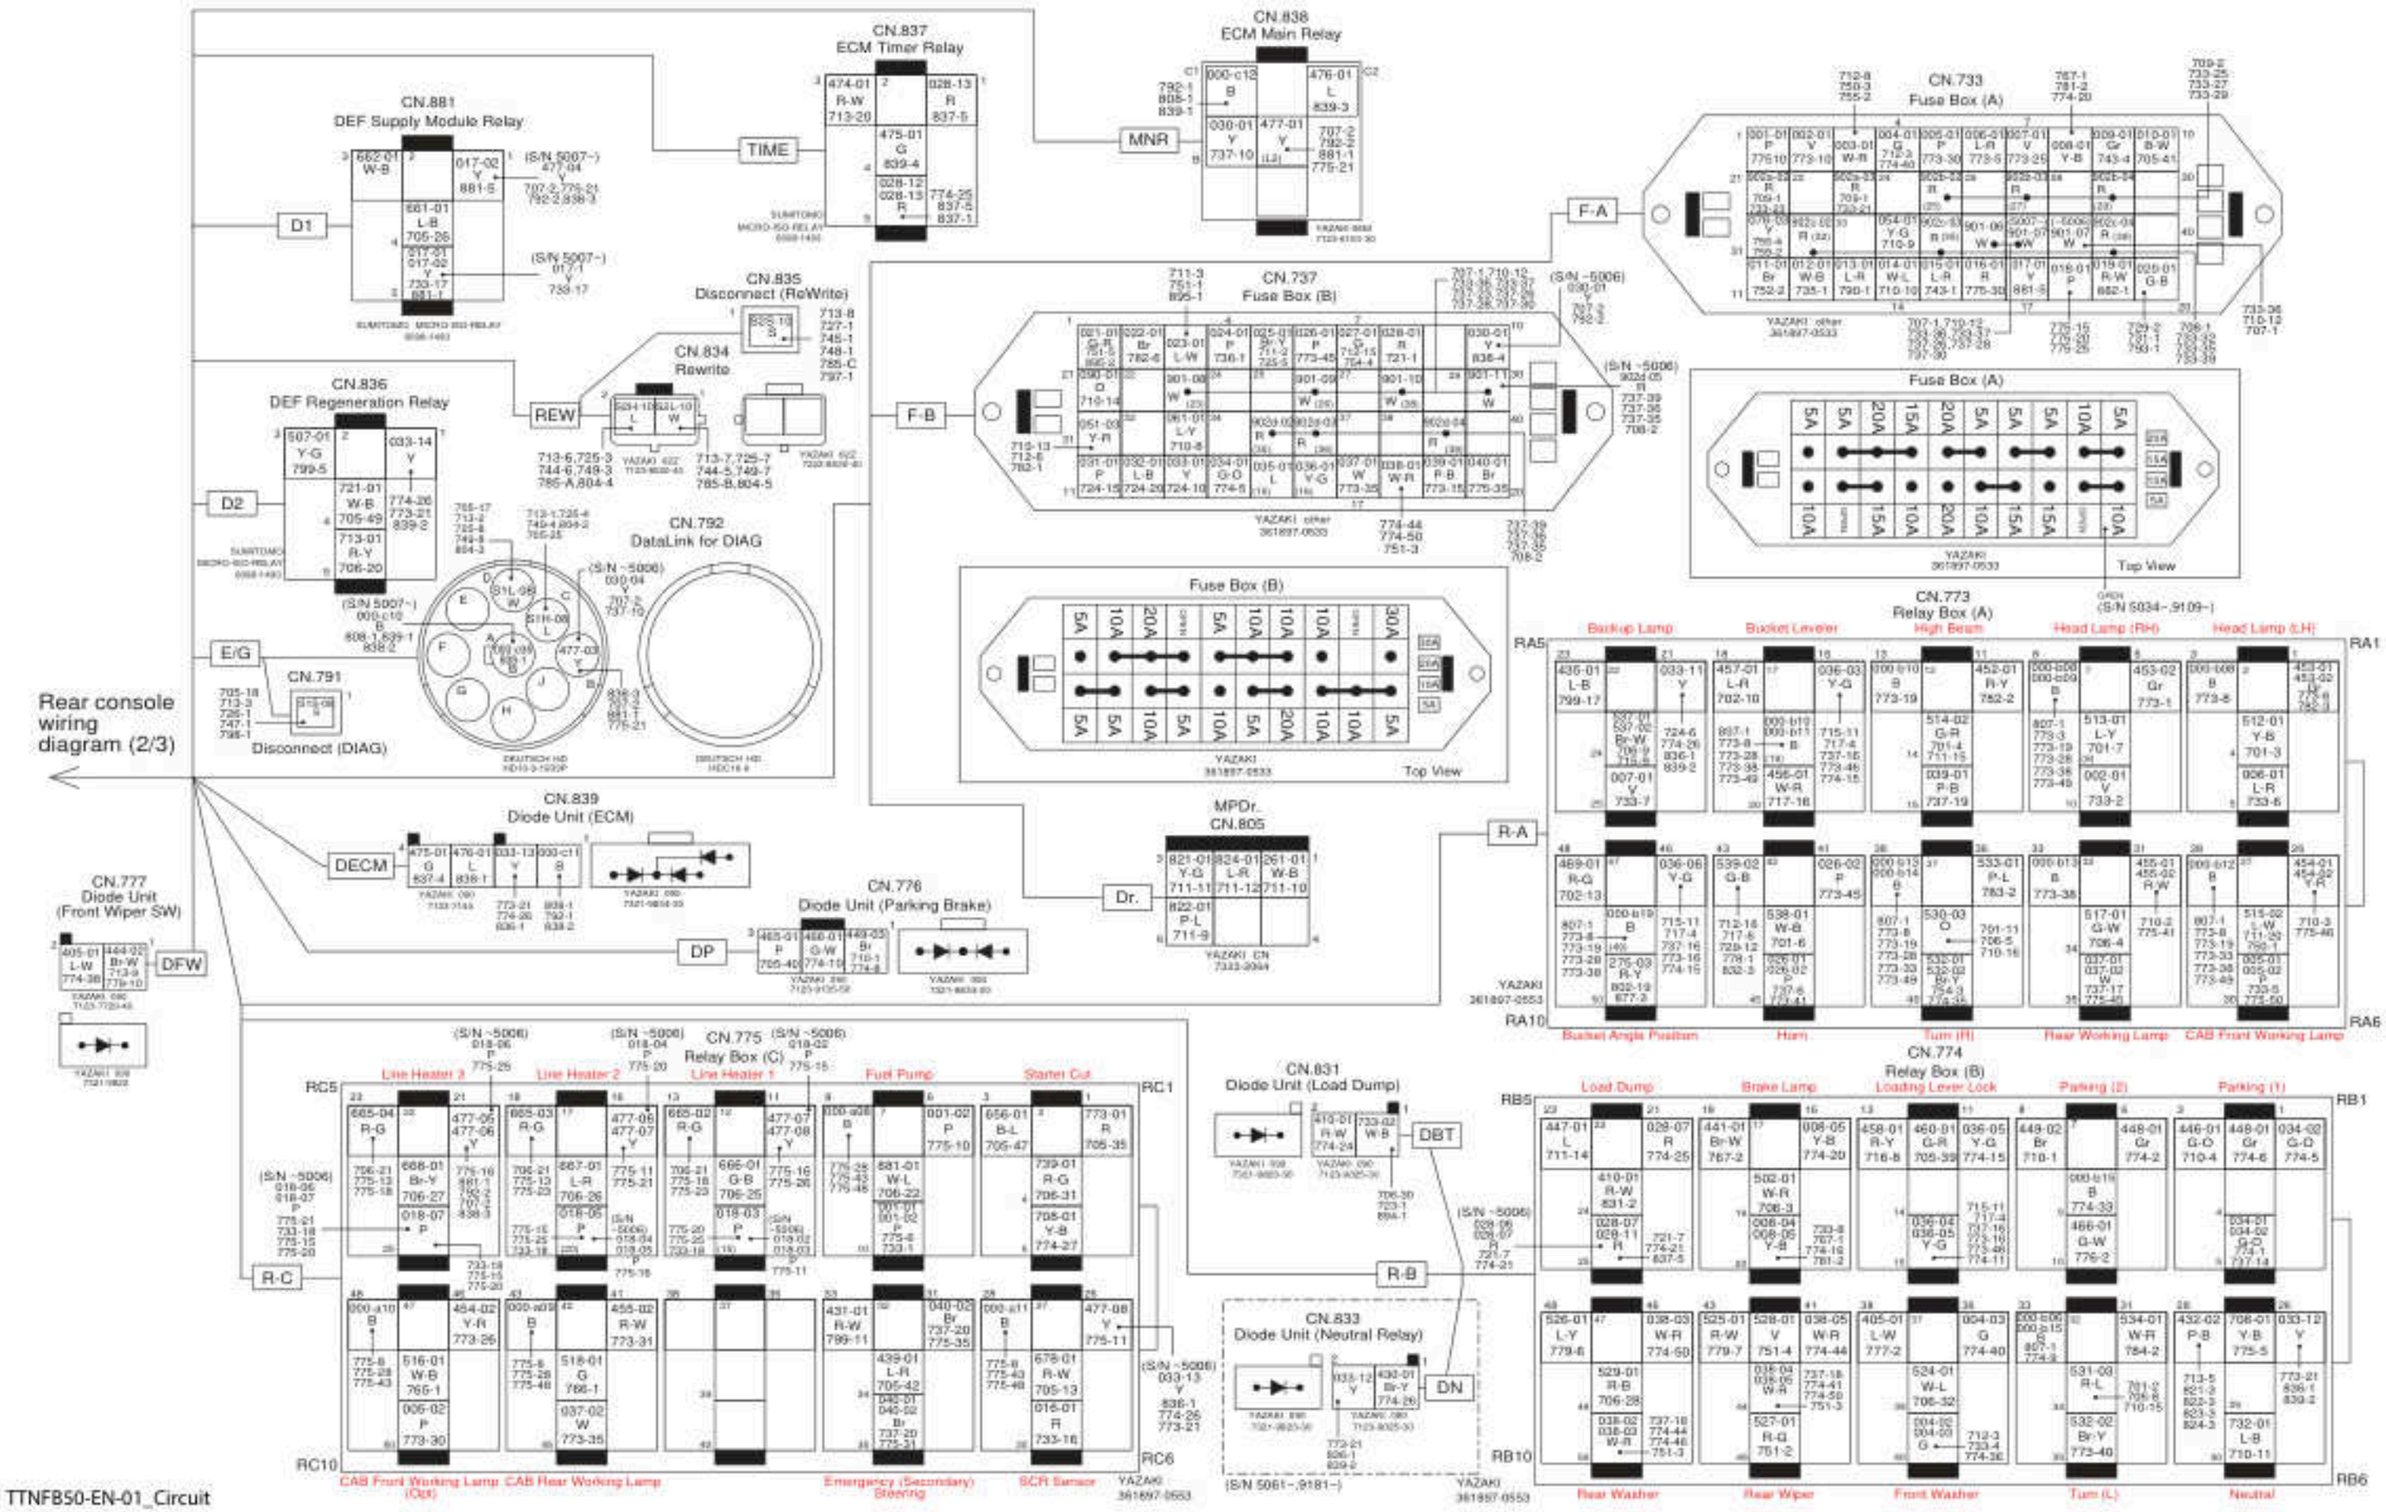

Order the manual at mid-west-tech.com >