KOBELCO

# SHOP MANUAL

## EXCAVATOR

# SK210-8

# ACERA MARK 8
# TIER III

YN91ZU0007P1 NA

Issued 01-2007

APPLICABLE:
SK210-8.....YQ09U3301 ~

MidWestTech | Kobelco SK210-8 Acera Mark 8 Tier 3 Hydraulic Excavator Service Manual | Publication YN91ZU0007P1

Order the manual at mid-west-tech.com >

# SK210 - 8 TABLE OF CONTENTS

**SPECIFICATIONS SECTION**


**0-SAFETY**

0.1 GENERAL SAFETY INFORMATION ..... 0-2
0.2 SAFETY PRECAUTIONS ..... 0-3

**1-OUTLINE**

1.1 GENERAL PRECAUTIONS FOR MAKING REPAIRS ..... 1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING ..... 1-3
1.1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING ..... 1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT ..... 1-3
1.1.4 ELECTRICAL EQUIPMENT ..... 1-4
1.1.5 HYDRAULIC PARTS ..... 1-5
1.1.6 WELD REPAIR ..... 1-5
1.1.7 ENVIRONMENTAL ISSUES ..... 1-5
1.2 INTERNATIONAL UNIT SYSTEM ..... 1-6

**2-SPECIFICATIONS**

2.1 NAME OF COMPONENTS ..... 2-3
2.2 GENERAL DIMENSIONS ..... 2-4
2.2.1 SK210--8 [5.65m (18ft-6in) Boom+2.94m (9ft-8in) Standard Arm+0.80$m^3$ (1.05cu•yd) Bucket Shoe] ..... 2-4
2.2.2 SK210--8 [5.65m (18ft-6in) Boom+3.5m (11ft-6in) Long Arm+0.70$m^3$ (0.92cu•yd) Bucket Shoe] ..... 2-4
2.3 WEIGHT OF COMPONENTS ..... 2-5
2.4 TRANSPORTATION ..... 2-7
2.4.1 OVERALL DIMENSIONS OF MACHINE ON A TRAILER ..... 2-7
2.4.2 DIMENSIONS OF ATTACHMENT ..... 2-8
2.5 SPECIFICATIONS AND PERFORMANCE ..... 2-9
2.5.1 SPEED AND CLIMBING CAPABILITY ..... 2-9
2.5.2 ENGINE ..... 2-9
2.5.3 HYDRAULIC COMPONENTS ..... 2-9
2.5.4 WEIGHT ..... 2-9
2.6 TYPE OF CRAWLER ..... 2-10
2.7 COMBINATIONS OF ATTACHMENT ..... 2-12
2.8 ENGINE SPECIFICATIONS ..... 2-13
2.8.1 SPECIFICATIONS ..... 2-13



MidWestTech | Kobelco SK210-8 Acera Mark 8 Tier 3 Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

**3-ATTACHMENT DIMENSIONS**


3.1 BOOM ..... 3-3
3.1.1 BOOM DIMENSIONAL DRAWING ..... 3-3
3.1.2 BOOM MAINTENANCE STANDARD ..... 3-4
3.2 ARM ..... 3-6
3.2.1 ARM DIMENSIONAL DRAWING ..... 3-6
3.2.2 ARM MAINTENANCE STANDARD ..... 3-7
3.3 BUCKET AND PIN ..... 3-10
3.3.1 BUCKET AND PIN DIMENSIONAL DRAWING ..... 3-10
3.3.2 BUCKET AND PIN DIMENSIONAL TABLE ..... 3-11


**MAINTENANCE SECTION**

**11-TOOLS**


11.1 STANDARD TORQUE SPECIFICATIONS FOR CAPSCREWS AND NUTS ..... 11-3
11.2 SCREW SIZE ..... 11-5
11.2.1 CAPSCREW (BOLT) ..... 11-5
11.2.2 CAPSCREW (SOCKET BOLT) ..... 11-5
11.2.3 SOCKET SET SCREW ..... 11-5
11.3 TORQUE SPECIFICATIONS FOR HOSE AND FITTINGS ..... 11-6
11.3.1 JOINT (O-RING TYPE) ..... 11-6
11.3.2 HYDRAULIC HOSE (30° FLARE TYPE) ..... 11-6
11.3.3 JOINT (ORS TYPE) ..... 11-6
11.3.4 SPLIT FLANGE ..... 11-6
11.4 TORQUE SPECIFICATIONS FOR NUTS AND SLEEVES ..... 11-7
11.5 PLUG ..... 11-8
11.5.1 PLUG FOR HYDRAULIC PIPE JOINT ..... 11-8
11.5.2 PLUG FOR HYDRAULIC EQUIPMENT ..... 11-9
11.6 SPECIAL SPANNER FOR TUBE ..... 11-11
11.7 SPECIAL TOOLS ..... 11-12
11.8 APPLICATION OF SCREW LOCKING COMPOUND AND SEALING COMPOUND ..... 11-14
11.9 SUCTION STOPPER ..... 11-15
11.9.1 COMPONENTS ..... 11-15
11.9.2 DIMENSION ..... 11-15
11.9.3 APPLICABLE MODEL ..... 11-15
11.10 COUNTER WEIGHT LIFTING JIG ..... 11-16
111.10 UPPER FRAME LIFTING JIG ..... 11-17
11.11 ENGINE TURNOVER STAND ..... 11-18
11.13 TRACK SPRING SET JIG ..... 11-19



MidWestTech | Kobelco SK210-8 Acera Mark 8 Tier 3 Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

**12-STANDARD MAINTENANCE TIMETABLE**

12.1 STANDARD WORKING TIME TABLE FOR THE MAINTENANCE OF EXCAVATOR....12-4

**13-MAINTENANCE STANDARD AND TEST PROCEDURE**

13.1 HOW TO USE THE MAINTENANCE STANDARD....13-3
13.2 PERFORMANCE INSPECTION STANDARD TABLE....13-4
13.3 MEASUREMENT OF ENGINE SPEED....13-6
13.3.1 MEASUREMENT OF ENGINE SPEED....13-6
13.4 MEASUREMENT OF HYDRAULIC PRESSURE....13-7
13.4.1 PREPARING TO MEASURE HYDRAULIC PRESSURE....13-7
13.4.2 PLACE TO INSTALL PRESSURE GAUGE....13-7
13.4.3 PRESSURE ADJUSTMENT POSITION....13-8
13.4.4 PROCEDURE FOR ADJUSTING RELIEF VALVE....13-10
13.5 MEASURING TRAVEL PERFORMANCES....13-12
13.5.1 TRAVEL SPEED....13-12
13.5.2 DEVIATION OF TRAVEL....13-12
13.5.3 PERFORMANCES OF PARKING BRAKE....13-13
13.5.4 DRAIN RATE OF TRAVEL MOTOR....13-14
13.6 MEASURING SWING PERFORMANCES....13-15
13.6.1 SWING SPEED....13-15
13.6.2 PERFORMANCE OF SWING BRAKE....13-15
13.6.3 PERFORMANCE OF SWING PARKING BRAKE....13-16
13.6.4 DRAIN RATE OF SWING MOTOR....13-17
13.7 MEASURING ATTACHMENT OPERATING PERFORMANCES....13-18
13.7.1 OPERATING TIME OF CYLINDERS....13-18
13.7.2 CYLINDER LEAK CHECK....13-19
13.8 MEASURING PERFORMANCES OF SWING BEARING....13-20
13.9 MECHATRO CONTROLLER....13-21
13.9.1 ENGINE CONTROL INPUT / OUTPUT....13-21
13.9.2 ENGINE CONTROL....13-22
13.9.3 ADJUSTMENT OF MECHATRO CONTROLLER OUTPUT (A-B-C ADJUSTMENT)....13-24
13.9.4 OPERATIONS IN THE EVENT OF A MECHATRO CONTROLLER FAILURE....13-29

MidWestTech | Kobelco SK210-8 Acera Mark 8 Tier 3 Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

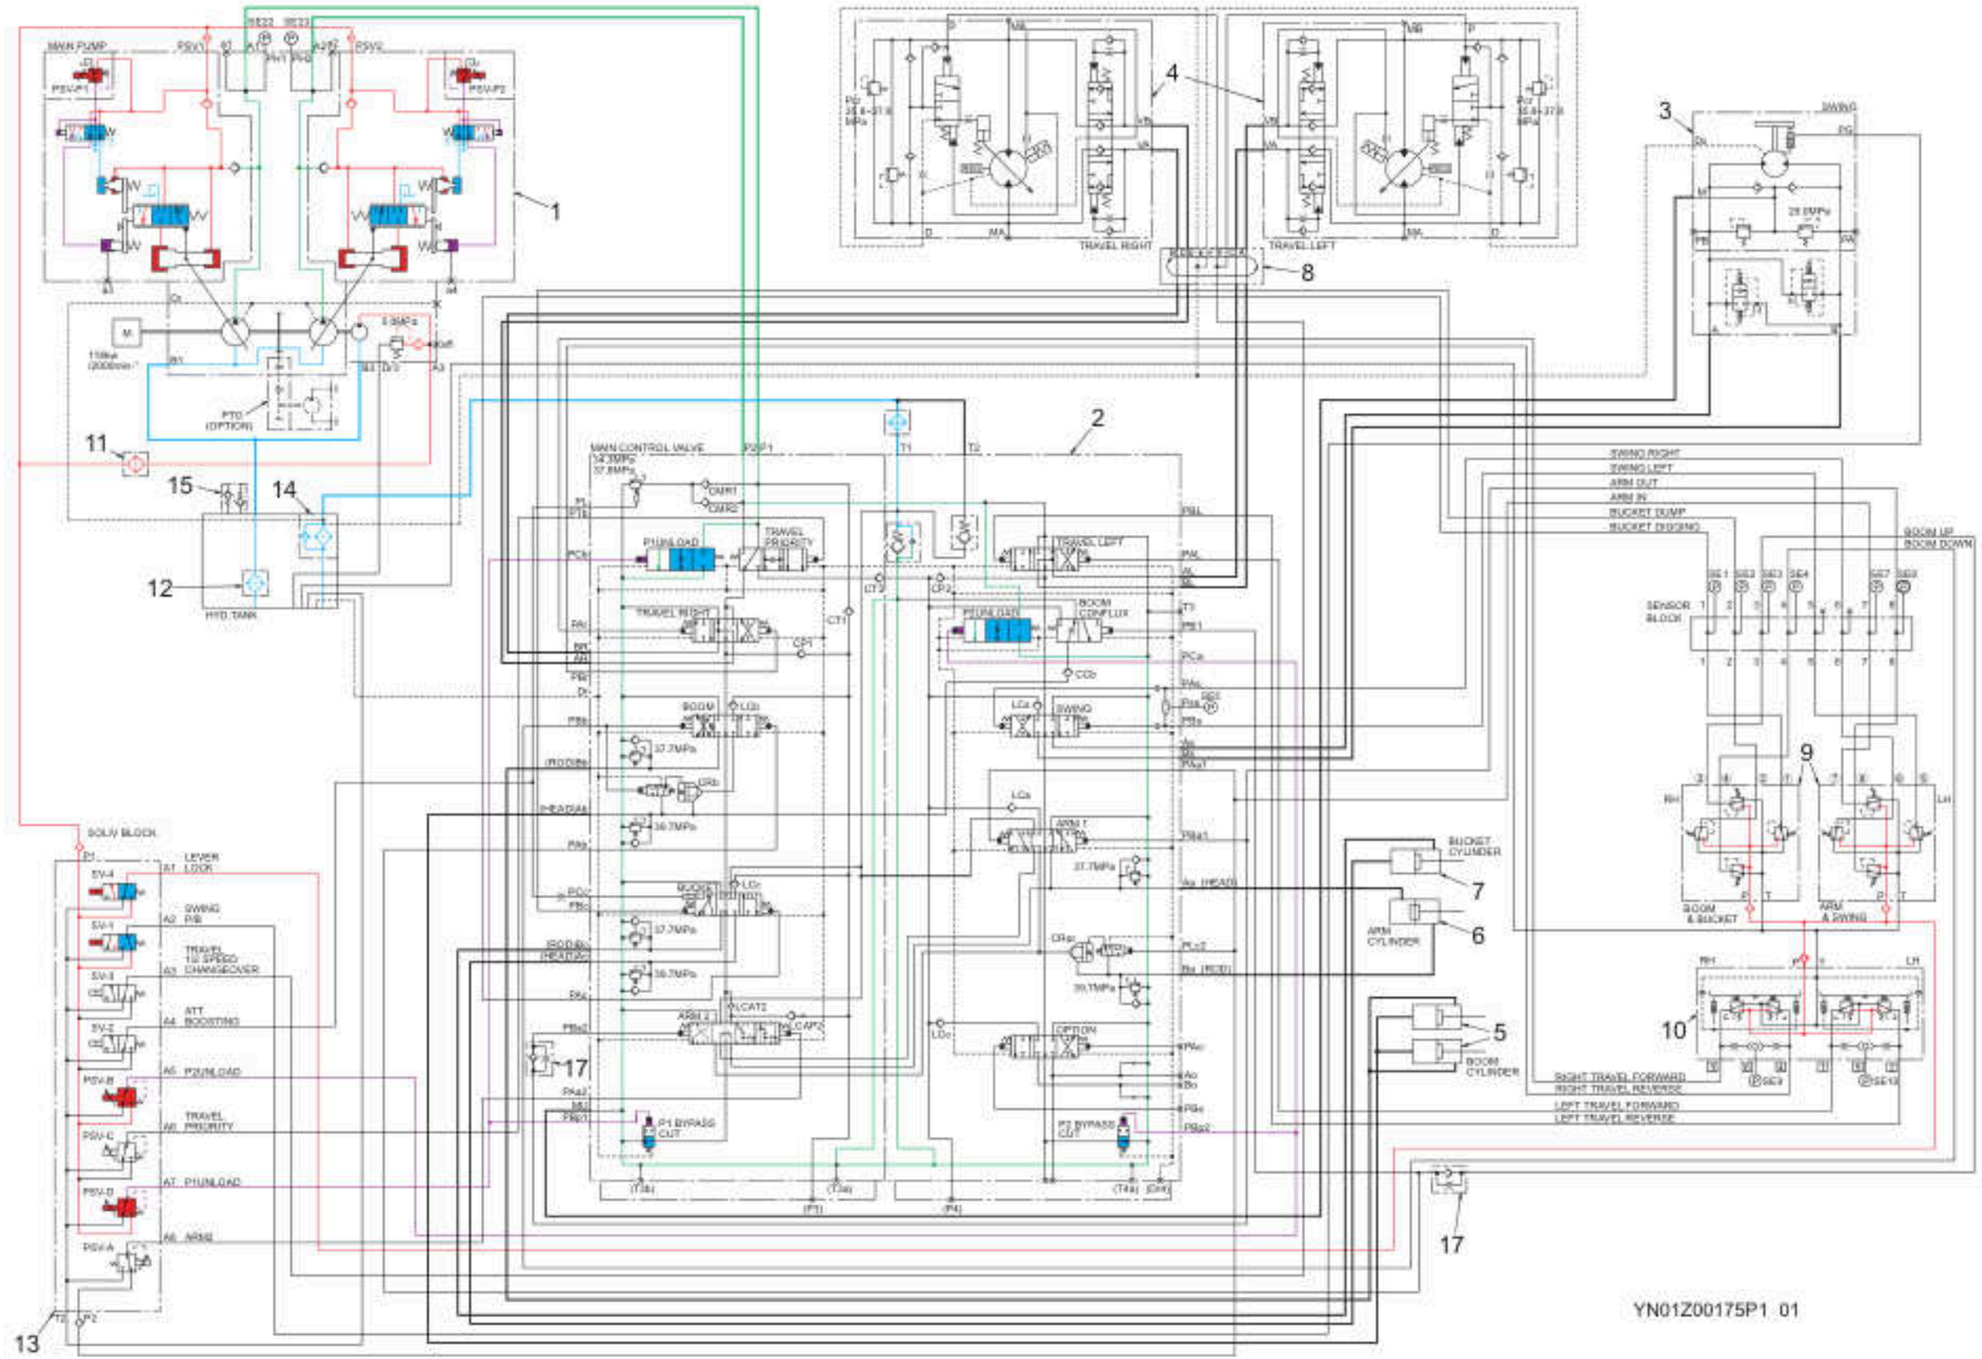



**Fig. 22-13 PRESSURE DRAIN (RELEASE) CIRCUIT : At pressure release mode.**



MidWestTech | Kobelco SK210-8 Acera Mark 8 Tier 3 Hydraulic Excavator Service Manual | Publication YN91ZU0007P1

Order the manual at mid-west-tech.com >