
730

Parts Manual

S/N 4998M11001 & Above

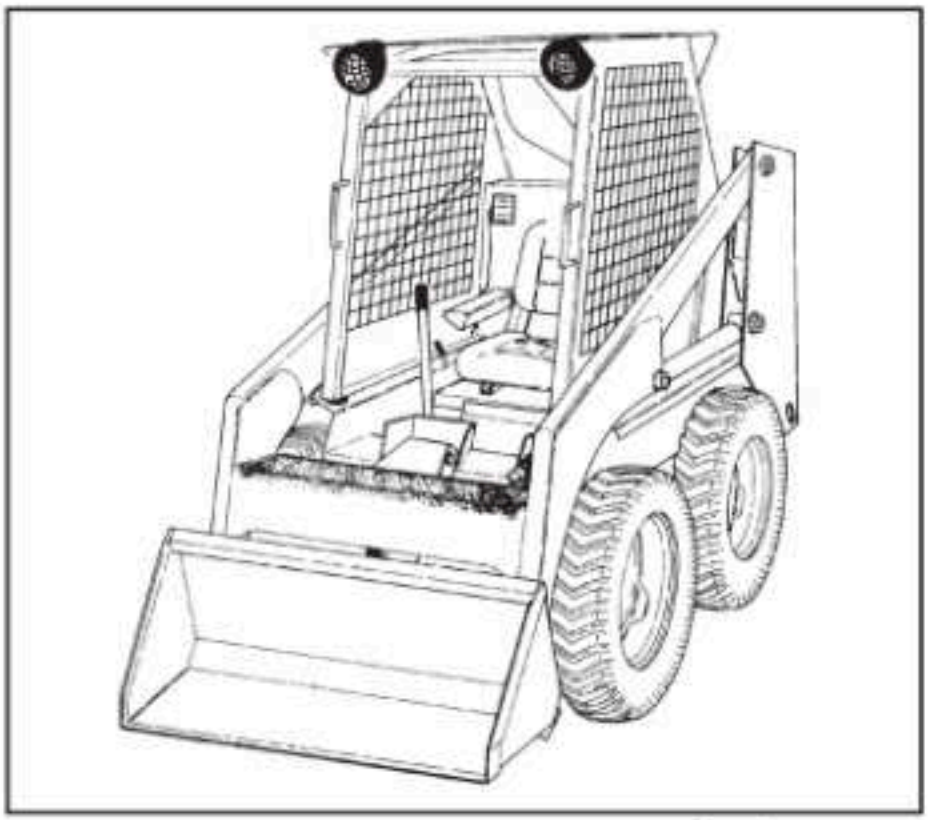

MELROE
INGERSOLL-RAND

6556775 (4-79)*

Printed in U.S.A.

bobcat

© Melroe Company 1979

MidWestTech | Bobcat 730 Skid Steer Loader Parts Manual | Publication 6556775

Order the manual at mid-west-tech.com >

Title: Hydraulic Circuitry
Model Number: 730
Serial Number: 4998M11001 & Above

Ref #	Part #	Description	S/N	Q-ty
22	18K7	FITTING, W/Ref. 18		1
23		ADAPTER, ADAPTER, NLA - Use W/Spring - Also Order Ref. 19, 23, and 24, A		1
23	15K7	FITTING, W/ Ref. 18		1
24	6598689	ORIFICE, 0.125		1
25		TUBE, TUBE, NLA - Was 6558572, A		1
26	6558573	TUBE		1
27	6560136	TEE		2
28	6561877	TUBE ASSEMBLY		1
29	6561878	TUBE ASSEMBLY		1
30	6502203	CLAMP		7
31	85D6	NUT LOCK		3
32	6519195	ELBOW, W/Ref. 18		1
33	59D6	NUT LOCK HEX NYLON		4

Order the manual at mid-west-tech.com >

Title: Universal Joint
Model Number: 730
Serial Number: 4998M11001 & Above

Ref #	Part #	Description	S/N	Q-ty
1	6598347	U-JOINT, Ref. 3-5, 11 & 14 - full assembly		1
1	7359851	JOINT UNIVERSAL, Ref. 3,5,11 & 14 - does not include Ref. 4		1
2	6557518	YOKE	499811001 - 499811999	
2	6560623	YOKE	499812001 & Above	
3		SPIDER, SPIDER, NLA - Order Ref. 1 -Was 6598303 , A		1
4		COUPLING, COUPLING, NLA - Order Ref. 1 - Was 5202123, A		1
5		SPIDER, SPIDER, NLA - Order Ref. 1 - Was 6598304, A		1
6	12F114	PLUG		1
7	6557893	YOKE, slip		1
8	6540655	ADAPTER		1
9		WASHER, WASHER, NLA - Order Ref. 9 and 10		1
9	616783	WASHER		1
10		BOLT, BOLT, NLA - allen head - Order Ref. 9 and 10		1
10	18C616	BOLT 5		1
11	94G524	BOLT 5		4
12	94G516	BOLT 5		4
13	94G512	BOLTS 5		4
14	11H25	FITTING10		2

Order the manual at mid-west-tech.com >

Title: Seat Bar Kit (Compression Spring)
Model Number: 730
Serial Number: 4998M11001 & Above

Ref #	Part #	Description	S/N	Q-ty
1	6713853	KIT SEAT BAR, Ref. 2 - 18 & 21		1
2		SEAT BAR, SEAT BAR, NLA - Order 6716777 Seat Bar & (2) ea. of Ref. 3, 5, 14 & 15 - 6.88" (174,8 mm) center of top hole to weld on tab - SEE NOTE - Was 6710661, A		1
2	6716777	SEAT BAR, 6.13" 155,7 mm) center of top hole to weld on tab - SEE NOTE - Was 6713609, A		1
3	6710659	BUSHING, Use W/NLA 6710661 Seat Bar		2
3	6710659	BUSHING, Use W/6716777 Seat Bar		4
4	6710660	MOUNT SPRING		2
5	6713887	SCREW SOCKET CAP		2
6	4F6106	PIN HARDENED CLEVIS, clevis		2
7	35C608	BOLT		2
8	6706962	BUSHING PIVOT		1
9	17C712	BOLT		2
10	91D7	NUT		2
11	6701535	SPRING CENTERING		2
12	6680441	BUSHING KEYED, Was 6664882, A		2
13	25E17	WASHER FLAT PLAIN		2
14	6680441	BUSHING KEYED, Use W/6716777 Seat Bar - Was 6631418, A		2
15	6713589	CLEVIS ROD END, 2.09"(53,1 mm) long - Use W/6716777 Seat Bar		2
16	17C612	SCREW HEX CAP		2
17	6571991	GUIDE, Use W/NLA 6710661 Seat Bar		2
18	8D6	NUT HEX JAM, jam - Use W/NLA 6710661 Seat Bar		2
19	1306637	PIN HAIR, cotter -Use W/NLA 6710661 Seat Bar - Not in Kit		2
20	2J6208	YOKE, 2.85"((72,4 mm) long - Use W/NLA 6710661 Seat Bar - Not in Kit		2

Order the manual at mid-west-tech.com >