A TEREX COMPANY

Service Manual

Serial Number Range

S-100
S-105

from S100/105-136
to S10012/S10512-941

from S10011D-114
to S10015D-1000

from S10511D-133
to S10515D-982

S-120
S-125

from S120/125-404
to S12012/S12512-3399

from S12011D-113
to S12015D-1011

from S12511D-134
to S12515D-983

Part No. 102916

Rev F3

January 2019

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manual | Publication 102916

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii
Serial Number Information ii
Serial Number Legend iii

Section 1 **Safety Rules**

General Safety Rules v

Section 2 **Specifications**

Machine Specifications, S120 and S-125 Models ..... 2 - 1
Performance Specifications, S120 and S-125 Models ..... 2 - 2
Machine Specifications, S100 and S-105 Models ..... 2 - 3
Performance Specifications, S100 and S-105 Models ..... 2 - 5
Hydraulic Specifications ..... 2 - 6
Hydraulic Component Specifications ..... 2 - 8
Deutz Engine F4L 913 Specifications ..... 2 - 11
Deutz Engine BF4L 2011 Specifications ..... 2 - 12
Deutz Engine TD2011L04i Specifications ..... 2 - 13
Deutz Engine TD 2.9 Specifications ..... 2 - 14
Perkins Engine 1104D-44T Specifications ..... 2 - 15
Perkins Engine 854F-34T Specifications ..... 2 - 16
Perkins Engine 1004-42 Specifications ..... 2 - 18
Perkins Engine 1104C-44 Specifications ..... 2 - 19
Perkins Engine 804D-33T Specifications ..... 2 - 20
Cummins Engine B3.3T Specifications ..... 2 - 22
Cummins Engine B3.9L Specifications ..... 2 - 23
Cummins Engine B4.5L Specifications ..... 2 - 24
Machine Torque Specifications ..... 2 - 25
Manifold Plug Torque Specifications ..... 2 - 25
Hydraulic Hose and Fitting Torque Specifications ..... 2 - 26
SAE and Metric Fasteners Torque Charts ..... 2 - 26

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manu... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures**

Introduction ..... 3 - 1

Pre-delivery Preparation ..... 3 - 3

Maintenance Inspection Report ..... 3 - 5

Checklist A Procedures

A-1 Inspect the Manuals and Decals ..... 3 - 7

A-2 Perform Pre-operation Inspection ..... 3 - 8

A-3 Perform Function Tests ..... 3 - 8

A-4 Perform Engine Maintenance - Perkins Models ..... 3 - 9

A-5 Perform Engine Maintenance - Deutz Models ..... 3 - 9

A-6 Perform Engine Maintenance - Cummins Models ..... 3 - 10

A-7 Check the Hydraulic Filter Condition Indicators ..... 3 - 10

A-8 Perform 30 Day Service ..... 3 - 12

A-9 Perform Engine Maintenance - Perkins Models ..... 3 - 12

A-10 Perform Engine Maintenance - Deutz Models ..... 3 - 13

A-11 Grease the Turntable Rotation Bearing and Rotate Gear ..... 3 - 14

A-12 Grease the Extendable Axles ..... 3 - 15

A-13 Replace the Drive Hub Oil ..... 3 - 15

Checklist B Procedures

B-1 Inspect the Batteries ..... 3 - 18

B-2 Inspect the Electrical Wiring ..... 3 - 19

B-3 Check the Engine Oil Cooler and Cooling Fins - Deutz Models ..... 3 - 21

B-4 Inspect the Engine Air Filter ..... 3 - 22

B-5 Perform Hydaulic Oil Analysis ..... 3 - 23

B-6 Perform Engine Maintenance - Deutz Models ..... 3 - 23

B-7 Perform Engine Maintenance - Cummins Models ..... 3 - 24

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manu... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures,** continued

Checklist B Procedures

B-8 Check the Exhaust System ..... 3 - 25
B-9 Inspect the Tires, Wheels and Lug Nut Torque ..... 3 - 26
B-10 Check the Dirve Hub Oil Level and Fastener Torque ..... 3 - 26
B-11 Confirm the Proper Brake Configuration ..... 3 - 28
B-12 Check and Adjust the Engine RPM ..... 3 - 29
B-13 Test the Key Switches ..... 3 - 32
B-14 Test the Ground Control Override ..... 3 - 33
B-15 Test the Platform Self-leveling ..... 3 - 34
B-16 Test the Safety Envelope and Circuits ..... 3 - 35
B-17 Inspect the Fuel and Hydraulic Tank Cap Venting Systems ..... 3 - 41
B-18 Test the Engine Idle Select Operation ..... 3 - 42
B-19 Test the Drive Brakes ..... 3 - 43
B-20 Test the Drive Speed - Stowed Position ..... 3 - 43
B-21 Test the Drive Speed - Raised or Extended Position ..... 3 - 44
B-22 Inspect the Boom Extend/Retract Cables ..... 3 - 45

Checklist C Procedures

C-1 Perform Engine Maintenance - Deutz Models ..... 3 - 46
C-2 Perform Engine Maintenance - Cummins Models ..... 3 - 46
C-3 Perform Engine Maintenance - Perkins Models ..... 3 - 47
C-4 Perform Engine Maintenance - Perkins Models ..... 3 - 47
C-5 Replace the Engine Air Filter Element ..... 3 - 48
C-6 Grease the Platform Overload Mechanism (if equipped) ..... 3 - 48
C-7 Test the Platform Overload System (if equipped) ..... 3 - 49

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manu... Order the manual at mid-west-tech.com >

Specifications

Machine Specifications, S-120 and S-125 Models

Stowed dimensions	S-120	S-125
Length, transport position	39 ft 11 in 12.17 m	39 ft 11 in 12.17 m
Length, stowed	42 ft 8 in 13 m	46 ft 9 in 14.25 m
Width, axles retracted	8 ft 2 in 249 cm	8 ft 2 in 249 cm
Width, axles extended	11 ft 335 cm	11 ft 335 cm
Height, stowed maximum	10 ft 1 in 308 cm	10 ft 1 in 308 cm
Weight	44,340 lbs 20,112 kg	44,640 lbs 20,248 kg
Ground clearance	15 3/4 in 40 cm	15 3/4 in 40 cm
Operational dimensions		
Platform height, maximum	120 ft 36.6 m	125 ft 38.1 m
Working height, maximum	126 ft 38.4 m	131 ft 39.9 m
Horizontal reach maximum	75 ft 22.9 m	80 ft 24.4 m
Maximum load capacity	750 lb 340 kg	500 lb 227 kg
Turntable tailswing, axles retracted	66 in 168 cm	66 in 168 cm
Turntable tailswing axles extended	48 in 122 cm	48 in 122 cm
Wheelbase	12 ft 366 cm	12 ft 366 cm
Turning radius, outside, axles retracted	22 ft 2 in 6.75 m	22 ft 2 in 6.75 m
Turning radius, inside, axles retracted	13 ft 2 in 4.01 m	13 ft 2 in 4.01 m
Turning radius, outside, axles extended	18 ft 10 in 5.74 m	18 ft 10 in 5.74 m
Turning radius, inside, axles extended	8 ft 6 in 2.59 m	8 ft 6 in 2.59 m
Turntable rotation (degrees)	360° continuous	
Platform rotation	160°	
Maximum allowable side force (ANSI and CSA)	150 lbs 667 N	
Maximum allowable side force (CE)	90 lbs 400 N	
Controls	12V DC proportional	
Platform dimensions		
Length	96 in 244 cm	
Width	36 in 91 cm	
Tires and wheels		
Tire size	445/65D22.5, FF	
Tire ply rating	18	
Tire weight, new foam-filled (minimum)	815 lbs 370 kg	
Overall tire diameter	46.5 in 118 cm	
Wheel diameter	22.5 in 57 cm	
Wheel width	13 in 33 cm	
Wheel lugs	10 @ 3/4-16	
Lug nut torque, dry	420 ft-lbs 570 Nm	
Lug nut torque, lubricated	320 ft-lbs 434 Nm	

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manu... Order the manual at mid-west-tech.com >

Schematics



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions printed in the Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.

About This Section

There are two groups of schematics in this section. An illustration legend precedes each group of drawings.

Electrical Schematics

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.


Hydraulic Schematics

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.


MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manu... Order the manual at mid-west-tech.com >

Electrical Schematic - Generator Options

Belt-Driven Generator Option

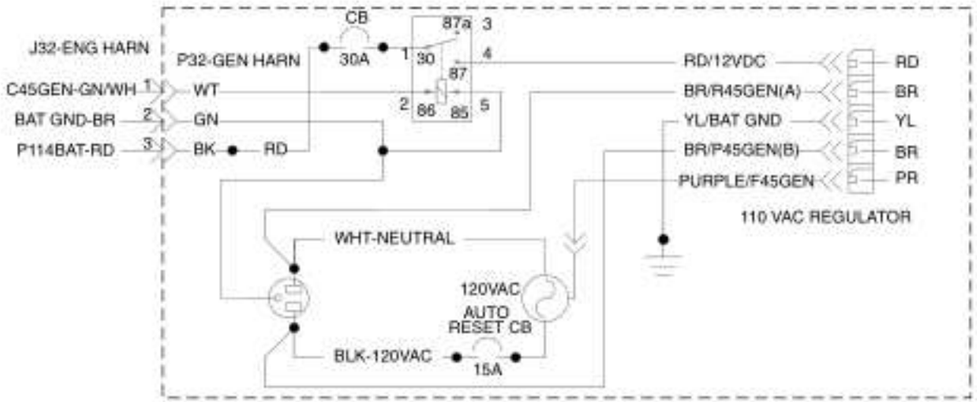



120VAC GENERATOR W/REGULATOR.

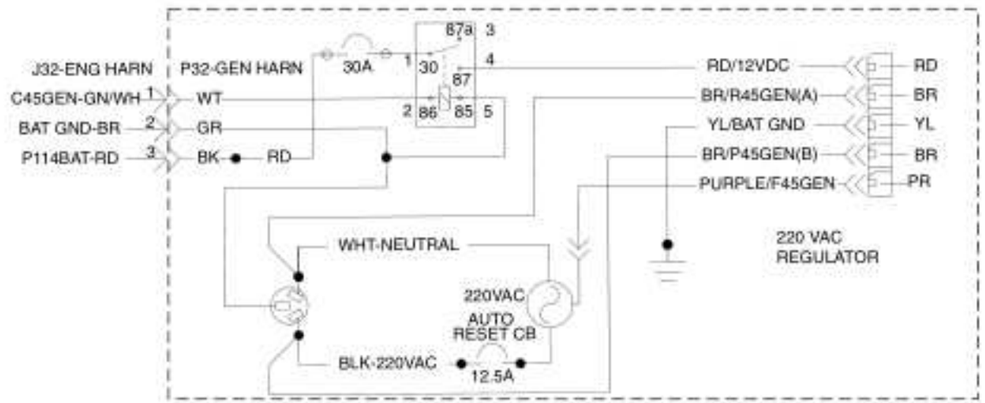

220VAC GENERATOR W/REGULATOR.


Hydraulic Generator Option

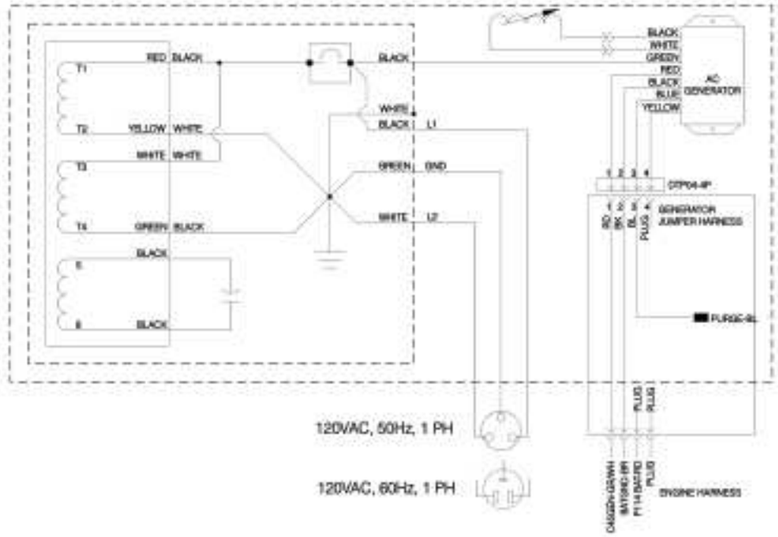

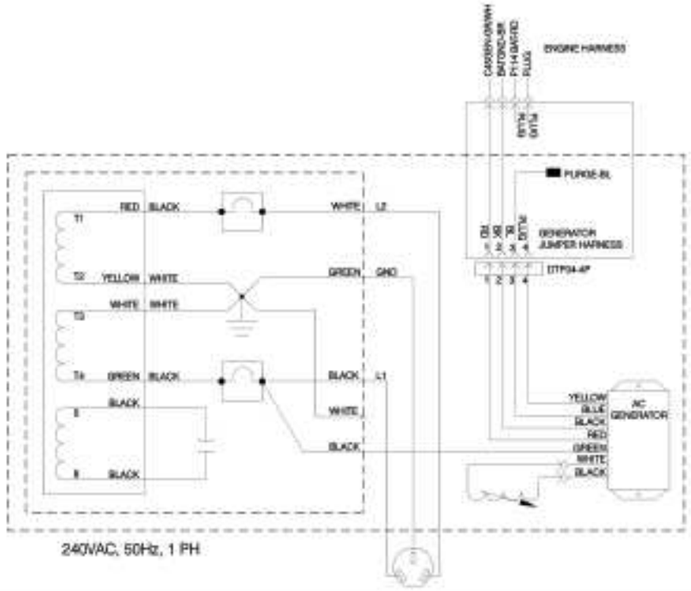

240VAC, 50Hz, 1 PH

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manual | Publication 102916
Order the manual at mid-west-tech.com >

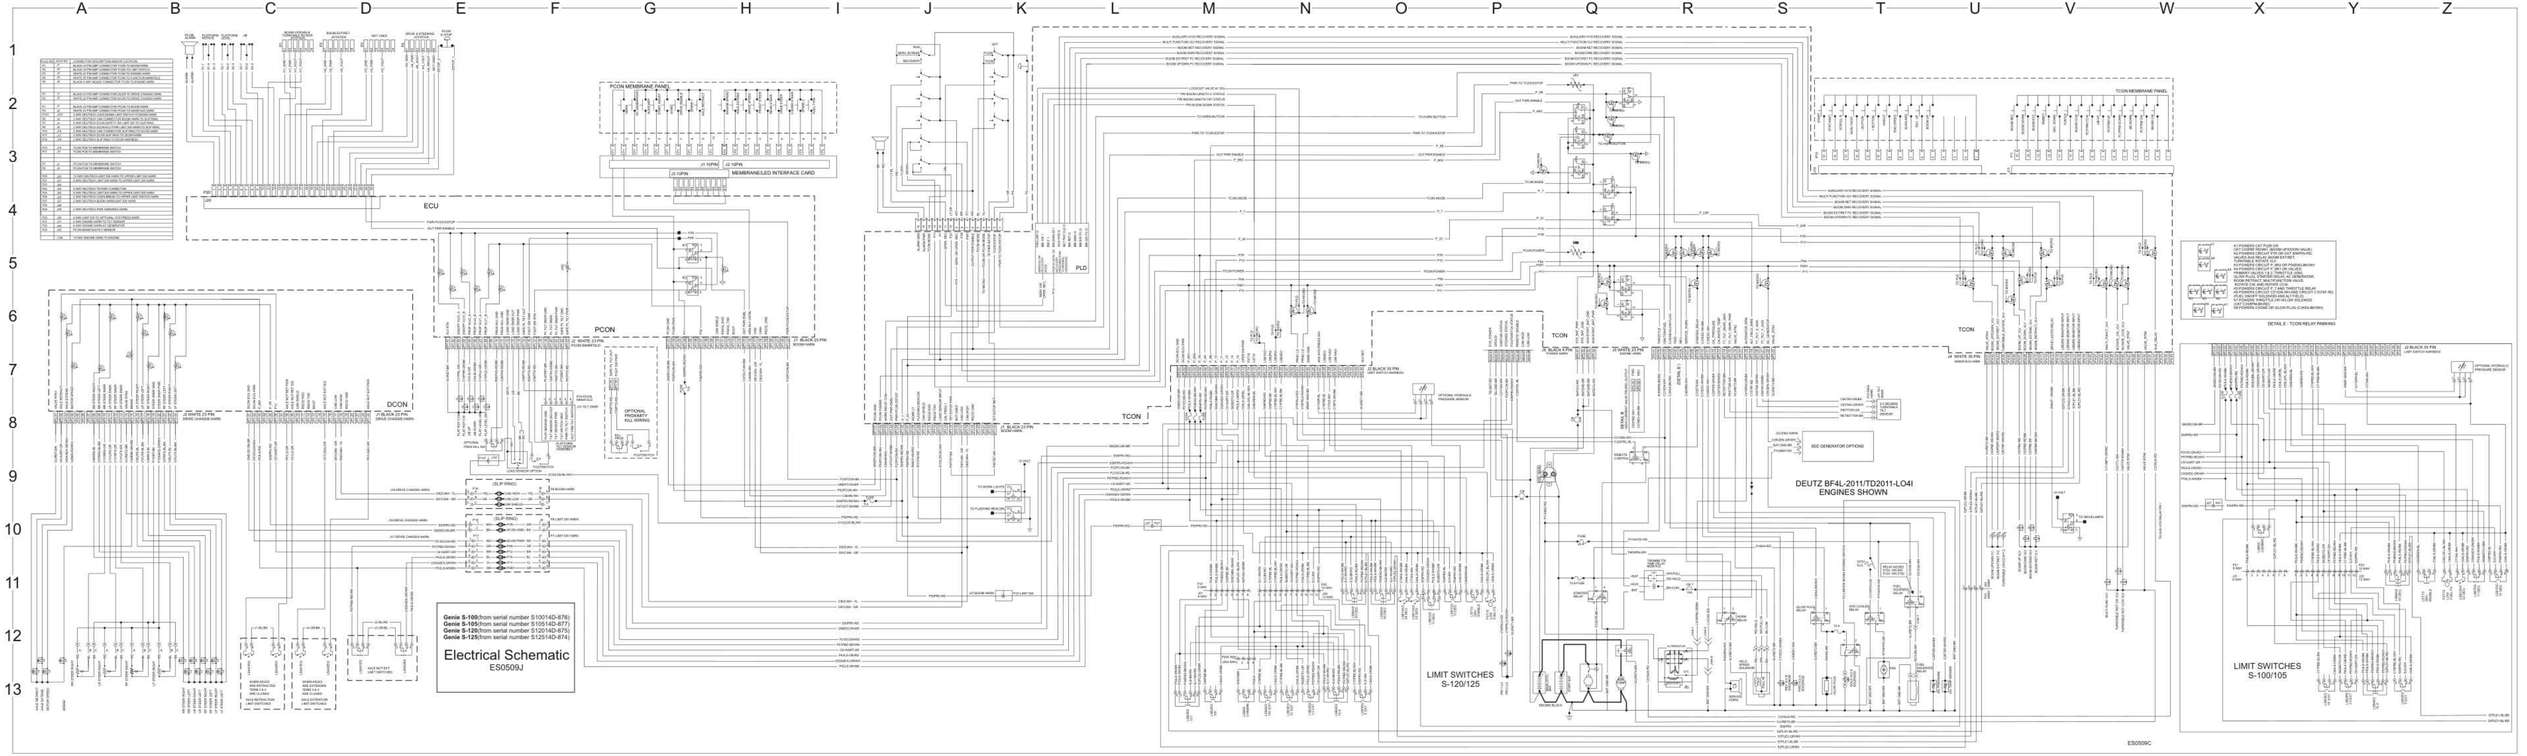

MidWestTech | Terex Genie S-100, S-105, S-120, S-125 Telescopic Boom Lift Service Manual | Publication 102916

Order the manual at mid-west-tech.com »