A TEREX COMPANY

Service Manual

Serial Number Range

TML-4000

from TML01-226

TML-4000N

from TML01-226

First Edition
First Printing
Part No. 116472
September 2008

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii
How to Read Your Serial Number iii
Parts Stocking List x
How to Order Parts xii
Service Parts Fax Order Form xiii

Section 1 **Safety Rules**

General Safety Rules v

Section 2 **Rev** **Specifications**

B Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 1
Deutz F3M 1008 Engine ..... 2 - 2
Lombardini LDW 1003/L and Deutz F3M 1008F Engine ..... 2 - 3
Perkins 103-10 Engine ..... 2 - 4
Perkins 403C-11 Engine ..... 2 - 5
Generator Specifications ..... 2 - 6
SAE and Metric Fasteners Torque Charts ..... 2 - 7

Section 3 **Rev** **Scheduled Maintenance Procedures**

Introduction ..... 3 - 1
Pre-delivery Preparation Report ..... 3 - 3
Maintenance Inspection Report ..... 3 - 5

C **Checklist A Procedures**

A-1 Inspect the Manuals and Decals ..... 3 - 6
A-2 Perform Pre-operation Inspection ..... 3 - 7
A-3 Perform Function Tests ..... 3 - 7
A-4 Perform Engine Maintenance - Perkins Models ..... 3 - 7
A-5 Perform Hitch Maintenance ..... 3 - 7
A-6 Perform Engine Maintenance - Lombardini and Deutz Models ..... 3 - 8
A-7 Perform Hitch Maintenance ..... 3 - 8
A-8 Perform 30 Day Service ..... 3 - 9

MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3	Rev	Scheduled Maintenance Procedures, continued	
		A-9 Perform Engine Maintenance - Perkins 103-10 Models	3 - 9
		A-10 Perform Engine Maintenance - Lombardini and Deutz Models	3 - 10
		A-11 Perform Engine Maintenance - Perkins 103-10 Models	3 - 10
		A-12 Perform Generator Maintenance	3 - 10
	C	**Checklist B Procedures**	
		B-1 Inspect the Battery	3 - 11
		B-2 Inspect the Electrical Wiring	3 - 12
		B-3 Inspect the Tires and Wheels (including lug nut torque)	3 - 12
		B-4 Perform Engine Maintenance - Lombardini and Deutz Models	3 - 13
		B-5 Perform Engine Maintenance - Perkins 403C-11 Models	3 - 13
		B-6 Perform Hitch Maintenance	3 - 14
		B-7 Perform Engine Maintenance - Perkins 103-10 Models	3 - 14
		B-8 Perform Axle Maintenance	3 - 14
	B	**Checklist C Procedures**	
		C-1 Inspect the Cable and Cable Pulleys	3 - 15
		C-2 Perform Engine Maintenance - Perkins 403C-11 Models	3 - 15
		C-3 Perform Engine Maintenance - Lombardini and Deutz Models	3 - 16
		C-4 Perform Engine Maintenance - Perkins 103-10 Models	3 - 16
		C-5 Perform Axle Maintenance	3 - 16
	B	**Checklist D Procedures**	
		D-1 Perform Engine Maintenance - Lombardini and Deutz Models	3 - 17
		D-2 Perform Engine Maintenance - Perkins 403C-11 Models	3 - 17
		D-3 Perform Generator Maintenance - Leroy Somer Models	3 - 18
		D-4 Perform Tongue Jack and Outrigger Jack Maintenance	3 - 18
		D-5 Perform Axle Maintenance	3 - 18
	B	**Checklist E Procedure**	
		E-1 Perform Engine Maintenance - Lombardini and Deutz Models	3 - 19
		E-2 Perform Engine Maintenance - Perkins 403C-11 Models	3 - 19
		E-3 Perform Engine Maintenance - Perkins 403C-11 Models	3 - 20
		E-4 Perform Generator Maintenance - Marathon Models	3 - 20
		E-5 Perform Generator Maintenance - Leroy Somer Models	3 - 20

MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 4	Rev	Repair Procedures	
		Introduction	4 - 1
	A	**Lighting**	
		1-1 Lighting	4 - 2
	A	**Mast**	
		2-1 Mast	4 - 4
	A	**Chassis**	
		3-1 Ground Controls	4 - 8
	B	**Generator**	
		4-1 Generator	4 - 11

Section 5	Rev	Troubleshooting	
		Introduction	5 - 1
	A	Theory of Operation	5 - 3
	A	Lamp Troubleshooting	5 - 4

Section 6	Rev	Schematics	
	A	Introduction	6 - 1
	A	Trailer Lighting Wiring Diagram	6 - 2
	A	Electrical Symbols Legend	6 - 3
	A	Electrical Schematic - TML4000N (before serial number TML02-522)	6 - 4
	A	Electrical Schematic - TML-4000 (before serial number TML02-522)	6 - 5
	A	Electrical Schematic - TML-4000 and TML-4000N (after serial number TML02-521)	6 - 6
	A	Electrical Schematic - Deutz Engine (before serial number TML05-213)	6 - 8
	B	Electrical Schematic - Lombardini and Deutz Engines (after serial number TML05-212)	6 - 9
	A	Electrical Schematic - Perkins Engine (before serial number TML05-362)	6 - 10
	A	Electrical Schematic - Perkins Engine (after serial number TML05-361)	6 - 11

MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >

Specifications

REV A

Machine Specifications

Total lighting wattage	4000 watts
Fuel capacities	
TML-4000	50 gallons 189 liters
TML-4000N	30 gallons 114 liters
Battery - Standard	
Type	12V DC
Group	70
Quantity	1
Cold cranking ampere	450
Reserve capacity @ 25A rate	105 minutes
Battery - Heavy Duty	
Type	12V DC
Group	31
Quantity	1
Cold cranking ampere	950
Reserve capacity @ 25A rate	190 minutes
Tires and wheels	
Axle	
Tire size	ST185/80D13
Load range	B
Lug nut torque, dry	80 ft-lbs 108 Nm
Tire pressure, maximum (cold)	50 psi 3.4 bar
Airborne Noise Emissions Maximum sound level at normal operating workstations (A-weighted)	71 dB

For operational specifications, refer to the Operator's Manual.

Performance Specifications

Tongue weight, maximum	
TML-4000	145 lbs 66 kg
TML-4000N	110 lbs 50 kg
Run time	
TML-4000 (full load with full fuel tank)	100 hours
TML-4000N (full load with full fuel tank)	60 hours

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.


MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >

TROUBLESHOOTING

About This Section

When a malfunction is discovered, the fault code chart in this section will help a service professional pinpoint the cause of the problem. To use this section, basic hand tools and certain pieces of test equipment are required—voltmeter, ohmmeter, pressure gauges.


General Repair Process

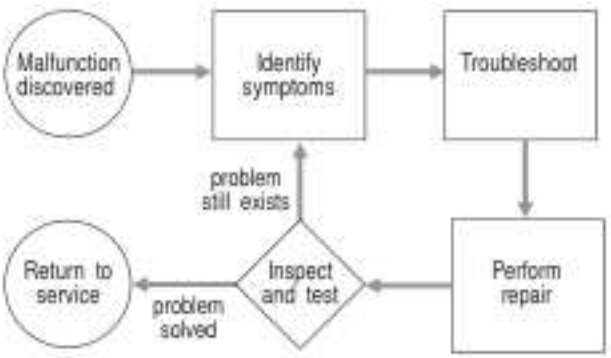

MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >

Trailer Lighting Wiring Diagram

REV A

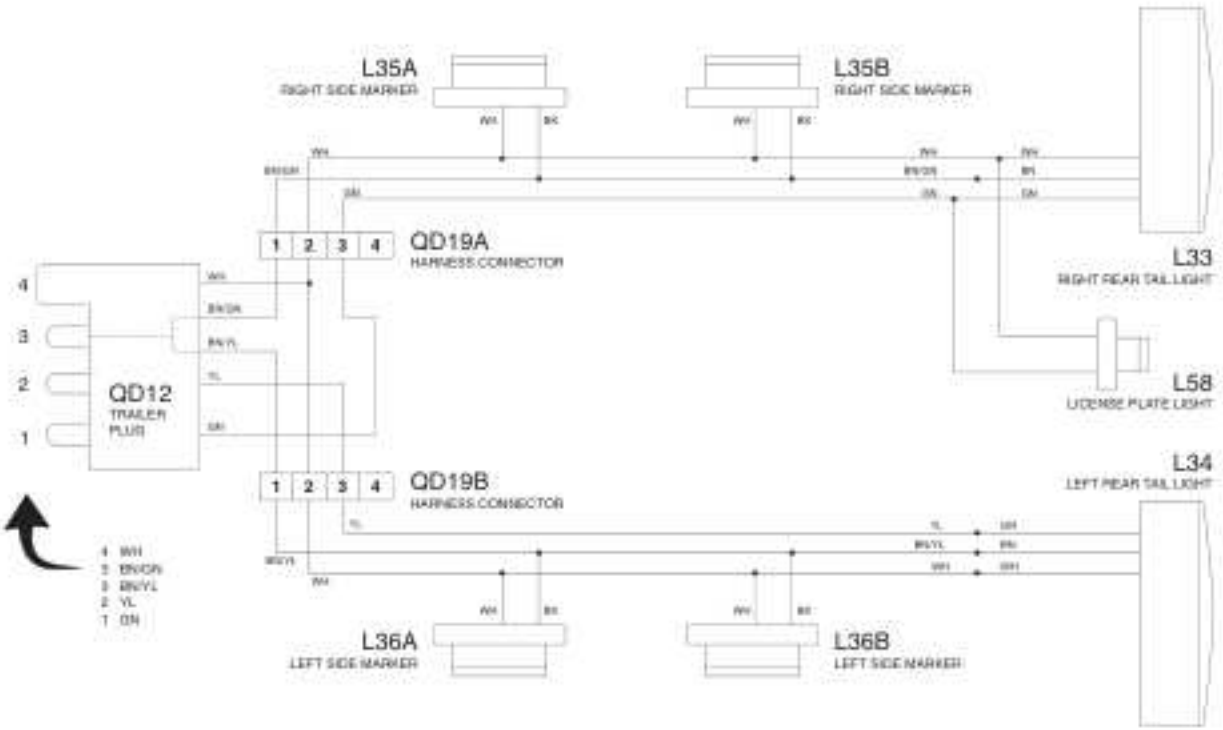

MidWestTech | Terex Genie TML-4000, TML-4000N Light Tower Service Manual | Publicati... Order the manual at mid-west-tech.com >