
snorkel

S4732E

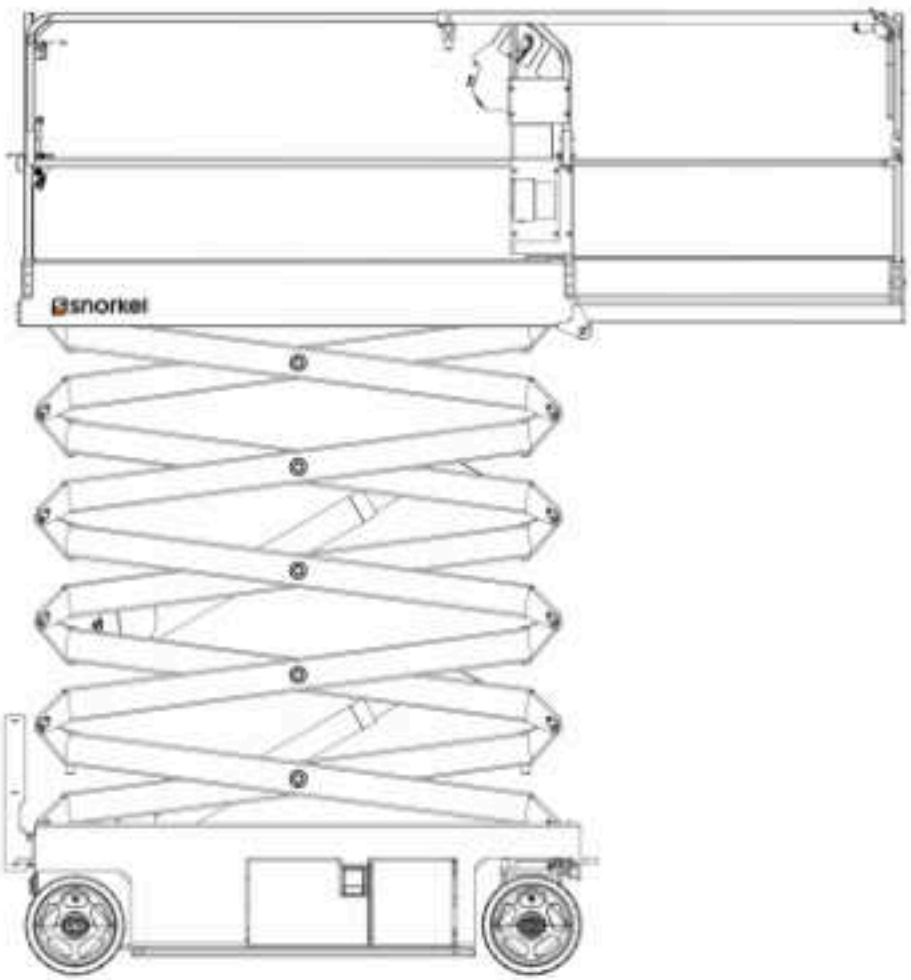

CE

REPAIR PARTS MANUAL

Part Number 1502792
September 2017

Serial number 000000 and after
Replaces 1501797 July 2016

Order the manual at mid-west-tech.com >

Item	Part No.	Name	Qty	Uom
-	1503147	DECALS S4732 ASSEMBLY AS PLATFORM CAPACITY 700#		EA
1	1843	DECAL - WARNING NZ ONLY	1	EA
2	14092	DECAL- FALL RESTRAINT ONLY	3	EA
3	0073043	DECAL OPERATING INFORMATION INSIDE	1	EA
4	0073224	DECAL MANUAL REORDER	1	EA
5	0074311	DECAL, DANGER CYLINDER FAILURE	3	EA
6	0083427	DECAL, ANCHOR TIE-DOWN/LIFT	4	EA
7	300699	DECAL, OPERATORS CHECKLIST	1	EA
8	300700	DECAL, DNGR SHEARING/CRUSHING	1	EA
9	300760	DECAL, TIPOVER HAZARD	2	EA
10	0361259	DECAL, DNGR SAFETY PROP	2	EA
11	0361367	MANUAL RESPONSIBILITIES A92.20	1	EA
12	0361533	DECAL, EMERGENCY BLEED DOWN	1	EA
13	451726	DECAL, CHK BTRY BEFORE CHARGING	2	EA
14	451986	DECAL. DNGR DO NOT ALTER SW	1	EA
15	501453-000	DECAL, FOOT TRAP	2	EA
16	512224-000	DECAL, SNORKEL	3	EA
17	969249	DECAL, STRIPE YE/BLK 2"	47	A/R
18	1500839	DECAL S4732E MODEL	2	EA
19	1500840	DECAL, FORKLIFT	2	EA
20	1500842	MANUAL OPERATORS PHOENIX II CE	1	EA
21	1501475	DECAL, DNGR TIPOVER/ELEC HAZARD LH	1	EA

MidWestTech | Snorkel S4732E Scissor Lift Repair Parts Manual | Publication 1502792 Order the manual at mid-west-tech.com >


Item	Part No.	Name	Qty	Uom
-	1503022FR	DECAL ASSEMBLY CSA S4732E FRENCH		EA
1	0073043FR	DECAL OPERATING INFORMATION INSIDE, FRENCH	1	EA
2	0073224FR	DECAL MANUAL REORDER FRENCH	1	EA
3	0074311FR	DECAL, DANGER CYLINDER FAILURE, FRENCH	3	EA
4	0083427	DECAL, ANCHOR TIE-DOWN/LIFT	4	EA
5	508862-000	DECAL, OPERATORS CHECKLIST	1	EA
6	508863-000	DECAL - BEWARE DESCENDING PLAT	1	EA
7	511176-000	DECAL DNGR TIPOVER HAZARD	2	EA
8	508867-000	DECAL, CYLINDER DANGER	2	EA
9	0361533	DECAL, EMERGENCY BLEED DOWN	1	EA
10	0361661FR	DECAL, ANSI/CSA COMPLIANT	1	EA
11	1502097FR	DECAL CHK BTRY BEFORE CHARGING	2	EA
12	451986FR	DECAL. DNGR DO NOT ALTER SW	1	EA
13	501453-000	DECAL, FOOT TRAP	2	EA
14	512224-000	DECAL, SNORKEL	3	EA
15	969249	DECAL, STRIPE YE/BLK 2"	47	A/R
16	1500839	DECAL S4732E MODEL	2	EA
17	1500840	DECAL, FORKLIFT	2	EA
18	1500842FR	MANUAL, OPERATORS S3219E CE	1	EA
19	1501475FR	DECAL, DNGR TIPOVER/ELEC HAZARD LH	1	EA
20	1501476FR	DECAL, DNGR TIPOVER/ELEC HAZARD RH	1	EA

MidWestTech | Snorkel S4732E Scissor Lift Repair Parts Manual | Publication 1502792 Order the manual at mid-west-tech.com >

Item	Part No.	Name	Qty	Uom
-	6047139	CYLINDER STEER BLK-PB		EA
1	6047139	CYLINDER STEER BLK-PB	1	EA
*	6047207	SEAL KIT-PB		
500	6091710	SEAL KIT- ROSENBOOM	1	EA
6	KIT ITEM	O-RING	1	EA
7	KIT ITEM	O-RING	2	EA
8	KIT ITEM	BACKUP RING DYNAMIC	2	EA
9	KIT ITEM	BACKUP RING	2	EA
10	KIT ITEM	DISO-PAC	1	EA
11	KIT ITEM	BT U-CUP	2	EA
12	KIT ITEM	HD ROD WIPER, SEALED OD	2	EA
13	KIT ITEM	WEARBAND	1	EA
14	KIT ITEM	ROUND WRAP-IN WIRE	1	EA
15	KIT ITEM	SQUARE WRAP-IN WIRE	2	EA

MidWestTech | Snorkel S4732E Scissor Lift Repair Parts Manual | Publication 1502792 Order the manual at mid-west-tech.com >

EZ230 CONNECTIONS	
P1-1	5V TO JOYSTICK (LOW CURRENT)
P1-3	0V TO JOYSTICK (LOW CURRENT)
P1-4	Joystick analog input
P1-7	LOW BATTERY LIGHT (0V)
P1-8	OVERLOAD LIGHT (0V)
P1-9	FLASHING LIGHT (0V)
P2-2	ANGLE SENSOR #1 INPUT
P2-3	0V (LOW CURRENT)
P2-4	PRESSURE SENSOR INPUT
P2-5	ANGLE SENSOR #2 INPUT
P2-7	SENSOR VOLTAGE (LOW CURRENT)
P2-8	STACK LOWER (0V = ACTIVE)
P2-9	OVERLOAD AND MOTION ALARM
P3-1	PLATFORM INPUT
P3-2	VALVE SUPPLY
P3-3	2-SPEED SWITCH (B+ = ACTIVE)
P3-6	DRIVE SWITCH (B+ = ACTIVE)
P3-7	LIFT SWITCH (B+ = ACTIVE)
P3-8	STEER RIGHT (B+ = ACTIVE)
P3-9	STEER LEFT (B+ = ACTIVE)
P3-12	JOYSTICK ENABLE (B+ = ACTIVE)
P4-1	GROUND CONTROL INPUT
P4-3	LOADING CONTROL ENABLE
P4-4	GROUND CONTROL LOWER
P4-5	GROUND CONTROL LIFT
P4-7	POTHOLE SENSOR INPUT
P4-8	LOADING - STEER LEFT
P4-9	LOADING - STEER RIGHT
P4-11	LOADING - DRIVE FORWARD
P4-12	LOADING - DRIVE REVERSE
P5-1	CONTACTOR OUTPUT
P5-2	FORWARD VALVE OUTPUT
P5-3	REVERSE VALVE OUTPUT
P5-6	STEER LEFT VALVE OUTPUT
P5-8	STEER RIGHT VALVE OUTPUT
P5-9	2 SPEED VALVE OUTPUT
P5-11	LIFT VALVE OUPUT
P5-12	LOWER VALVE OUTPUT
P6-1	DISPLAY SUPPLY
P6-2	DISPLAY RECEIVE
P6-3	DISPLAY TRANSMIT
P6-4	DISPLAY 0V RETURN

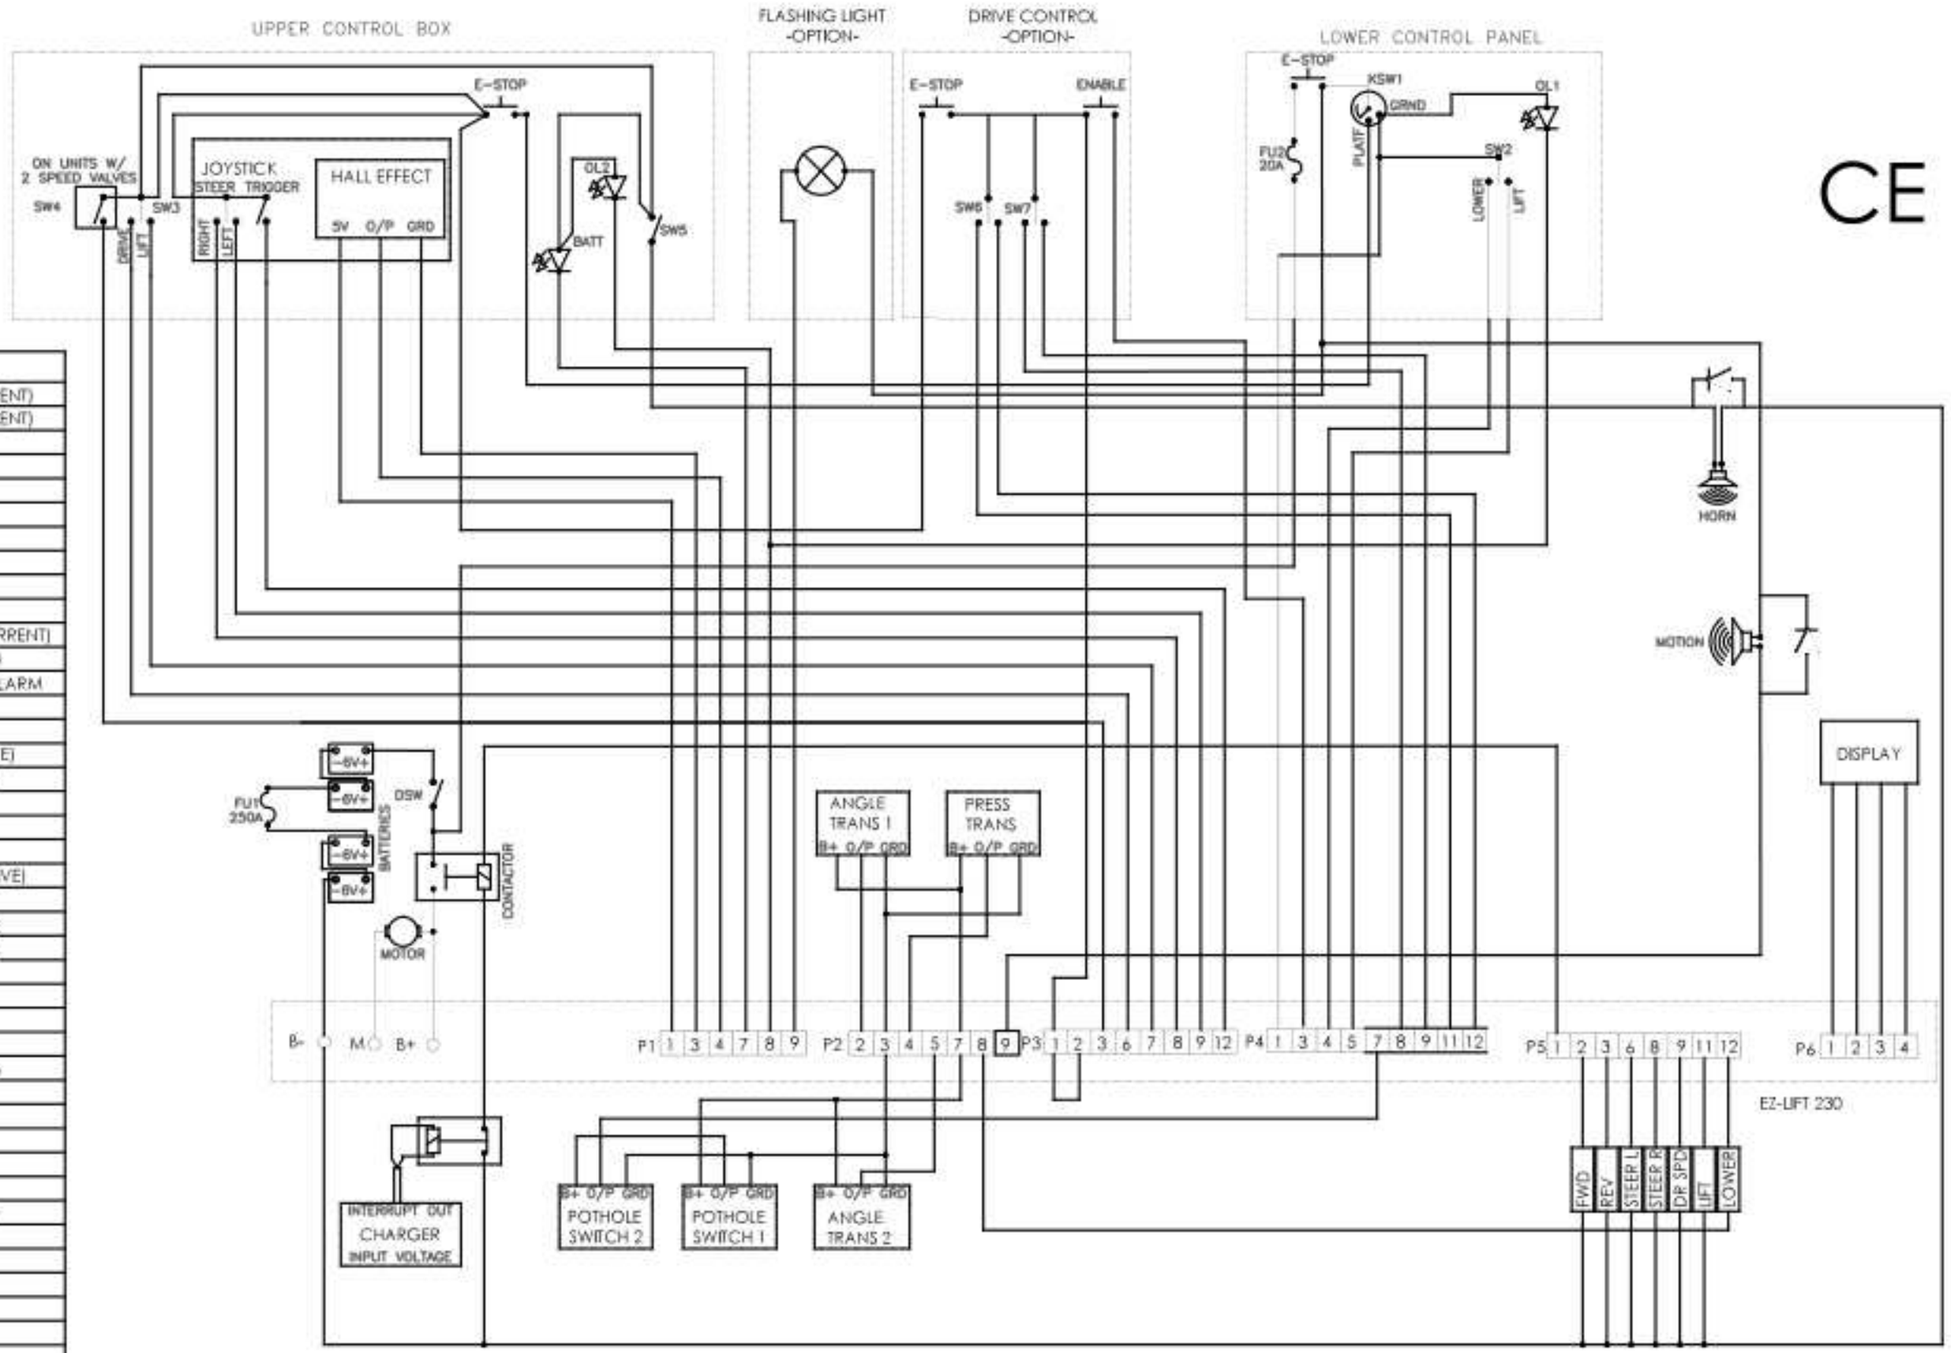

Order the manual at mid-west-tech.com >