MODELS | SJ6826 RT SJ6832 RT



Parts Manual

Compact Rough Terrain Series (ANSI/CSA & KC)

Part No. 157950AE December 14, 2023

SKYJACK

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

Table Of Contents

1.0 Platform Related Parts

1.1 Gate Assembly 6
1.2 Platform Railing Assembly 8
1.3 Extension Platform Railing Assembly 10
1.4 Main and Extension Platform Assembly 12
1.5 Gate Latch Assembly 14
1.6 Quick Release Pins 15
1.7 Air Hose to Platform Assembly 16
1.8 Platform AC Outlet Assembly 17
1.9 Control Console Assembly 18
1.10a Drive/Steer Controller Assembly 22
1.10b Drive/Steer Controller Assembly 24
1.11 Scissor Arm Control Cable Assembly 26

2.0 Scissor Related Parts

2.1 Scissor Assembly (Model 6826RT) 28
2.2 Scissor Assembly (Model 6832RT) 30
2.3 Scissor Assembly - Mounting Hardware 32
2.4 Scissor Assembly - Connecting Hardware 34
2.5 Limit Switch Assembly 37
2.6 Lift Cylinder Assembly and Mounting Hardware 38
2.7 Holding Valve Assembly 40
2.8 Light and Beeper Assembly 42

3.0 Base Related Parts

3.1 Base Assembly 44
3.2 Propane Tray Assembly (ANSI/CSA) 48
3.3 Steer Cylinder Assembly (with Hardware) 50
3.4 Tie Rod Assembly (with Hardware) 52
3.5 Splitter Manifold Assembly 53
3.6 Hydraulic Hose Connections - Splitter Manifold 54
3.7 Wheel Motor Assembly (Front) 56
3.8 Wheel Motor Assembly (Rear) 57
3.9 Hydraulic Hose Connections - Main Manifold 58
3.10 Hydraulic Cabinet Assembly 60
3.11 Oil Tank Assembly 62
3.12 Fuel Tank Assembly 63
3.13 Main Manifold Assembly 64
3.14 Hydraulic Cabinet Door Assembly 69
3.15 Engine Cabinet Assembly 70
3.16 Electrical Panel Assembly 72
3.17 Engine to Tray Assembly (Kubota DF972) 74
3.18 Engine to Tray Assembly (Kubota D902) 76
3.19 Engine Tray Assembly 78
3.20 Engine Cabinet Door Assembly 79
3.21 Engine and Main Manifold Harnesses 80
3.22 Electrical Panel Harnesses 82

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

Table Of Contents

4.0 Engine Related Parts

4.1 Engine Assembly (Kubota DF972) 84
4.2a Air Cleaner Assembly (Kubota DF972) 90
4.2b Air Cleaner Assembly (Kubota DF972) 91
4.3a Exhaust Assembly (Kubota DF972 / D902) 92
4.3b Exhaust Assembly (Kubota DF972) 93
4.4 Radiator Kit (Kubota DF972 / D902) 94
4.5 Hydraulic Pump Assembly (Kubota DF972 / D902) 97
4.6 Single Propane Tank Assembly (Kubota DF972) 98
4.7 Dual Propane Tank Assembly (Kubota DF972) 100
4.8 Evaporator Canister Assembly (Kubota DF972) 103
4.9 Engine Assembly (Kubota D902) 104
4.10 Air Cleaner Assembly Kit (Kubota D902) 108
4.11 Fuel Line Connections (Kubota D902) 109

5.0 Optional Equipment

5.1 Outrigger Control Box Assembly 110
5.2 Electrical Harness Connections - Outriggers 112
5.3 GP-108 Controller 116
5.4 Flashing Light Relay Harness 117
5.5 Front and Rear Outrigger Assembly 118
5.6 Outrigger Assembly 120
5.7 Outrigger Cylinder Assembly 122
5.8 Hydraulic Hose Connections - Outriggers 123
5.9 Outrigger Manifold Assembly 124
5.10 800W Inverter Option 126
5.11 Hydraulic Generator Option 128
5.12 Hydraulic Hose Connections - Hydraulic Generator 130
5.13 Hydraulic Generator Relay Assembly 133
5.14 Scissor Guard Option (with Diesel Fuel) 134
5.15 Scissor Guard Option (ANSI/CSA with Dual Fuel) 136
5.16 Work Light Option 138

6.0 Labels


6.1 Label Kit 139
6.2 Labels - Chassis (Left and Rear) 140
6.3 Labels - Chassis (Front and Right) 142
6.4 Labels - Chassis (Top) 143
6.5 Labels - Miscellaneous 144

7.0 Tables

7.1 Fluid Tables 149


MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

1.7 Air Hose to Platform Assembly

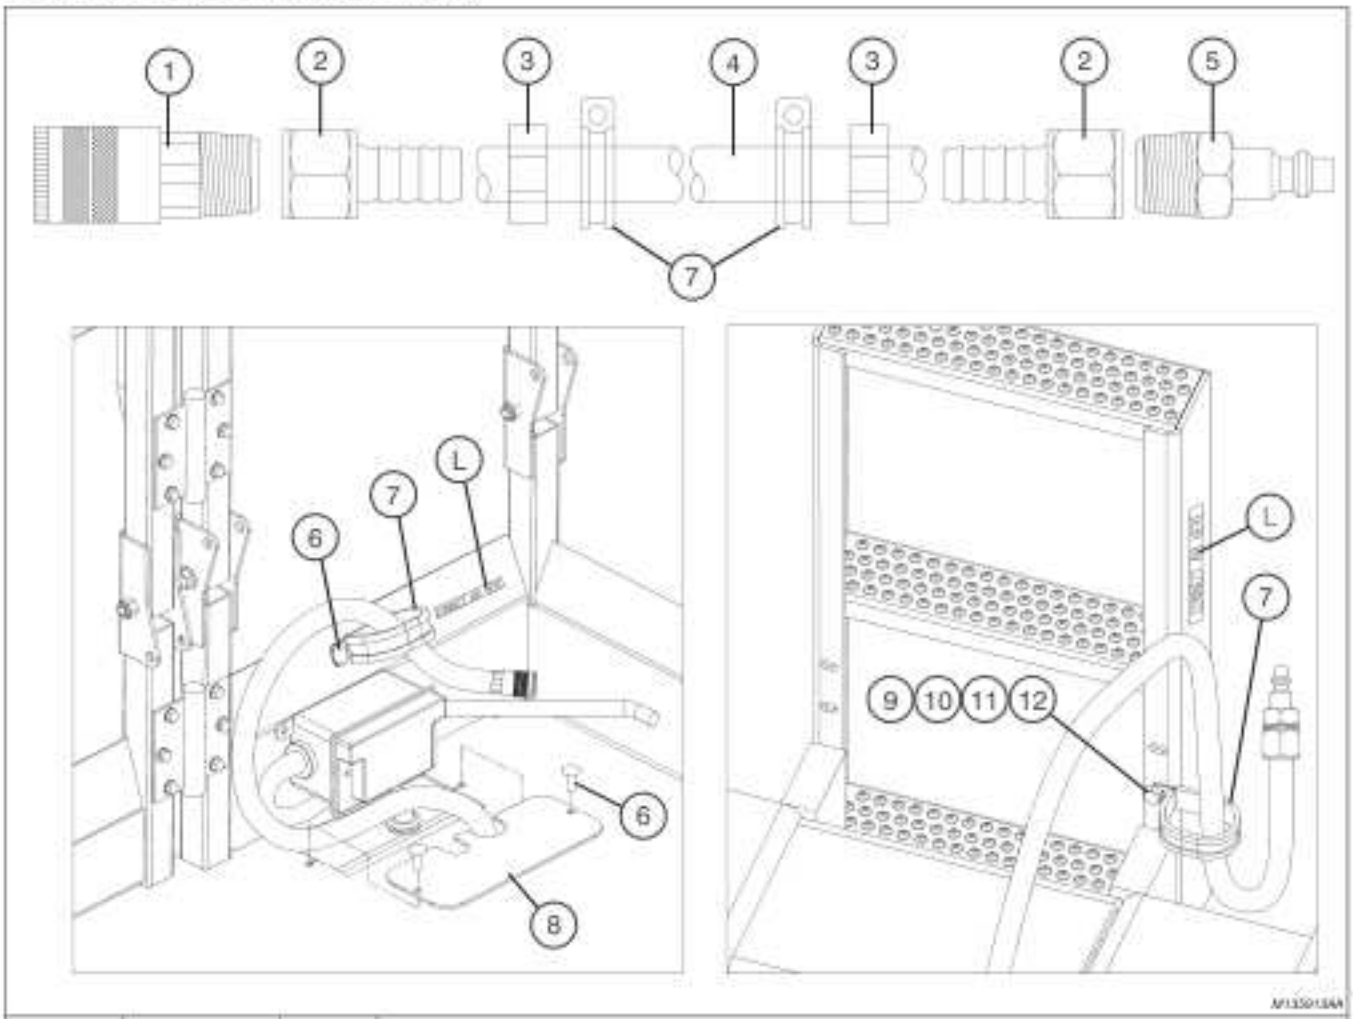


Index No.	Skyjack Part No.	Qty.	Description
1	107882	1	FITTING, Female disconnect
2	109050	2	FITTING, Hose barb
3	107886	2	CLAMP, Hose
4	107884	37'	HOSE, Air (Model 6826RT)
	107884	45'	HOSE, Air (Model 6832RT)
5	107883	1	FITTING, Male disconnect
6	134140	3	RIVET, Open end dome (1/4" diameter)
7	103078	2	CLAMP, Double (G10)
8	137567	1	PLATE, Air control/110 cover
9	103978	1	NUT, Hex head (3/8"-16, Grade 5)
10	103999	1	WASHER, Lock (3/8")
11	103472	1	WASHER, Flat (3/8")
12	101632	1	BOLT, Hex head (3/8"-16 x 3/4", Grade 5)
L	(Ref.)	-	LABEL, Connect Air Here (Refer to Section 6)

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

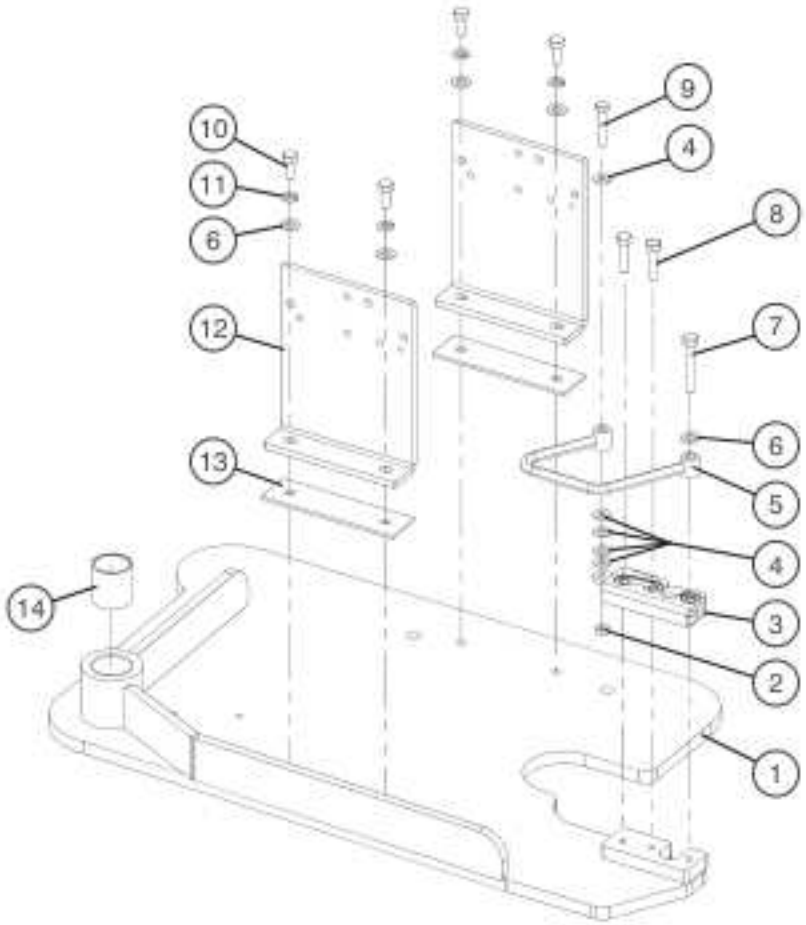


Index No.	Skyjack Part No.	Qty.	Description
-	136394	-	ENGINE TRAY ASSEMBLY (Kubota DF972/D902)
1	136387	1	• WELDMENT, Tray engine
2	115649	1	• NUT, Hex nylon lock (1/4"- 20 Grade 5)
3	112307	1	• LATCH, Rotary (Left hand)
4	103995	5	• WASHER, Flat (1/4")
5	126634	1	• HANDLE WELDMENT, Tray Lock
6	103996	6	• WASHER, Flat (5/16")
7	103865	1	• BOLT, Hex head (5/16"-18 x 2", Grade 5)
8	103864	2	• BOLT, Hex head (5/16"-18 x 1", Grade 5)
9	103860	1	• BOLT, Hex head (1/4"- 20 x 1.75", Grade 5)
10	103887	4	• BOLT, Hex head (5/16"-18 x 3/4", Grade 5)
11	103404	4	• WASHER, Lock (5/16")
12	136077	2	• BRACKET
13	136976	2	• PAD, Rubber
14	125262	2	• BUSHING, Fiberglide (1.25" diameter x 1.5")

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

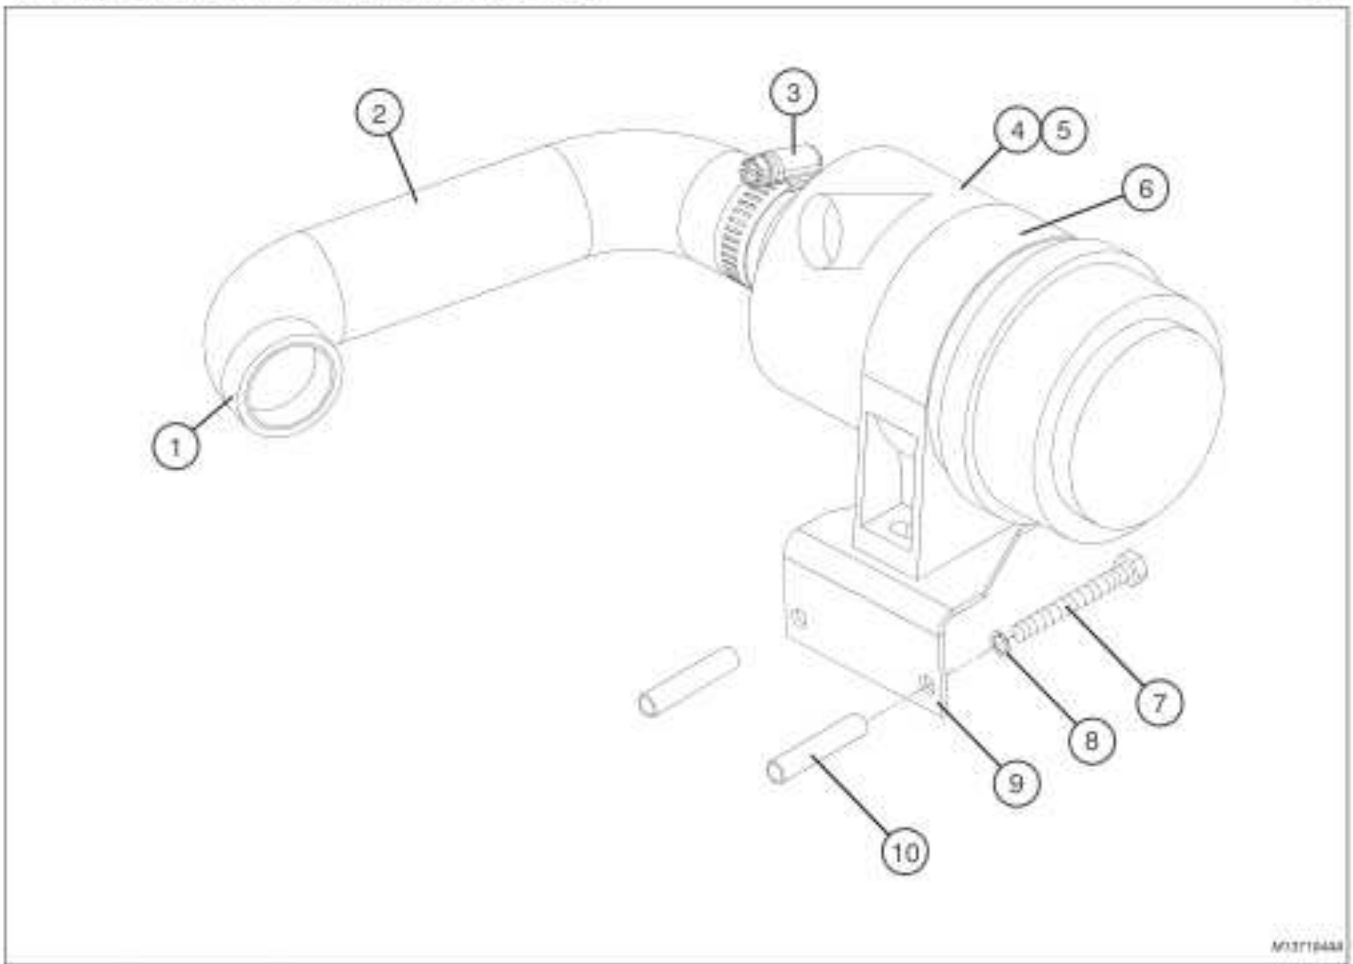


Index No.	Skyjack Part No.	Qty.	Description
-	136038	AR	AIR CLEANER ASSEMBLY (Kubota DF972) (For models with serial number 37003443 & below)
1	104528	1	• CLAMP, Gear (#28)
2	136145	1	• HOSE, Inlet
3	133222	1	• CLAMP, Gear (#32)
4	136144	1	• AIR CLEANER ASSEMBLY (Kubota)
5	137924	1	• FILTER ELEMENT, (Kubota)
6	136148	1	• BRACKET, Air cleaner band
	136667	AR	• • BOLT, Hex head (M8-1.25 x 30mm)
	127940	AR	• • WASHER, Flat (M8 - ZN)
	121059	AR	• • NUT, Hex (M8-1.25)
7	136154	AR	• BOLT, Hex head (M8-1.5 x 75mm, Grade 8.8, ZP)
8	116218	AR	• WASHER, Lock (M8)
9	136153	1	• BRACKET, Air cleaner
10	136155	2	• SLEEVE (8.38mm ID x 10.65mm OD x 40mm)

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

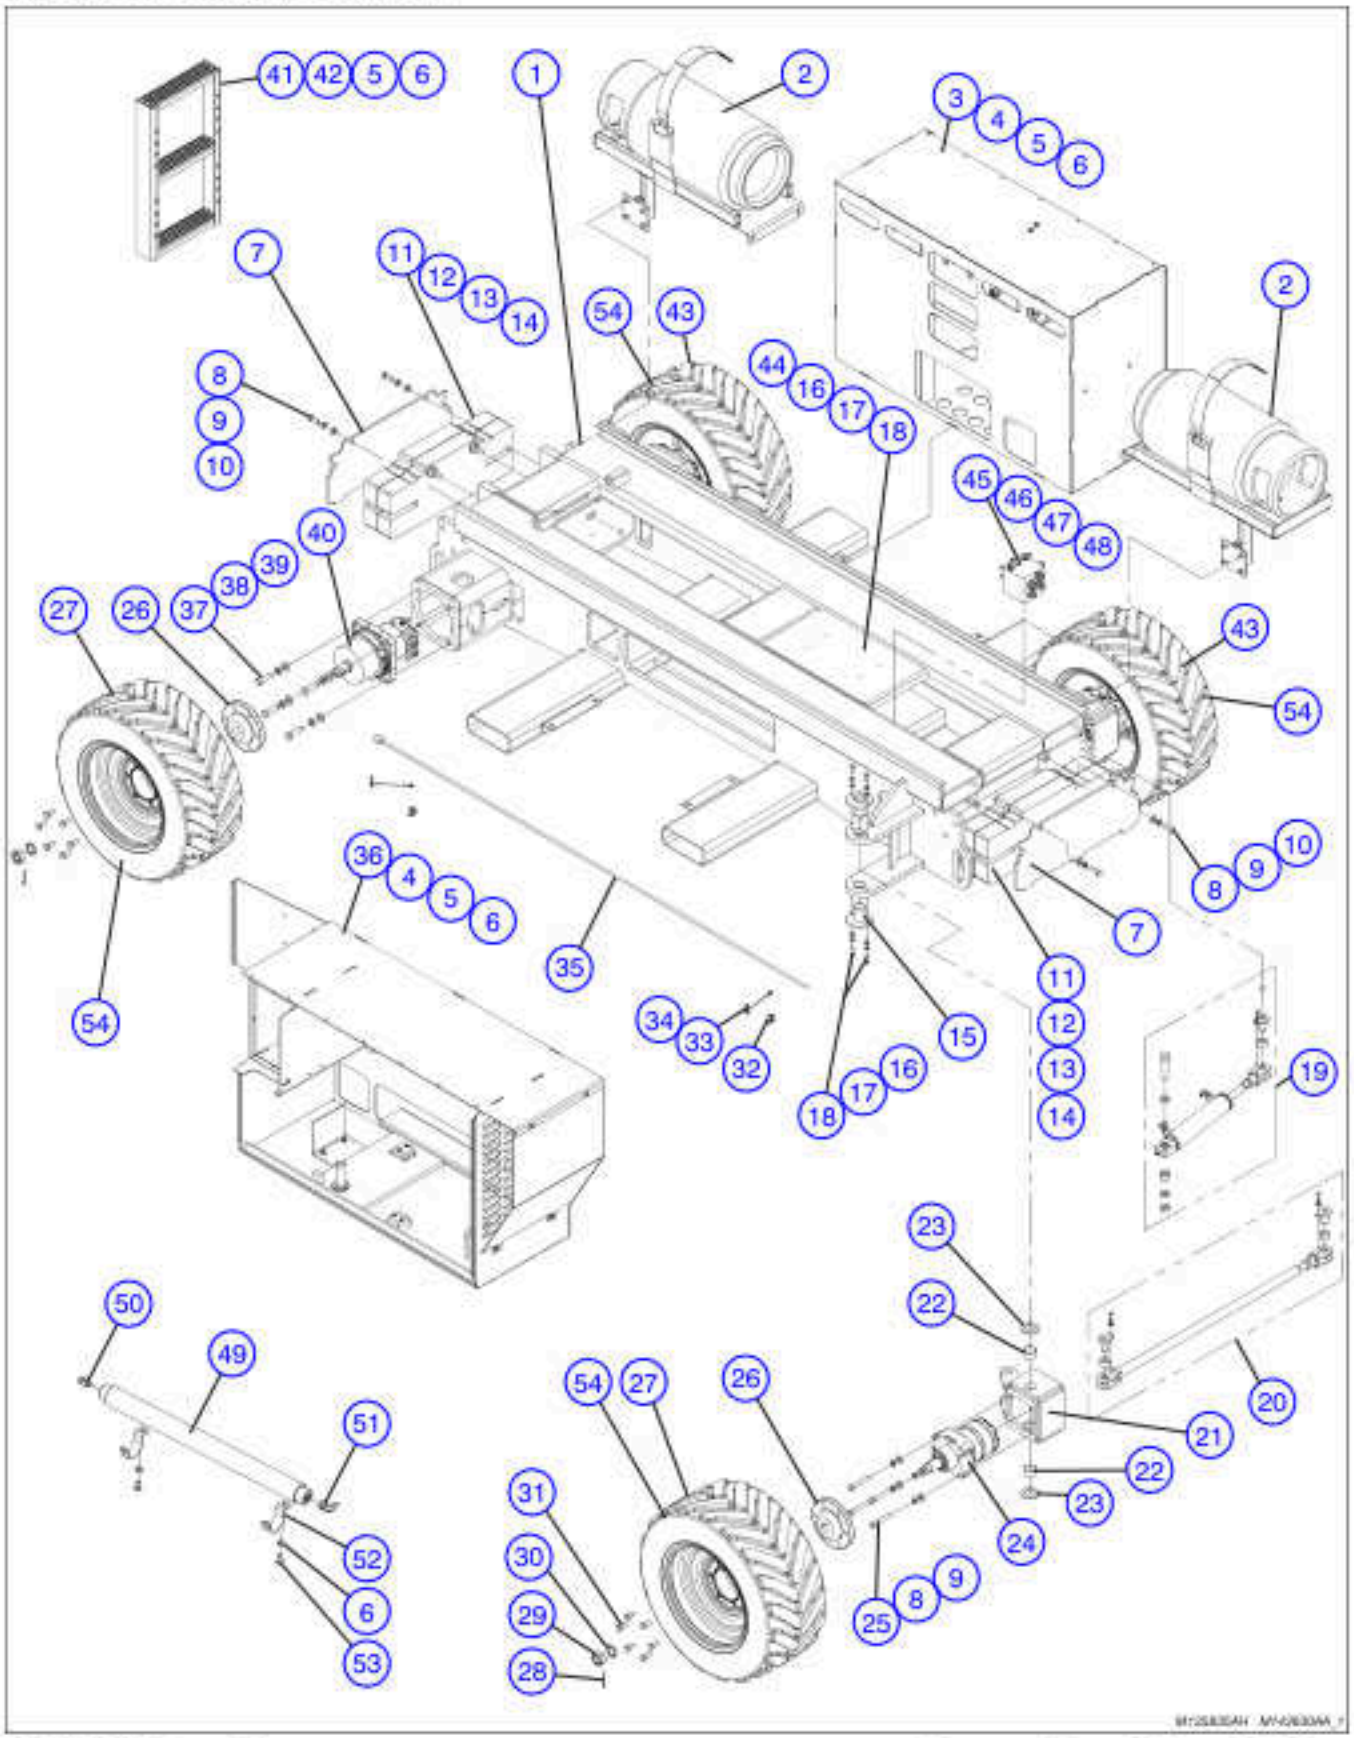

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

5.2 *Electrical Harness Connections - Outriggers (Continued)*

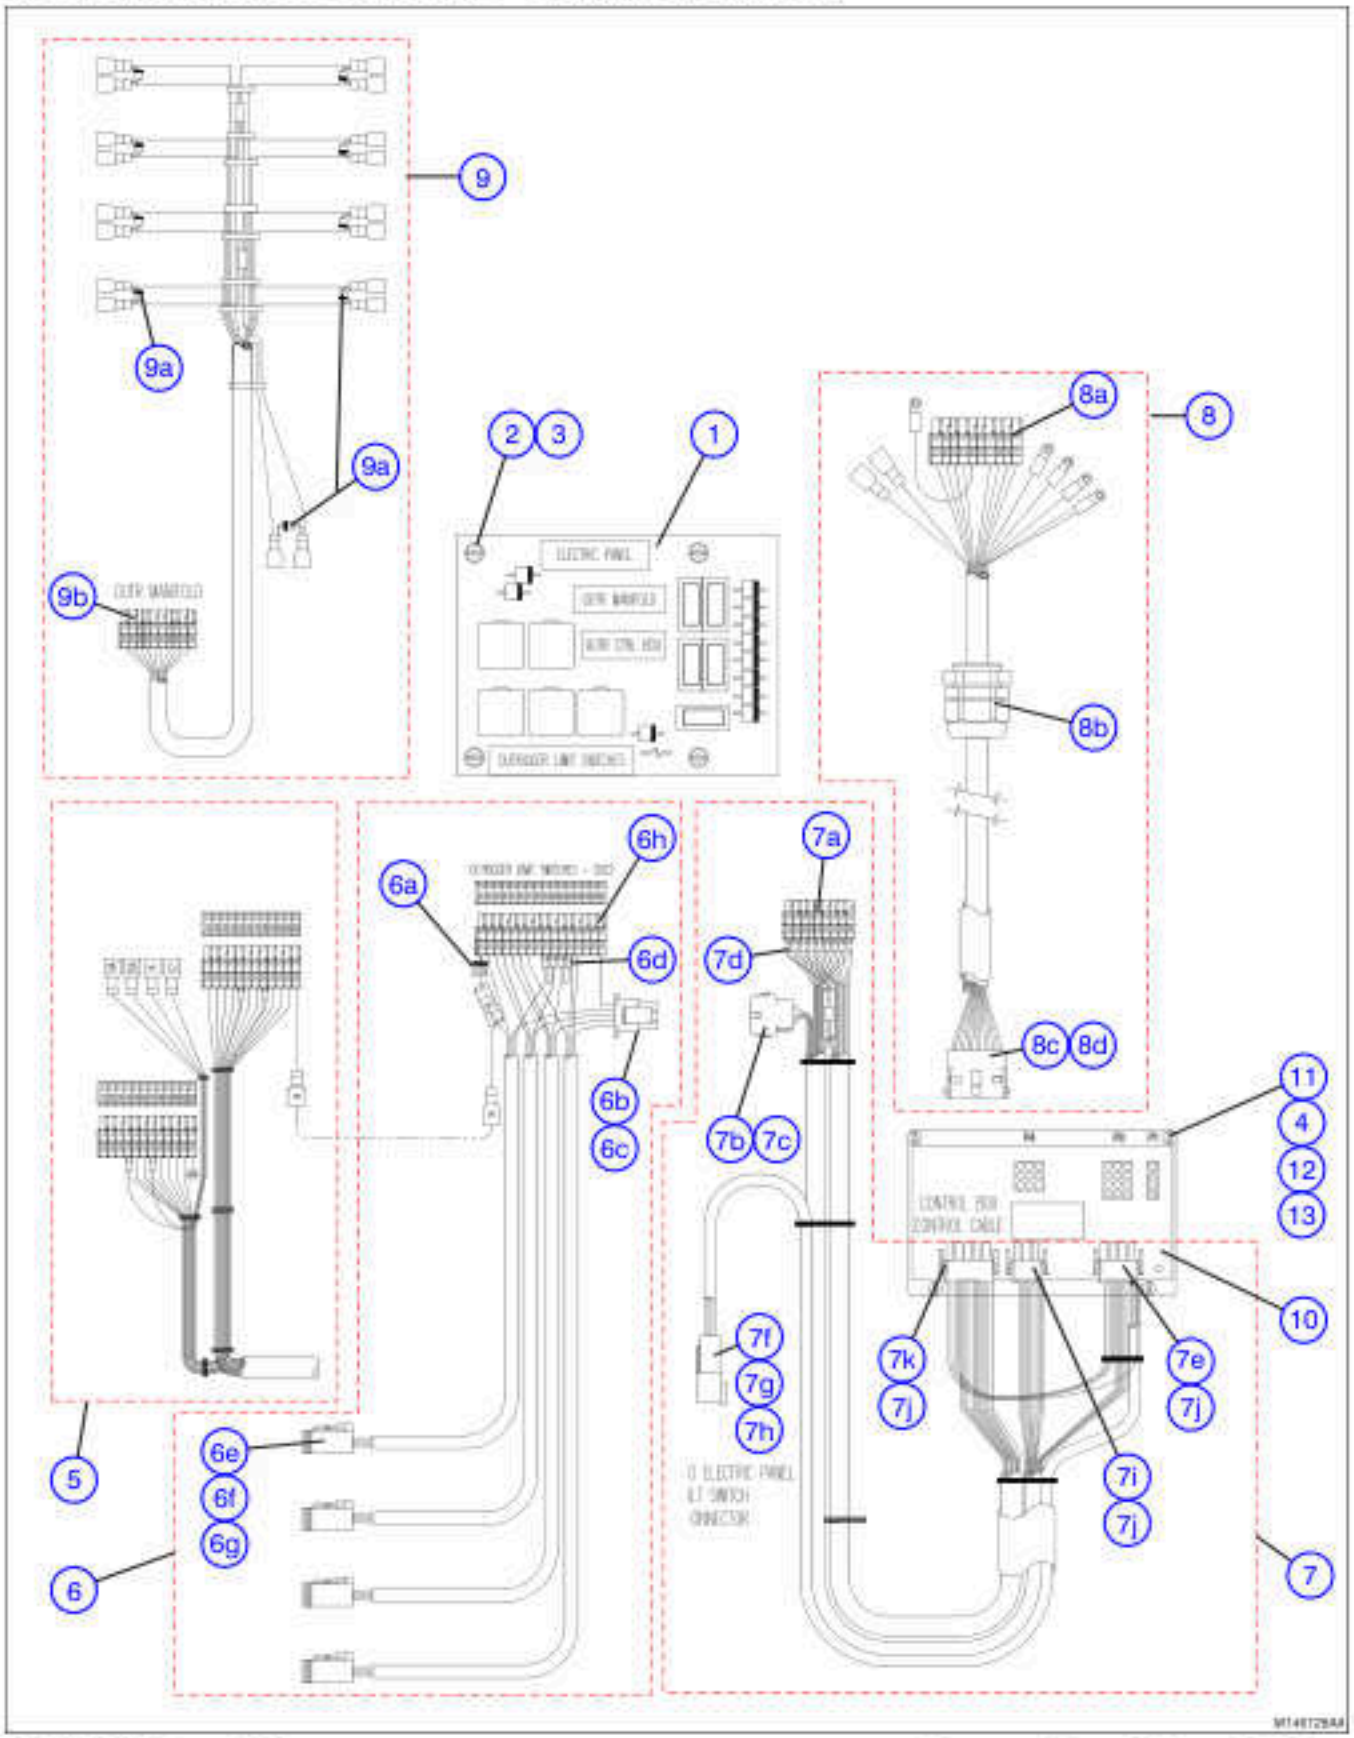

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Parts Manual |...

Order the manual at mid-west-tech.com >