
01:07-02

Edition 1 en

SCANIA
Scania Engines

Work description-
9 litre engine with 5 cylinders

Industrial Engine

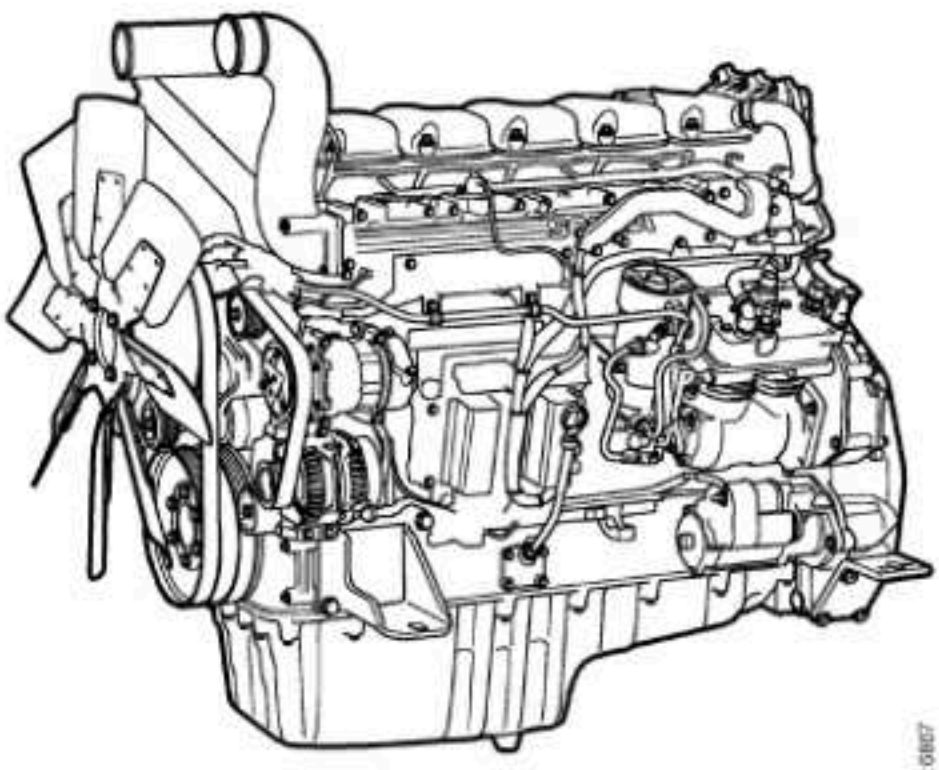

1:6907

Part No.
1 715 049

© Scania CV AB 2006-08:1

MidWestTech | JCB Scania 9 Litre 5 Cylinder Industrial Engine Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Contents

General 4
Specifications 4
General tightening torques 5
Engine assembly 6
Special tools 6
Removing the engine 6
Fitting the engine 7
Mounting the engine in a universal stand 8
Special tools 8
Cylinder head 9
Checking and adjusting the valve clearance and unit injectors 10
Removing the cylinder head 15
Fitting the cylinder head 17
Removal of valves 20
Fitting the valves 20
Checking and machining of valves 21
Renewal of valve stem seal 22
Renewal of valve seats 23
Machining the cylinder head 25
Specifications 25
Renewal of valve guides 29
Renewal of sleeves for unit injectors 30
Cylinder block 32
Reconditioning 32
Removal of cylinder liner 33
Fitting of cylinder liner 34
Measuring the cylinder liner height 35
Renewal of rear crankshaft seal 40
Removal of flywheel housing 41
Fitting the flywheel housing 41
Renewal of the front crankshaft seal 44
Crank mechanism 47
Removal of connecting rod with piston 48
Fitting of connecting rod with piston 49
Renewing a piston 51
Checking connecting rods 54
Renewal of bearing bushing in connecting rod 56
Removal of flywheel 58
Fitting the flywheel 59
Support bearing 61
Renewal of ring gear 62
Removal of crankshaft 63
Fitting the crankshaft 64
Checking and grinding of crankshaft 65
Engine transmission 67
Removal of intermediate gear 69
Fitting the intermediate gear 71
Renewal of bearing in the intermediate gear for the fuel pump (or compressor and hydraulic pump if any) 73
Renewal of bearing in the intermediate gear for the camshaft 74
Removal of camshaft gear 75
Fitting the camshaft gear 76
Removal of crankshaft gear 77
Fitting the camshaft gear 76
Removal of camshaft 79
Fitting the camshaft 80
Renewing the camshaft bearings 84
Balance shaft unit 90
Removal 91
Assembly 92
Fitting 94
Renewing the ring gear on the crankshaft 96
Checking the ring gear on the crankshaft 98
Lubrication system 99
Measuring oil pressure 100
Oil filter 101
Oil cooler 102
Oil cleaner 104
Oil pump 109
Turbocharger 110
Measuring radial and axial play 112
Open crankcase ventilation 115
Removal 115
Assembly 117
Fitting 117
Checking the open crankcase ventilation . . . 119
Form for measuring the crankcase pressure . 121
Closed crankcase ventilation 122

© Scania CV AB 2006-06:1

MidWestTech | JCB Scania 9 Litre 5 Cylinder Industrial Engine Service Manual | Publi... Order the manual at mid-west-tech.com >


Checking and machining of valves

Specifications

Intake valve	
Head angle	19,5 °
Minimum dimension A for ground valve	2,6 mm

Exhaust valve	
Head angle	44,5 °
Minimum dimension A for ground valve	1,8 mm

- Check dimension A on all valves.
- Grind the valves in a valve grinding machine

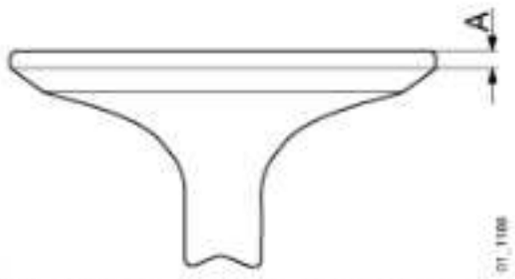

Minimum dimension A for ground valve, see table

© Scania CV AB 2006-08:1

MidWestTech | JCB Scania 9 Litre 5 Cylinder Industrial Engine Service Manual | Publi... Order the manual at mid-west-tech.com >

Removal of camshaft

5. Remove the flywheel as described in the section *Removal of flywheel*.
6. Remove the flywheel housing as described in *Removal of flywheel housing*.
7. Remove the rocker covers.
8. Remove rocker arms, pushrods and valve bridges.
9. Remove the intermediate gear according to *Removal of intermediate gear*, and the guide flange bolts.
10. Remove the camshaft gear.
11. Remove the timing gear plate.


12. Remove the camshaft covers.



13. Remove the valve tappets.

Note **Mark the valve tappets because they must be refitted in the same places.**

14. Pull the camshaft backwards. Take care not to damage the cams and bearings.

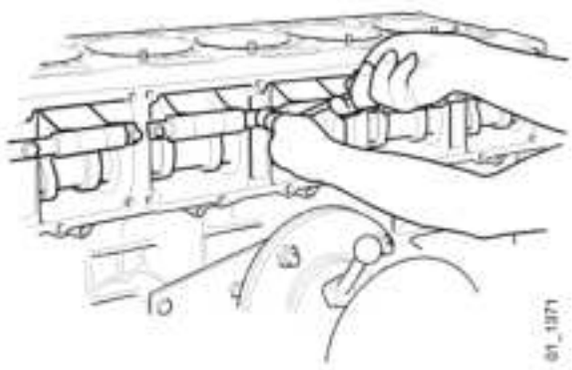

© Scania CV AB 2006-06:1

MidWestTech | JCB Scania 9 Litre 5 Cylinder Industrial Engine Service Manual | Publi... Order the manual at mid-west-tech.com >