
SKYJACK

PARTS MANUAL

SJ4726 E, SJ4732 E

DC ELECTRIC SCISSORS

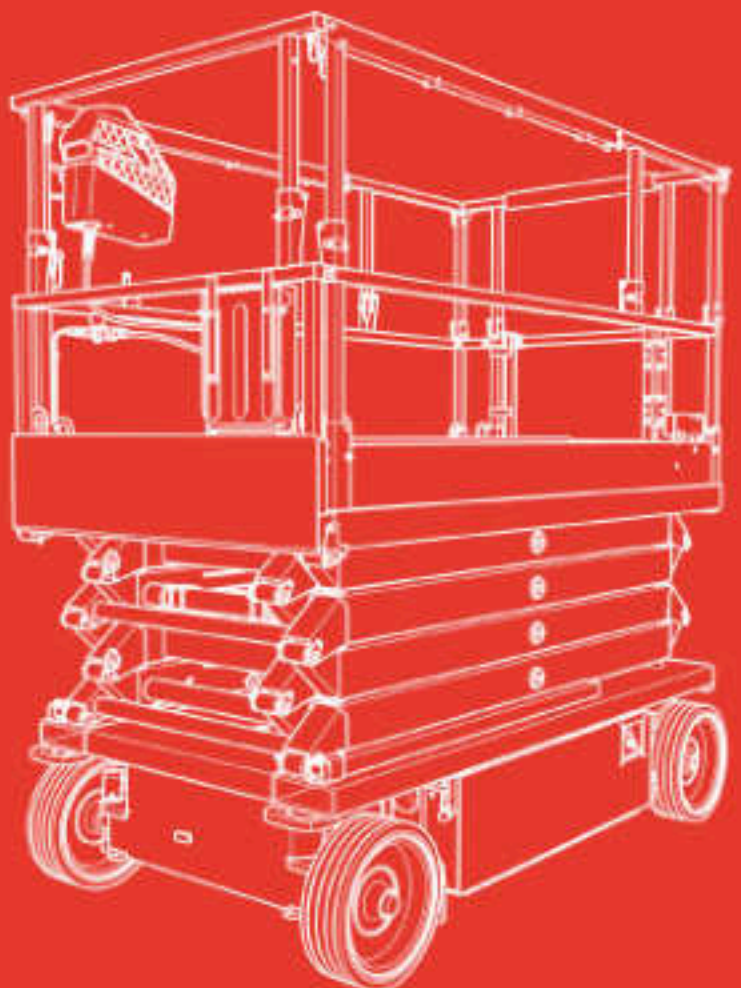

248002ACA
September 2 2026
ANSI/CSA, CE, AS, KC

MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >

Table of Contents

Foreword 7

General 7
Parts Ordering Information 7
Method of Listing 7
Quantities 7
How To Order Repair Parts 7
Recommended Service Parts 8

Section 1 – Platform 11

1.1 Main Platform 12
1.2 Extension Platform 13
1.3 Main Platform Railings 14
1.4 Extension Platform Railings 16
1.5 Half Gate 18
1.6 Full Gate 20
1.7 Platform Control Box 22
1.8 SkyProtect - Platform Control Box 24

Section 2 – Scissors 29

2.1 Scissor Stack - SJ4726 E 30
2.2 Scissor Stack - SJ4732 E 32
2.3 1st Level 34
2.4 2nd Level 36
2.5 3rd Level 38
2.6 4th Level - SJ4732 E 40
2.7 Top Level - SJ4726 E 42
2.8 Top Level - SJ4732 E 44
2.9 Scissor Hardware 46
2.10 Lift Cylinder 48
2.11 Maintenance Stand 50

Section 3 – Base 51

3.1 Base 52
3.2 Steering Assembly 54
3.3 Pothole Protection 56
3.4 Base Covers - SJ4726 E 58
3.5 Base Cover & Counterweight - SJ4732 E 59
3.6 Wheels 60


MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >

Recommended Service Parts

Description	Year 1 Qty	Year 2 Qty	Year 3 Qty	Skyjack Part No.
Mechanical				
Gate hinge	2	2	2	209527
Key, base control box	2	2	2	104466
Manual box	1	1	1	198789
Manual of Responsibilites (ANSI/CSA)	1	1	1	173200
Pin, quick release pin	5	5	5	216212
Rotary latch, hydraulic tray	0	1	1	112307
Rotary latch, battery tray	0	1	1	112308
Wheel, drive/steer	0	1	1	198608
Wheel, freewheel	0	1	1	198594
Electrical				
Base selector switch head (up/down)	0	1	1	147069
Battery cable with inline fuse	0	1	1	216103
Battery charger	0	1	1	246655
Battery disconnect switch	0	1	1	210051
Beeper	1	1	1	170620
Charger cord (ANSI)	0	1	1	223156
Charger cord (CE, AS, KC)	0	1	1	223157
Circuit breaker 10 amp	0	1	1	149780
Coil 24V, holding valve	0	1	2	103605
Coil 24V, main manifold	0	1	1	244032
Coil 12V, holding valve manifold	0	1	2	104410
Contact block, emergency stop NC (platform & base)	1	2	2	147053
Contact block NO (horn, base selector)	1	2	2	147054
Contactor, switch solenoid	0	1	1	251261
Display module, base	0	1	1	240884
Drive motor	0	1	1	240653
Emergency lowering/brake release board	0	0	1	243088
Emergency stop head (platform & base)	1	1	2	147051
Flashing light, amber LED	0	0	1	216142
Horn	1	1	1	146649
Joystick	0	0	1	236341
Keyed selector switch, (idle/pltf/base) (ANSI/CSA, AS, KC)	0	1	1	149536
Keyed selector switch, (idle/pltf/base) (CE)	0	1	1	147057
Latch, switch contact blocks	1	2	4	147056
LED block, red 24v	1	1	2	147061
LED light, green (control box)	0	1	1	243057
LED light, amber (control box)	0	1	1	228884
Limit switch - right pothole	0	1	1	210226
Limit switch - left pothole	0	1	1	210227
Motor controller	0	1	1	240701

MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >

4.1 Base Controls

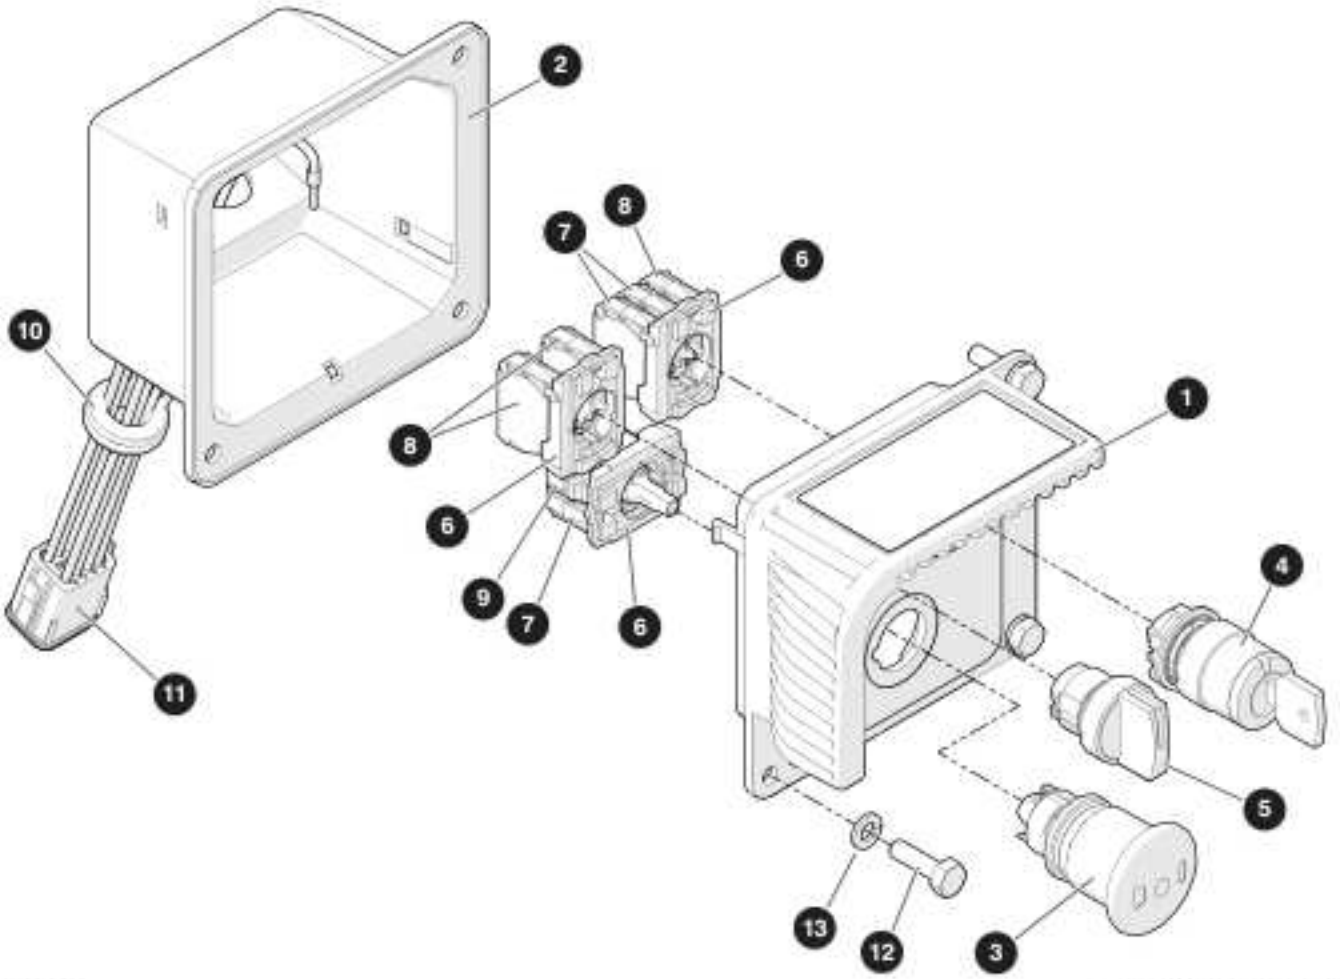


M240632AA

240632, 240633, 243096,243097

Index No.	Skyjack Part No.	Qty.	Description
-	240633	1	BASE CONTROLS - *ANSI/CSA, AS, KC*
	243097	1	BASE CONTROLS - *CE*
1	226493	1	• BASE
2	226492	1	• COVER
3	147051	1	• SWITCH, Emergency stop
4	149536	1	• SWITCH, Key - *ANSI/CSA, AS, KC*
	147057	1	• SWITCH, Key - *CE*
5	147069	1	• SWITCH, Selector - lift/lower
6	147056	3	• LATCH
7	147053	3	• BLOCK, Contactor - NC
8	147054	3	• BLOCK, Contactor - NO
9	147061	1	• BLOCK, LED - red (24 V)
10	103014	1	• GROMMET, Rubber (5/8" x 7/8" x 1/8")
11	(Ref.)	1	• HARNESS, Base controls
			(For components, refer to Section 7.5 Base Controls Harness)
12	103891	3	BOLT, Hex head (1/4"-20 x 7/8" G5)
13	104000	3	WASHER, Lock (1/4")

MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >

5.1 Hydraulic Tray

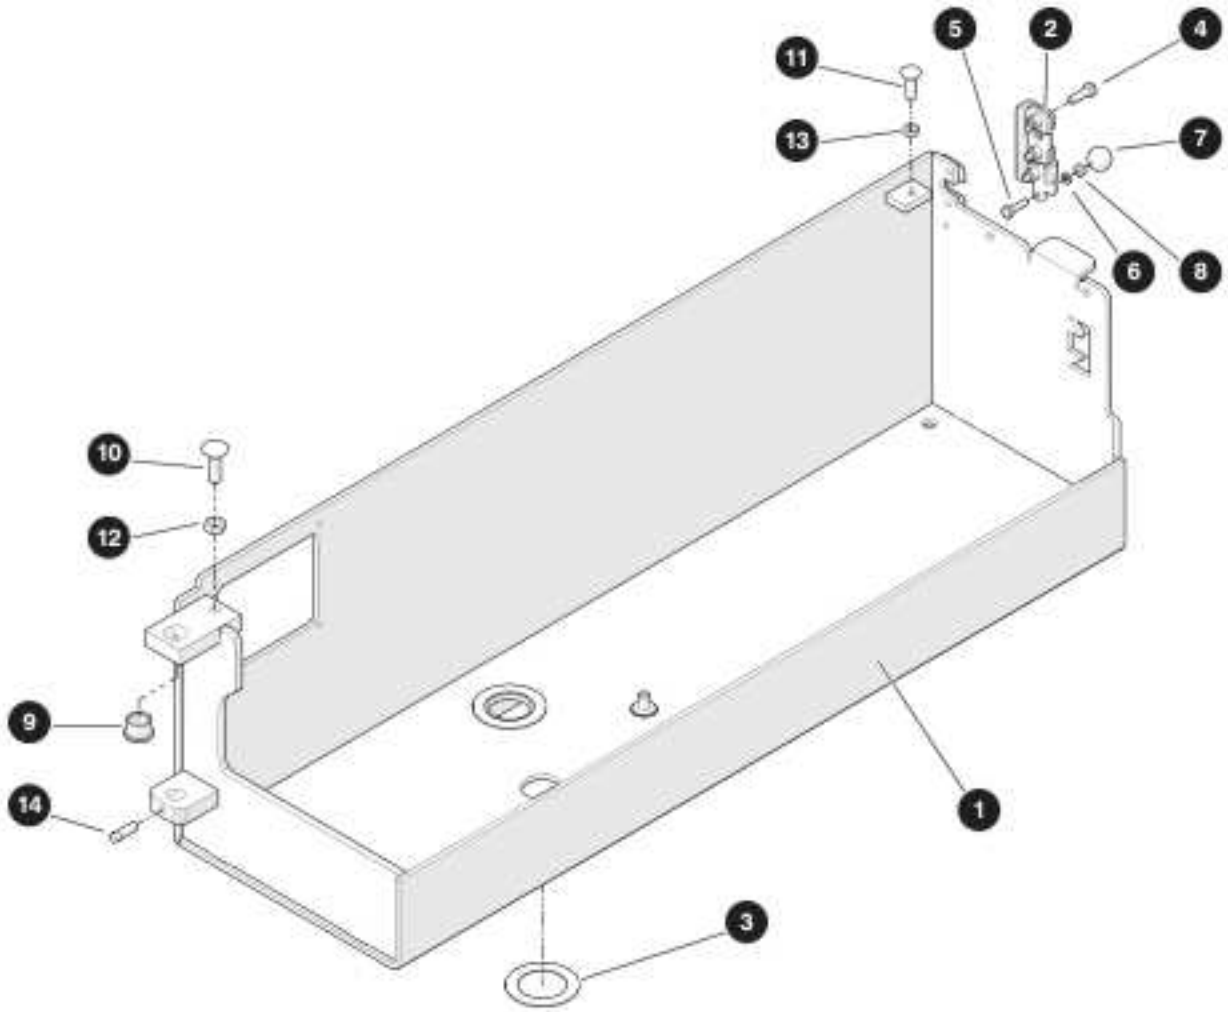

M241153AB

241153

Index No.	Skyjack Part No.	Qty.	Description
1	241146	1	HYDRAULIC TRAY
2	112307	1	LATCH , Rotary - LH
3	244734	4	GASKET, Rubber (2" ID x 3" OD x 5/16")
4	103864	3	BOLT, Hex head (5/16"-18 x 1" G5)
5	103857	1	BOLT, Hex head (1/4"-21 x 1" G5)
6	104000	1	WASHER, Lock (1/4")
7	111534	1	KNOB, Rotary latch
8	103980	1	NUT, Hex head (1/4"-20 G9)
9	100335	1	BUSHING, Bronze flange
10	125798	1	BOLT, Carriage (1/2"-13 x 1-1/2" G5)
11	127393	1	BOLT, Carriage (3/8"-16 x 1-1/4" G5)
12	107949	1	NUT, Hex head jam (1/2"-13 G6)
13	108575	1	NUT, Hex head jam (3/8"-16 G5)
14	141751	1	SCREW, Set (3/8-"16 x 3/4" G5)

MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >

2.2 Scissor Stack - SJ4732 E

Index No.	Skyjack Part No.	Qty.	Description
-	241948	1	SCISSOR STACK - ***SJ4732 E***
1	(Ref.)	1	• 1ST INSIDE LEVEL *(For components, refer to Section 2.3 1st Level)*
2	(Ref.)	1	• 2ND INSIDE LEVEL *(For components, refer to Section 2.4 2nd Level)*
3	(Ref.)	1	• 3RD INSIDE LEVEL *(For components, refer to Section 2.5 3rd Level)*
4	(Ref.)	1	• 4TH INSIDE LEVEL *(For components, refer to Section 2.6 4th Level - SJ4732 E)*
5	(Ref.)	1	• 5TH INSIDE LEVEL *(For components, refer to Section 2.8 Top Level - SJ4732 E)*
6	(Ref.)	1	• 1ST OUTSIDE LEVEL *(For components, refer to Section 2.3 1st Level)*
7	(Ref.)	3	• OUTSIDE LEVEL *(For components, refer to Section 2.4 2nd Level)* *(For components, refer to Section 2.5 3rd Level)* *(For components, refer to Section 2.6 4th Level - SJ4732 E)*
8	(Ref.)	1	• TOP OUTSIDE LEVEL *(For components, refer to Section 2.8 Top Level - SJ4732 E)*
9	(Ref.)	1	• CYLINDER, Lower
10	(Ref.)	1	• CYLINDER, Upper *(For components, refer to Section 2.10 Lift Cylinder)*
11	(Ref.)	1	• MAINTENANCE STAND *(For components, refer to Section 2.11 Maintenance Stand)*
12	(Ref.)		• HOSE KIT (not shown) *(For components, refer to Section 8.2 Hydraulic Hoses)*

MidWestTech | Skyjack SJ4726 E, SJ4732 E Electric Scissor Lift Parts Manual | Publication... Order the manual at mid-west-tech.com >