Genie Industries

Technical Publications

Genie®

A TEREX COMPANY

Genie® S-60

Genie® S-65

Service Manual



First Edition, First Printing
Part No. 34476

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication 34476

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 2
Hydraulic Specifications ..... 2 - 3
Bolt Torque Specifications ..... 2 - 4
Ford LRG 423 Engine Specifications ..... 2 - 5
Deutz F4L Engine Specifications ..... 2 - 7

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 3
Table C ..... 3 - 5
Table D ..... 3 - 6
Maintenance Inspection Report ..... 3 - 7

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Manuals ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 2
A-4 Check the Engine Oil Level ..... 4 - 3
A-5 Check the Engine Coolant Level - Gasoline/LPG Models ..... 4 - 3
A-6 Check for Fuel Leaks ..... 4 - 3
A-7 Check the Hydraulic Oil Level ..... 4 - 4
A-8 Check for Hydraulic Leaks ..... 4 - 4

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures**, continued

A-9 Check the Tire Pressure ..... 4 - 5
A-10 Test the Oscillate Axle ..... 4 - 5
A-11 Test the Platform and Ground Controls ..... 4 - 6
A-12 Test the Auxiliary Power Operation ..... 4 - 6
A-13 Test the Tilt Sensor ..... 4 - 7
A-14 Test the Limit Switches ..... 4 - 8
A-15 Replace the Engine Oil and Filter - Gasoline/LPG Models ..... 4 - 10
A-16 Replace the Engine Air Filter ..... 4 - 11
B-1 Check the Engine Belt(s) ..... 4 - 12
B-2 Check the Radiator - Gasoline/LPG Models ..... 4 - 12
B-3 Check the Oil Cooler and Cooling Fins - Deutz Diesel Models ..... 4 - 12
B-4 Check the Exhaust System ..... 4 - 13
B-5 Check the Battery ..... 4 - 14
B-6 Check the Hydraulic Tank Filter Condition Indicator ..... 4 - 14
B-7 Inspect the Electrical Wiring ..... 4 - 15
B-8 Inspect the Tires and Wheels ..... 4 - 15
B-9 Confirm the Proper Brake Configuration ..... 4 - 16
B-10 Check the Oil Level in the Torque Hubs ..... 4 - 16
B-11 Check and Adjust the Engine Idle Mixture - Gasoline/LPG Models ..... 4 - 17
B-12 Check and Adjust the Engine RPM ..... 4 - 17
B-13 Test the Key Switch ..... 4 - 19
B-14 Test the Emergency Stop Buttons ..... 4 - 20
B-15 Test the Ground Control Override ..... 4 - 20
B-16 Check the Directional Valve Linkage ..... 4 - 21
B-17 Test the Platform Self-leveling ..... 4 - 21
B-18 Test the Service Horn ..... 4 - 21
B-19 Test the Foot Switch ..... 4 - 22
B-20 Test the Engine Idle Select ..... 4 - 22
B-21 Test the Fuel Select Operation - Gasoline/LPG Models ..... 4 - 23
B-22 Test the Drive Enable System ..... 4 - 23
B-23 Test the Drive Brakes ..... 4 - 24

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued

B-24 Test the Drive Speed - Stowed Position ..... 4 - 24
B-25 Test the Alarm Package - Optional Equipment ..... 4 - 25
B-26 Perform Hydraulic Oil Analysis ..... 4 - 25
B-27 Replace the Engine Oil and Filter - Deutz Diesel Models ..... 4 - 26
C-1 Check the Boom Wear Pads ..... 4 - 27
C-2 Check the Turntable Rotation Bearing Bolts ..... 4 - 27
C-3 Check the Free-wheel Configuration ..... 4 - 28
C-4 Grease the Turntable Rotation Bearing and Rotate Gear ..... 4 - 29
C-5 Replace the Torque Hub Oil ..... 4 - 29
C-6 Replace the Hydraulic Tank Filter ..... 4 - 31
C-7 Replace the Drive Loop Hydraulic Filter ..... 4 - 31
C-8 Replace the Diesel Fuel Filter - Deutz Diesel Models ..... 4 - 32
C-9 Replace the Gasoline Fuel Filter - Gasoline/LPG Models ..... 4 - 32
C-10 Replace the PCV Valve - Gasoline/LPG Models ..... 4 - 34
C-11 Replace the Spark Plugs - Gasoline/LPG Models ..... 4 - 35
C-12 Check and Adjust the Air/LPG Mixture - Gasoline/LPG Models ..... 4 - 36
C-13 Check and Adjust the Ignition Timing - Gasoline/LPG Models ..... 4 - 37
C-14 Check the Engine Valve Clearances - Deutz Diesel Models ..... 4 - 37
C-15 Check the Turntable Rotation Gear Backlash ..... 4 - 37
D-1 Test or Replace the Hydraulic Oil ..... 4 - 38
D-2 Change or Recondition the Engine Coolant - Gasoline/LPG Models ..... 4 - 39
D-3 Change the Fuel Lines ..... 4 - 41
D-4 Check the Engine Valve Clearance - Gasoline/LPG Models ..... 4 - 42
D-5 Check the Engine Cylinder Compression - Gasoline/LPG Models ..... 4 - 42
D-6 Clean the PCV Hoses and Fittings - Gasoline/LPG Models ..... 4 - 43
D-7 Check the Fuel Injection Pumps and Injectors - Deutz Diesel Models ..... 4 - 44
D-8 Check the Toothed Belt - Deutz Diesel Models ..... 4 - 44
D-9 Replace the Timing Belt - Gasoline/LPG Models ..... 4 - 44

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

Ford Engine LRG-423

Displacement	140 cu in 2.3 liters
Number of cylinders	4
Bore & stroke	3.781 x 3.126 inches 96.04 x 79.4 mm
Horsepower	63 @ 4000 rpm
Firing order	1 - 3 - 4 - 2
Low idle - carburetor	900 rpm
Low idle - electronic governor	1600 rpm
High idle	2500 rpm
Governor	electronic
Compression ratio	9.4:1
Compression pressure (approx.) Pressure (psi) of lowest cylinder must be at least 75% of highest cylinder	
Valve clearances - collapsed tappet	0.035 to 0.055 inches 0.889 to 1.397 mm
Lubrication system	
Oil pressure (operating temp. @ 2000 rpm)	40 to 60 psi 2.75 to 4.1 bar
Oil capacity (including filter)	5 quarts 4.7 liters
Oil viscosity requirements	
Temperature below 60°F / 15.5°C	5W-30
-10°F to 90°F / -23°C to 32°C	10W-30
Temperature above -10°F / -23°C	10W-40 to 10W-50
Temperature above 20°F / -6.6°C	20W-40 or 20W-50
Use oils meeting API classification SG (labeled SG/CC or SG/CD) as they offer improved wear protection. Units ship with 10W-40 SG/CC.	

Starter motor	
Normal engine cranking speed	200 to 250 rpm
Current draw, normal load	170A
Current draw, maximum load	200A
Current draw, minimum	140A
Maximum circuit voltage drop while starting (normal temperature)	0.5V DC
Brush length, new	0.66 in 16.8 mm
Brush length wear limit	0.25 in 6.35 mm
Brush spring tension	64 ounces 18 Newtons
Bolt torque through brush	45 to 84 inch-pounds 5.08 to 9.5 Nm
Brush mounting bolt torque	15 to 20 foot-pounds 20 to 27 Nm
Maximum commutator run-out	0.005 inches 0.127 mm
Battery	
Type	12V, Group 31
Quantity	1
Cold cranking ampere	1000A
Reserve capacity @ 25A rate	200 minutes
Fuel pump	
Electronic solenoid	7 psi 0.48 bar

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

TROUBLESHOOTING FLOW CHARTS


About This Section

When a malfunction is discovered, the flow charts in this section will help a service professional pinpoint the cause of the problem. To use this section, basic hand tools and certain pieces of test equipment are required—voltmeter, ohmmeter, pressure gauges.

The location of terminals mentioned in this section can be found on the appropriate electrical or hydraulic schematics provided in Section 6, *Schematics*.


Since various degrees of a particular function loss may occur, selecting the appropriate flow chart may be troublesome. When a function will not operate with the same speed or power as a machine in good working condition, refer to the flow chart which most closely describes the problem.

General Repair Process

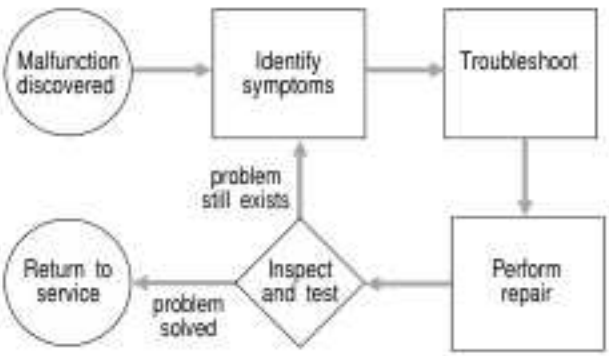


MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

4WD Hydraulic Schematic - Non-Oscillating Axle

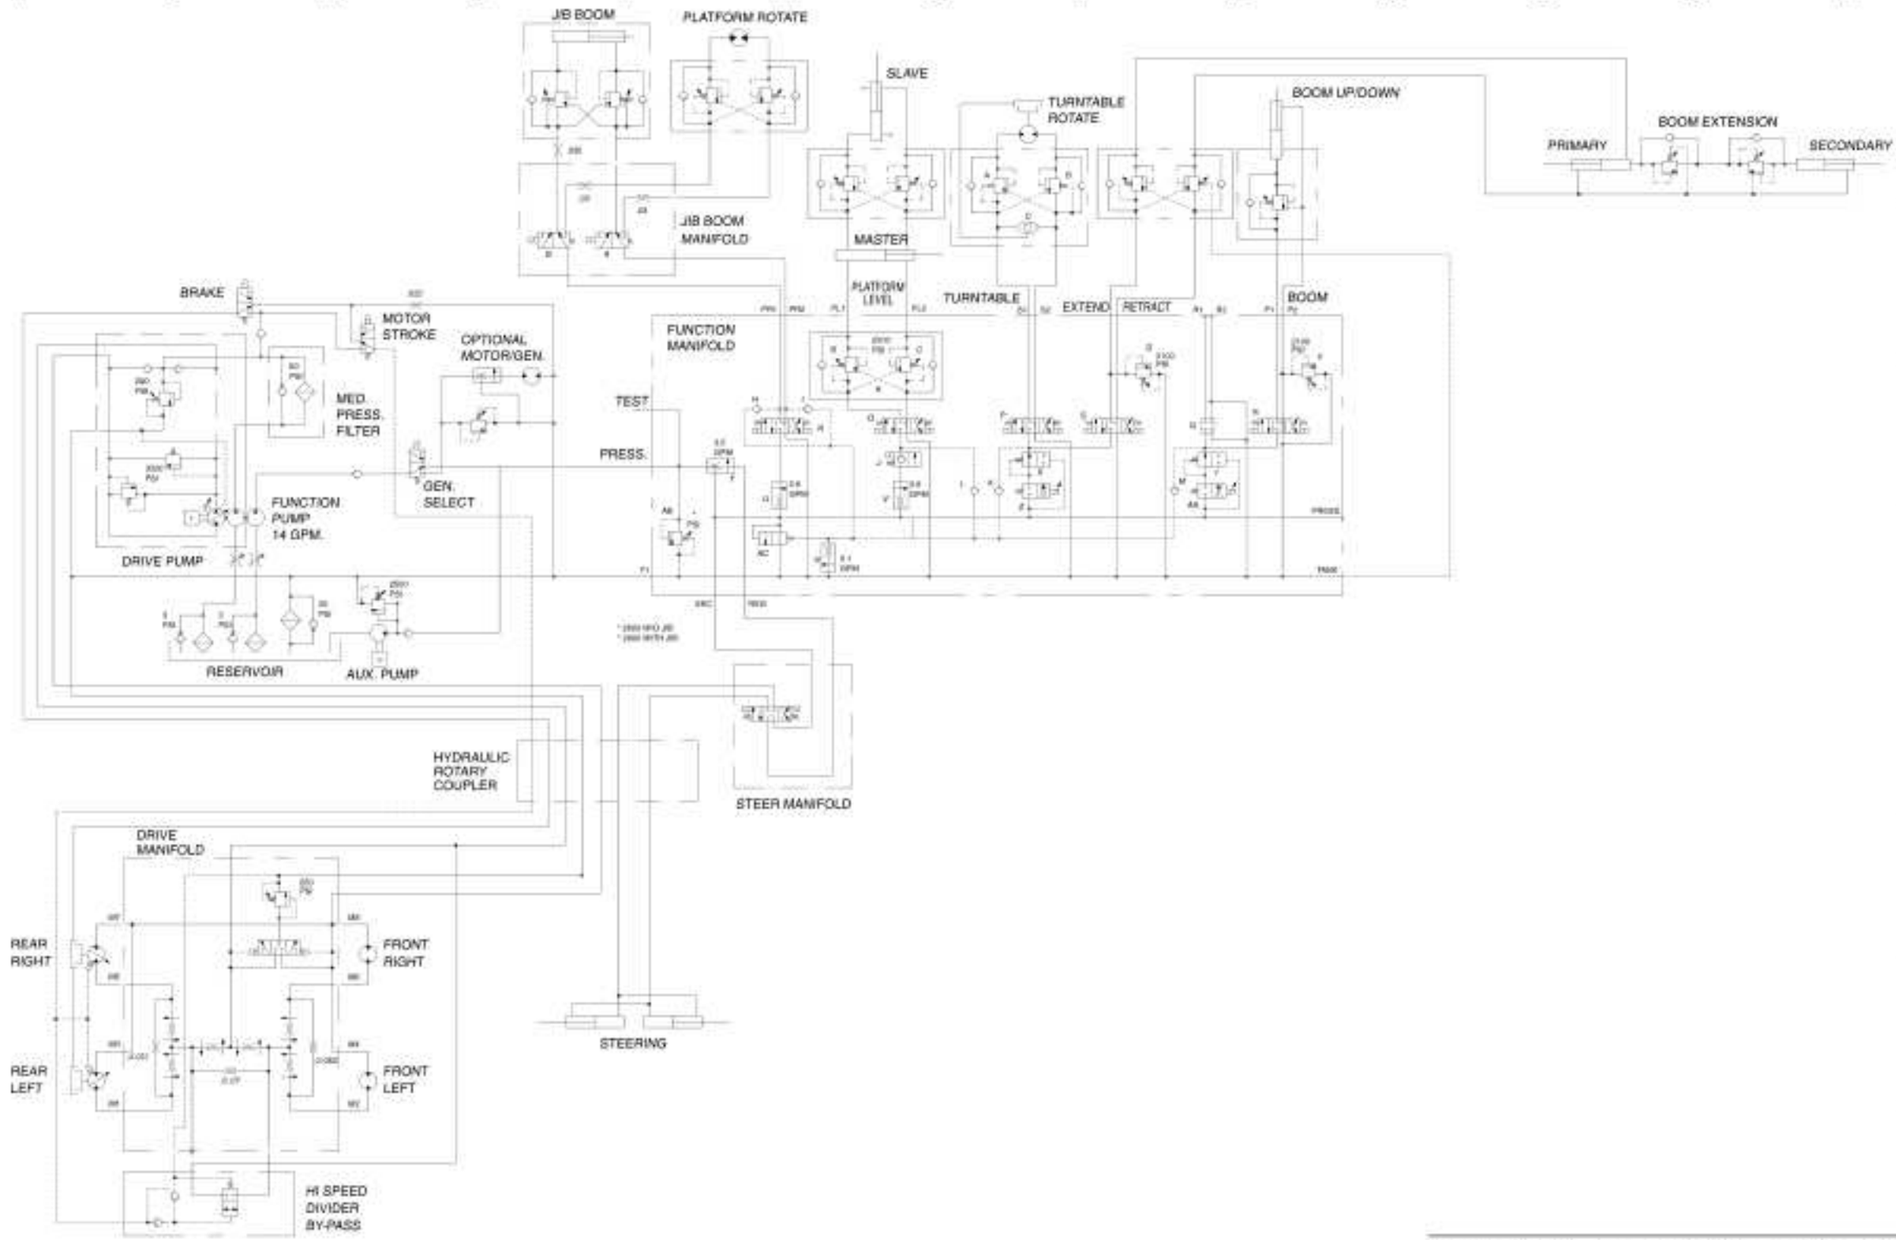

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication 34476 Order the manual at mid-west-tech.com >

Electrical Schematic - Diesel Models

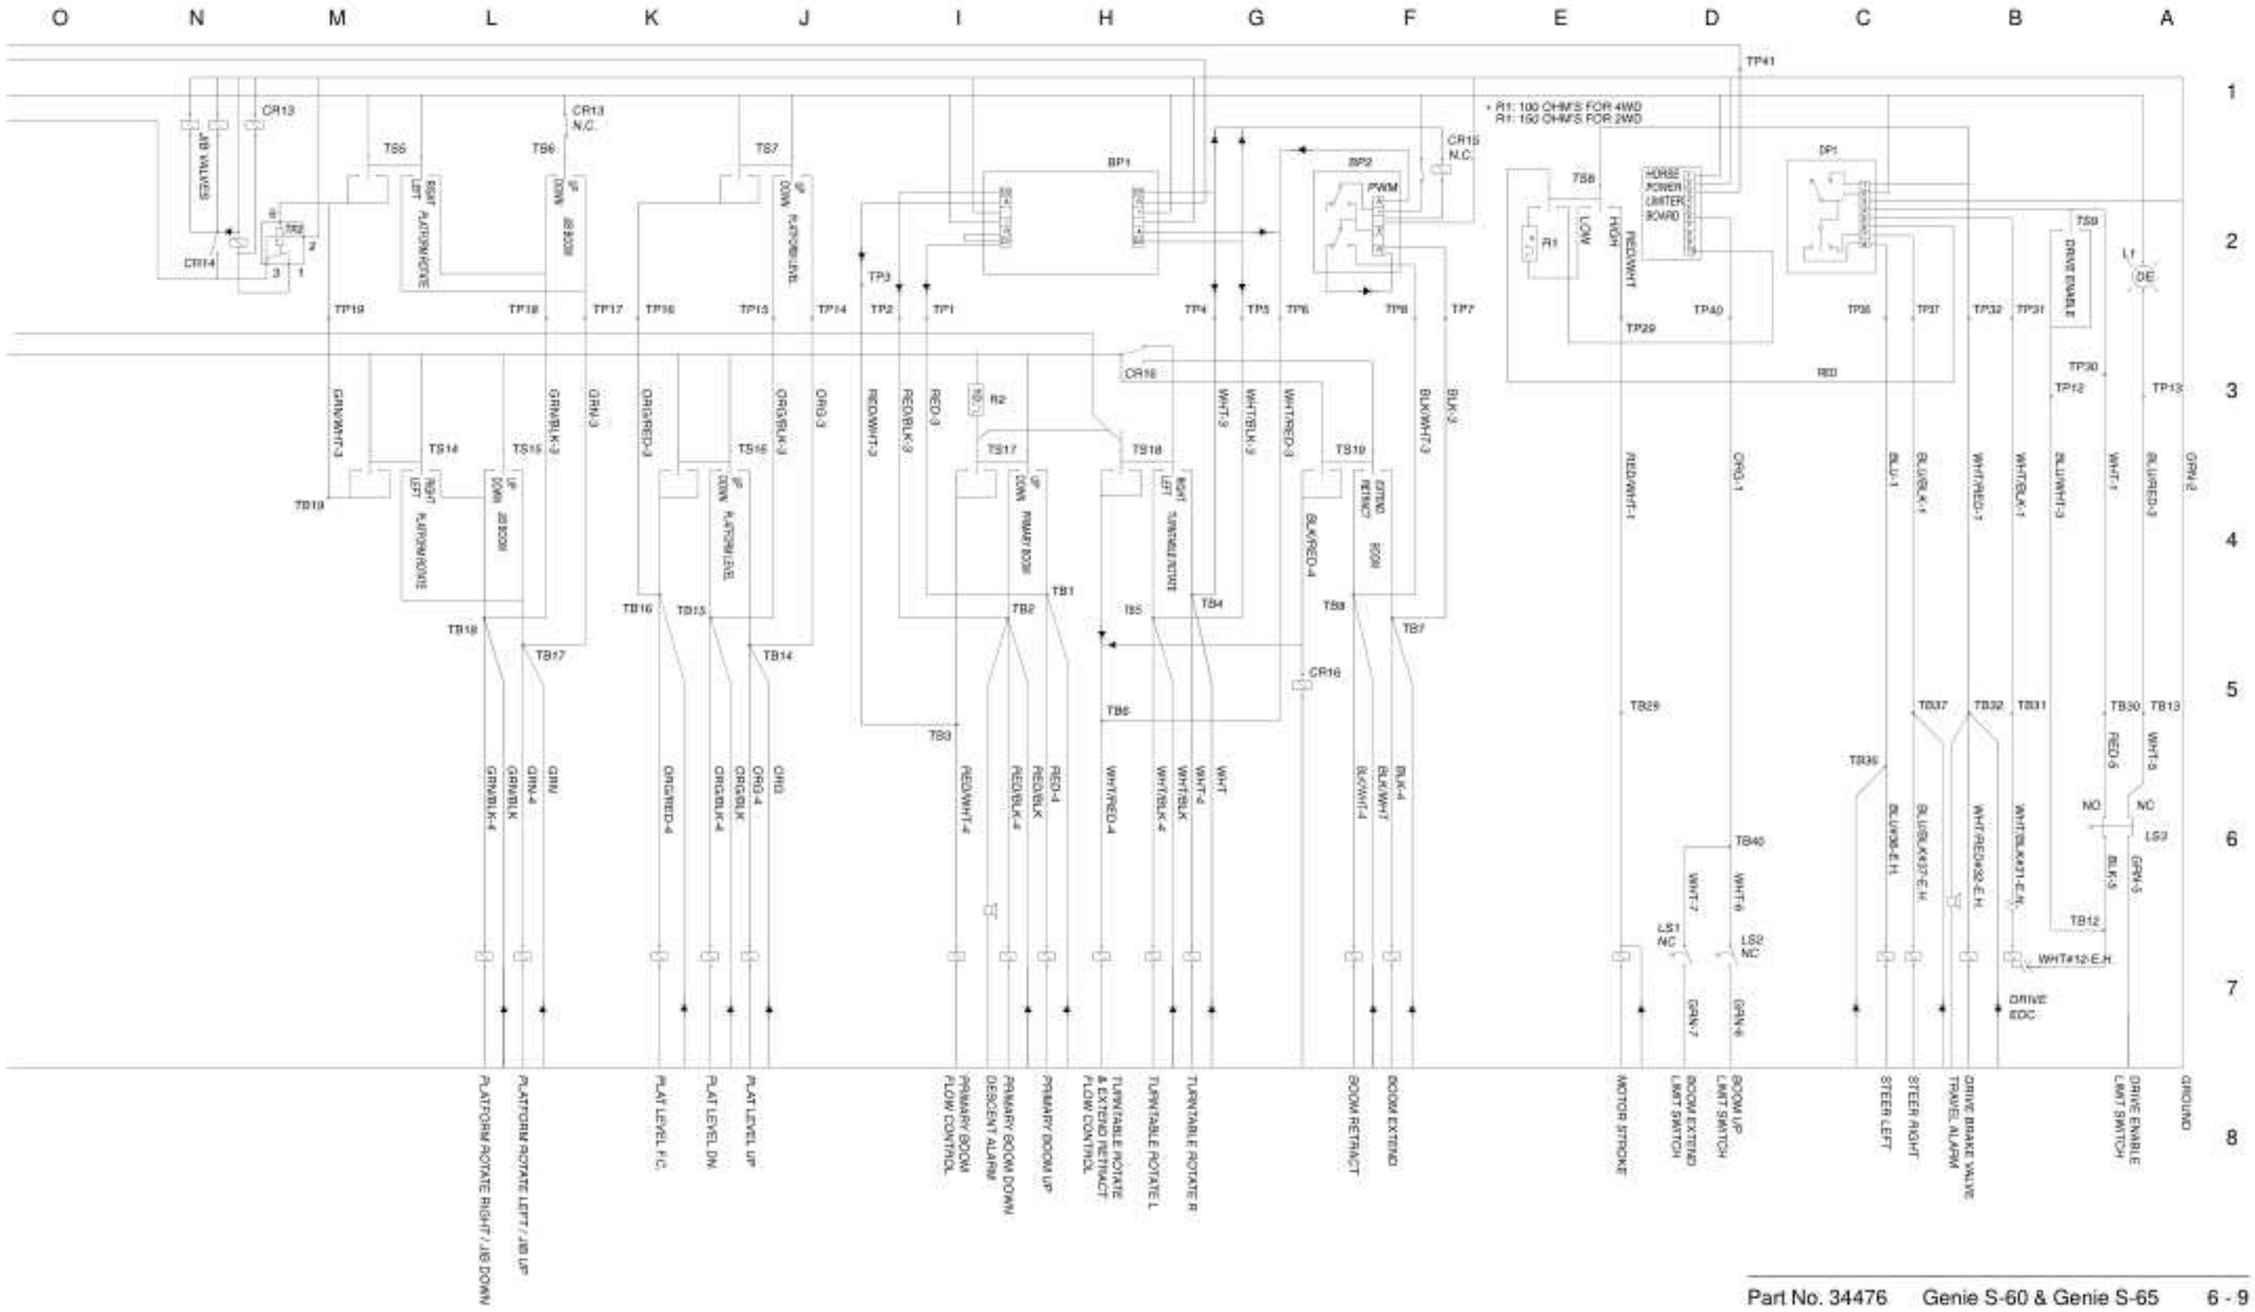

MidWestTech | Terex Genie S-60, S-65 Telescopic Boom Lift Service Manual | Publication 34476

Order the manual at mid-west-tech.com >