SERVICE MANUAL

T7.290 AutoCommand™
T7.315 AutoCommand™
TIER 4B (FINAL)
Tractor

PIN ZFEA01001 and above

Part number 48193177
English
November 2017

NEW HOLLAND AGRICULTURE

© 2017 CNH Industrial Osterreich GmbH. All Rights Reserved.

Order the manual at mid-west-tech.com >

Contents

INTRODUCTION

Engine 10

[10.001] Engine and crankcase 10.1

[10.216] Fuel tanks 10.2

[10.202] Air cleaners and lines 10.3

[10.254] Intake and exhaust manifolds and muffler 10.4

[10.500] Selective Catalytic Reduction (SCR) exhaust treatment 10.5

[10.400] Engine cooling system 10.6

[10.414] Fan and drive 10.7

[10.310] Aftercooler 10.8

Clutch 18

[18.112] Slip clutch or flywheel damper 18.1

Transmission 21

[21.504] Continuously Variable Transmission (CVT) 21.1

[21.505] Continuously Variable Transmission (CVT) external controls 21.2

[21.506] Continuously Variable Transmission (CVT) hydraulic components 21.3

[21.507] Continuously Variable Transmission (CVT) internal components 21.4

Four-Wheel Drive (4WD) system 23

[23.202] Electro-hydraulic control 23.1

[23.314] Drive shaft 23.2

Front axle system 25

[25.100] Powered front axle 25.1

[25.102] Front bevel gear set and differential 25.2

[25.108] Final drive hub, steering knuckles, and shafts 25.3

[25.122] Axle suspension control 25.4

Rear axle system 27

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

[27.100] Powered rear axle 27.1
[27.106] Rear bevel gear set and differential 27.2
[27.120] Planetary and final drives 27.3
Power Take-Off (PTO) 31
[31.104] Rear electro-hydraulic control 31.1
[31.119] Four-speed rear Power Take-Off (PTO) 31.2
[31.142] Front Power Take-Off (PTO) control 31.3
[31.146] Front Power Take-Off (PTO) 31.4
Brakes and controls 33
[33.202] Hydraulic service brakes 33.1
[33.110] Parking brake or parking lock 33.2
[33.240] Emergency brake 33.3
[33.220] Trailer brake hydraulic control 33.4
[33.224] Trailer brake pneumatic control 33.5
[33.204] Front axle brake 33.6
[33.200] Brake cooling 33.7
[33.350] Anti-lock Brake System (ABS) 33.8
Hydraulic systems 35
[35.000] Hydraulic systems 35.1
[35.300] Reservoir, cooler, and filters 35.2
[35.106] Variable displacement pump 35.3
[35.230] Priority valves 35.4
[35.204] Remote control valves 35.5
[35.220] Auxiliary hydraulic pump 35.6
[35.114] Three-point hitch control valve 35.7
[35.116] Three-point hitch cylinder 35.8
[35.124] Three-point hitch hydraulic adjustment 35.9
[35.160] Front hitch controls and lines 35.10

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

[35.162] Front hitch cylinders and lines 35.11

Hitches, drawbars, and implement couplings 37

[37.100] Drawbars and towing hitches 37.1

[37.106] Automatic pickup hitch 37.2

[37.162] Front hitch 37.3

Frames and ballasting 39

[39.100] Frame 39.1

[39.140] Ballasts and supports 39.2

Steering 41

[41.101] Steering control 41.1

[41.106] Tie rods 41.2

[41.200] Hydraulic control components 41.3

[41.216] Cylinders 41.4

[41.432] Autoguidance steering 41.5

Wheels 44

[44.511] Front wheels 44.1

[44.520] Rear wheels 44.2

Cab climate control 50

[50.100] Heating 50.1

[50.104] Ventilation 50.2

[50.200] Air conditioning 50.3

Electrical systems 55

[55.045] Front axle control system 55.1


[55.000] Electrical system 55.2

[55.100] Harnesses and connectors 55.3

[55.015] Engine control system 55.4


[55.301] Alternator 55.5

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

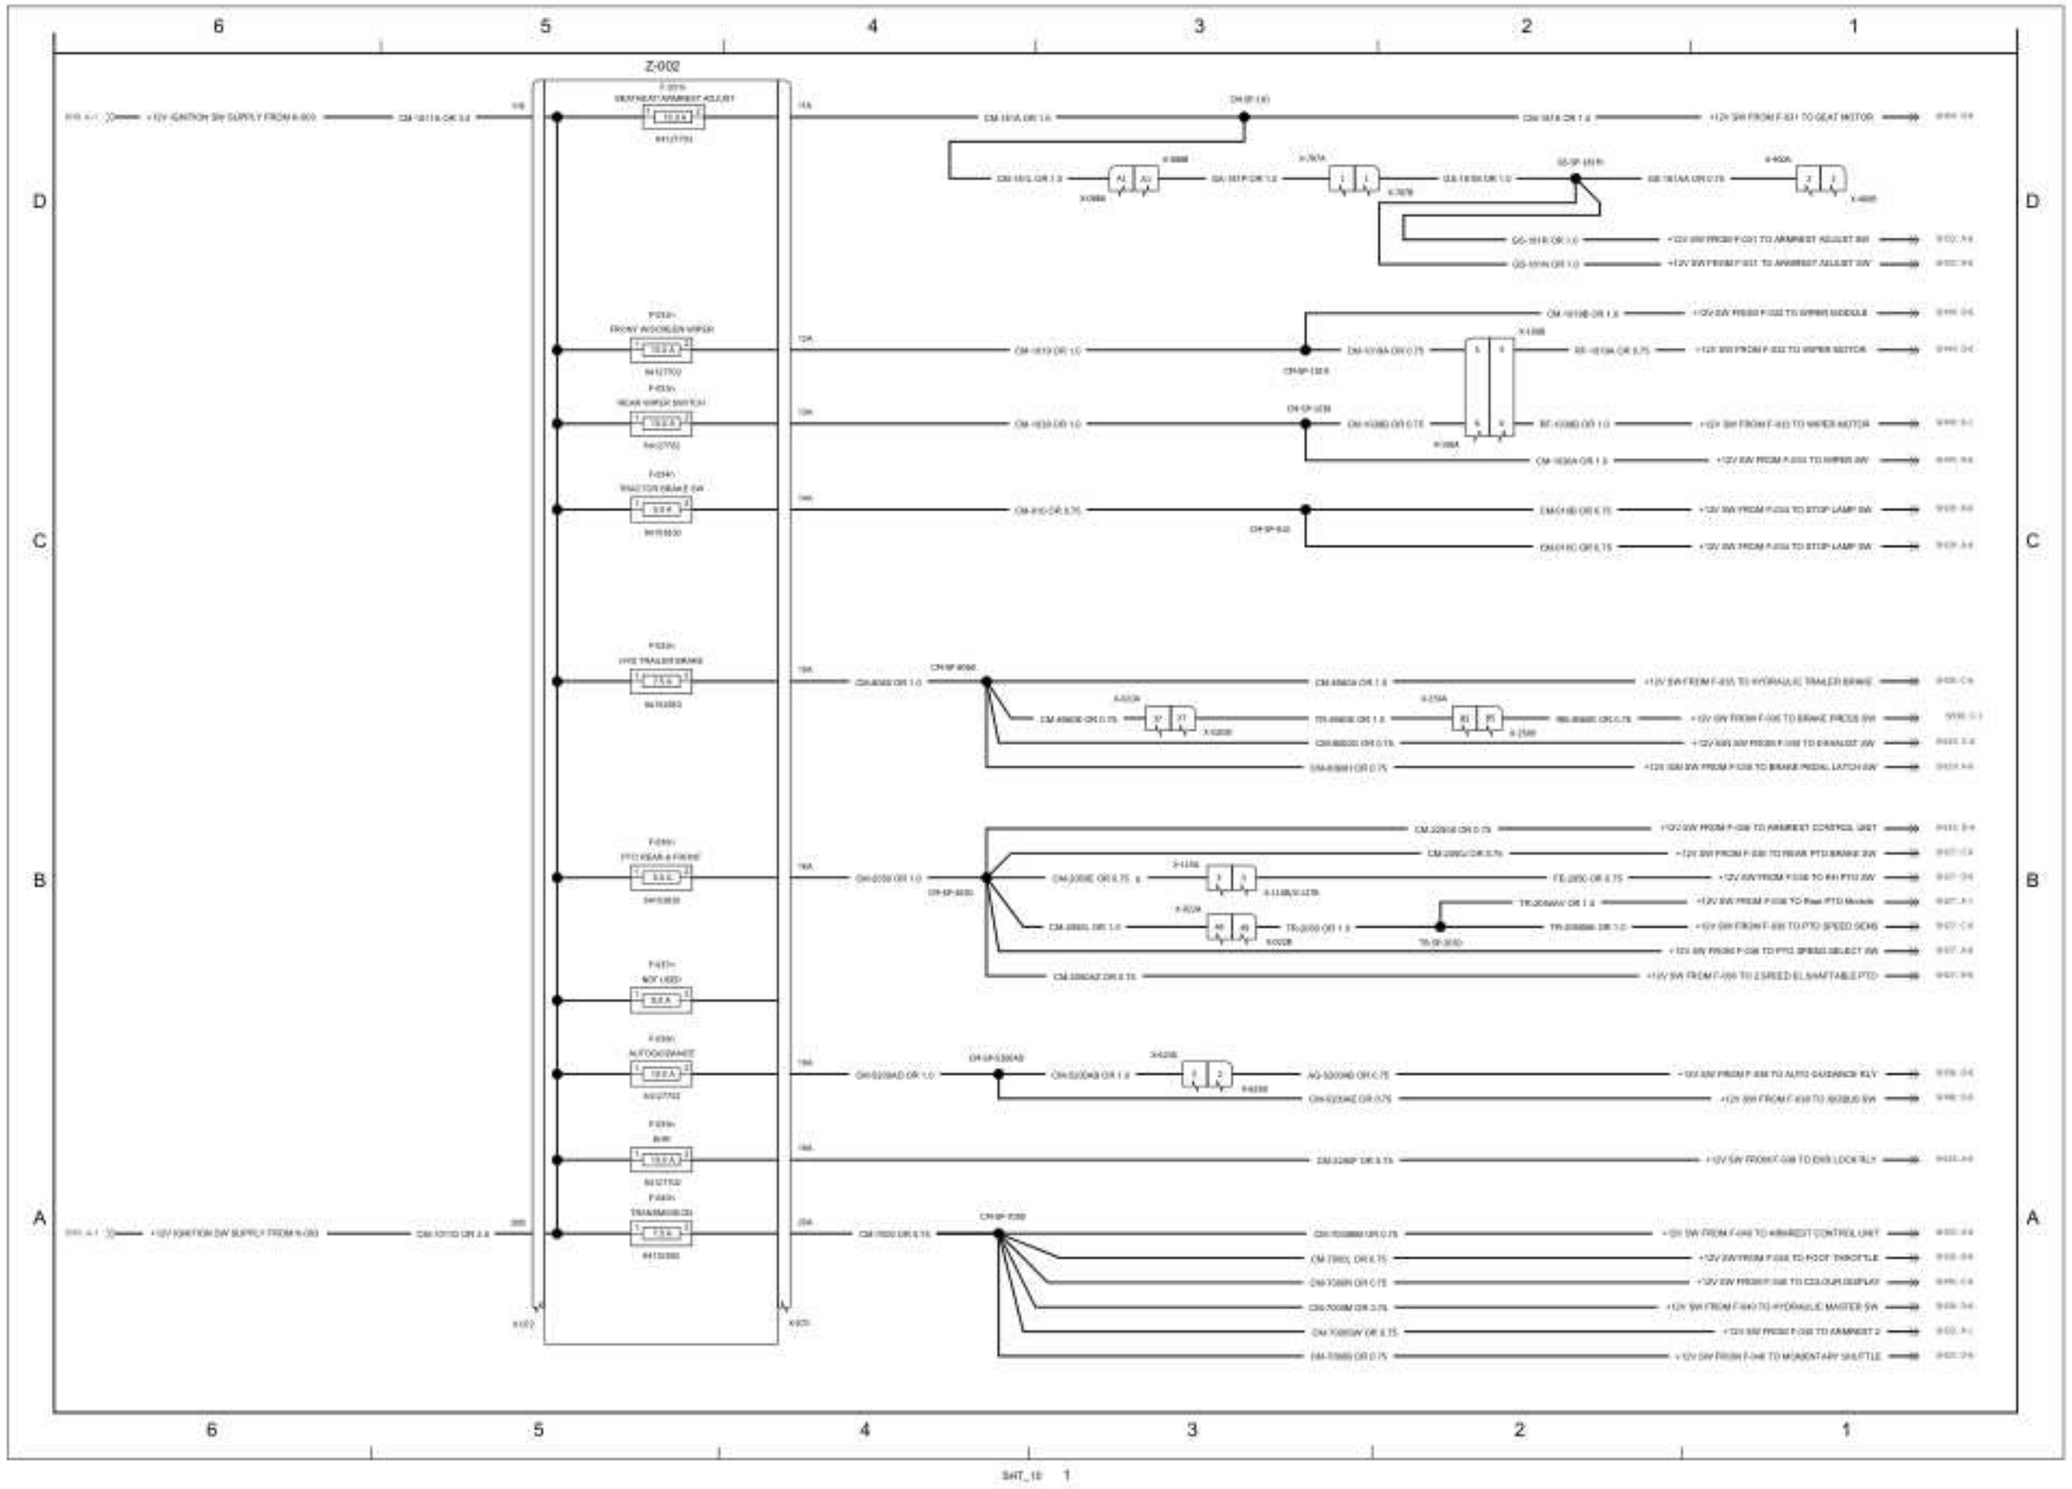


MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Manual | Publication 48193177
Order the manual at mid-west-tech.com >

X-938 - ISO JOYSTICK [A-019] (87702796) (Plug)

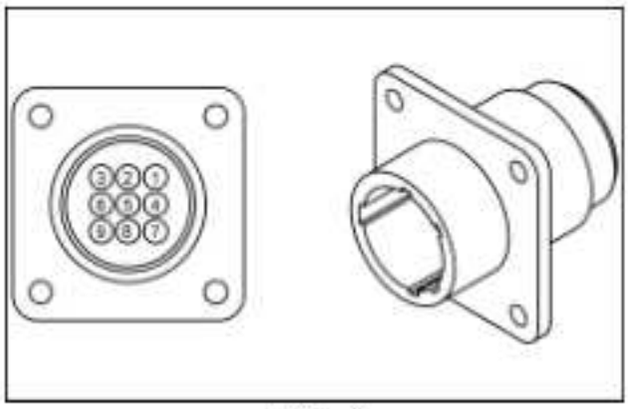

87702796 3

87702796

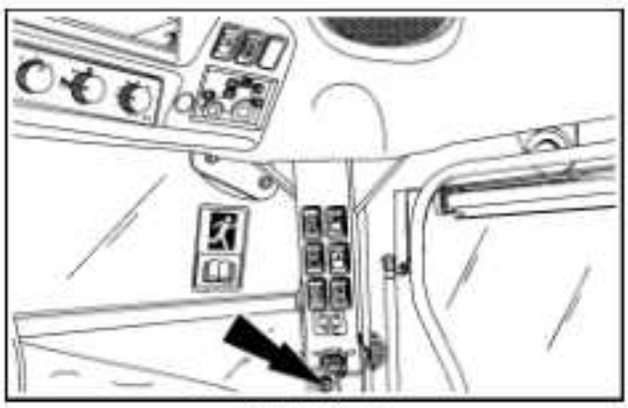

5VL16TP2054AA 4

Right-hand side C-pillar

Pin	From	Wire	Description	Color-Size	Frame
1	**X-938B (Plug) pin 1** ISO Joystick (Cab Harness Connec	SI-001F	SI-001F	YE - 1.0	**SHEET 59**
2	**X-938B (Plug) pin 2** ISO Joystick (Cab Harness Connec	SI-5900EC	SI-5900EC	GN - 0.5	
3	**X-938B (Plug) pin 3** ISO Joystick (Cab Harness Connec	SI-5900ED	SI-5900ED	GN - 0.5	
4	**X-938B (Plug) pin 4** ISO Joystick (Cab Harness Connec	SI-5910EC	SI-5910EC	YE - 0.5	
5	**X-938B (Plug) pin 5** ISO Joystick (Cab Harness Connec	SI-5910ED	SI-5910ED	YE - 0.5	
6	**X-938B (Plug) pin 6** ISO Joystick (Cab Harness Connec	SI-5920DC	SI-5920DC	RD - 0.5	
7	**X-938B (Plug) pin 7** ISO Joystick (Cab Harness Connec	SI-6479	SI-6479	OR - 1.0	
8	**X-938B (Plug) pin 8** ISO Joystick (Cab Harness Connec	SI-5915DC	SI-5915DC	BK - 0.5	
9	**X-938B (Plug) pin 9** ISO Joystick (Cab Harness Connec	SI-57CD	SI-57CD	BK - 1.0	

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

12673 - Valve plausibility monitoring - dynamic fault

Control Module: EBM

NOTE: *When the cause of the fault code has been rectified, clear the fault code and test the system for normal operation.*

Cause:
The Electronic Brake Module (EBM) **A-003** has detected a valve plausibility fault.

Possible failure modes:

1. Faulty wheel speed sensor(s).
2. Faulty **A-003** configuration.
3. Faulty **A-003** software.
4. Faulty **A-003**.

Solution:

1. Check for the fault code.
   Clear the fault code. Operate the machine and check the system for normal operation.

   A. If the fault code is still present, continue to Step **2**.
2. Check for other related fault codes.
   Check for other fault codes relating to the **A-003**.

   A. If other fault codes are displayed, see these tests.


   B. If no other fault codes are displayed, continue to Step **3**.
3. Clear the controller settings.
   Carry out the 'clear controller settings' in H8, see **Electronic module Instrument control unit - H8 - Clear stored calibration information (EEPROM) (55.640)**.
   Clear the fault code, operate the machine and check the system for normal operation.

   A. If the fault code is still present, download the correct version of software to the **A-003**.
      If the fault occurs again, replace the **A-003**.

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

Parking brake clutch - Static description

Spring Applied Hydraulic Release (SAHR) system

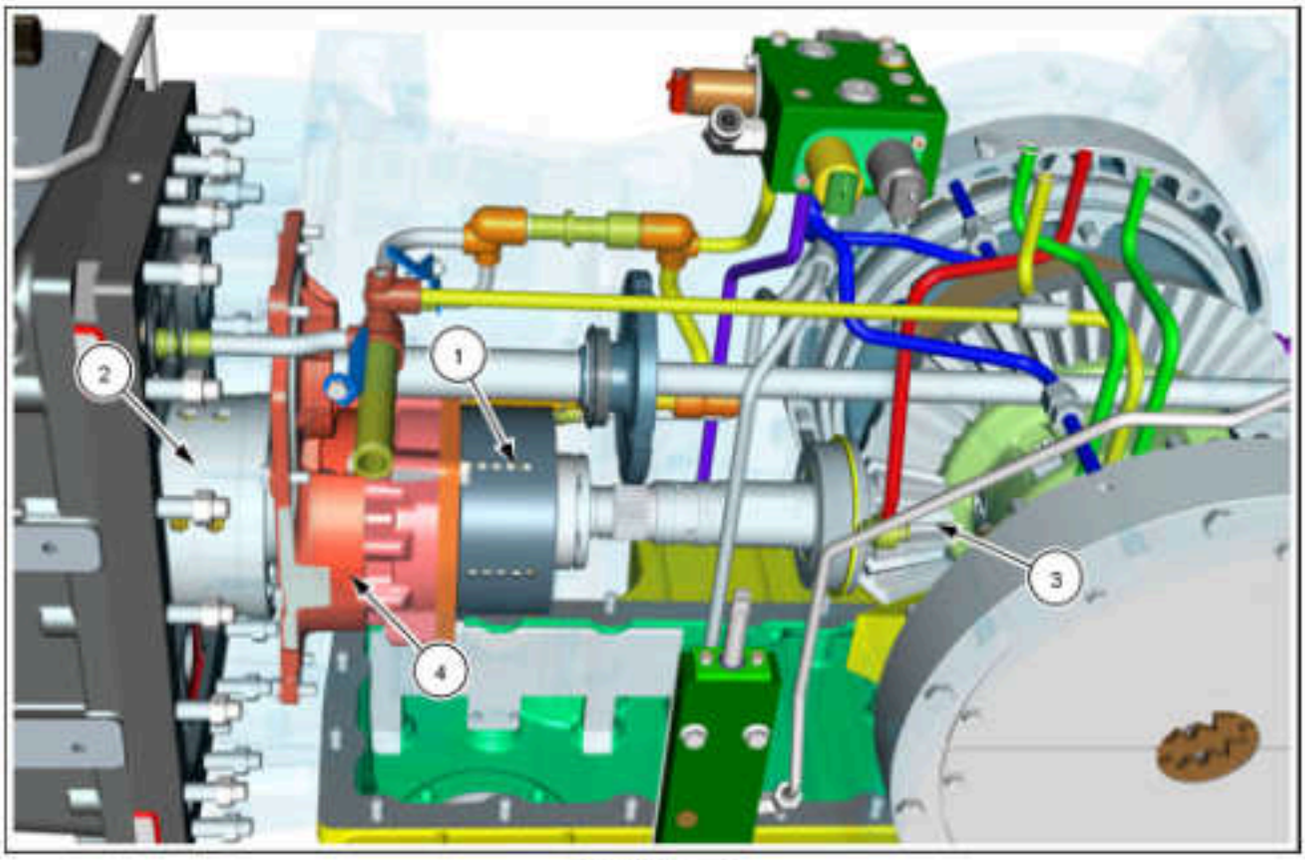


SVILISTR0075MFA 1

The Spring Applied Hydraulic Release (SAHR) system **(1)** is installed behind the transmission clutch A **(2)** in line with the differential bevel pinion **(3)**.

The bevel pinion is a single shaft. The toothing on the shaft stays in contact with the friction discs. The steel plates are in standstill and fixed to the Spring Applied Hydraulic Release (SAHR) system. The housing is fixed with six bolts on the support cover **(4)**.

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

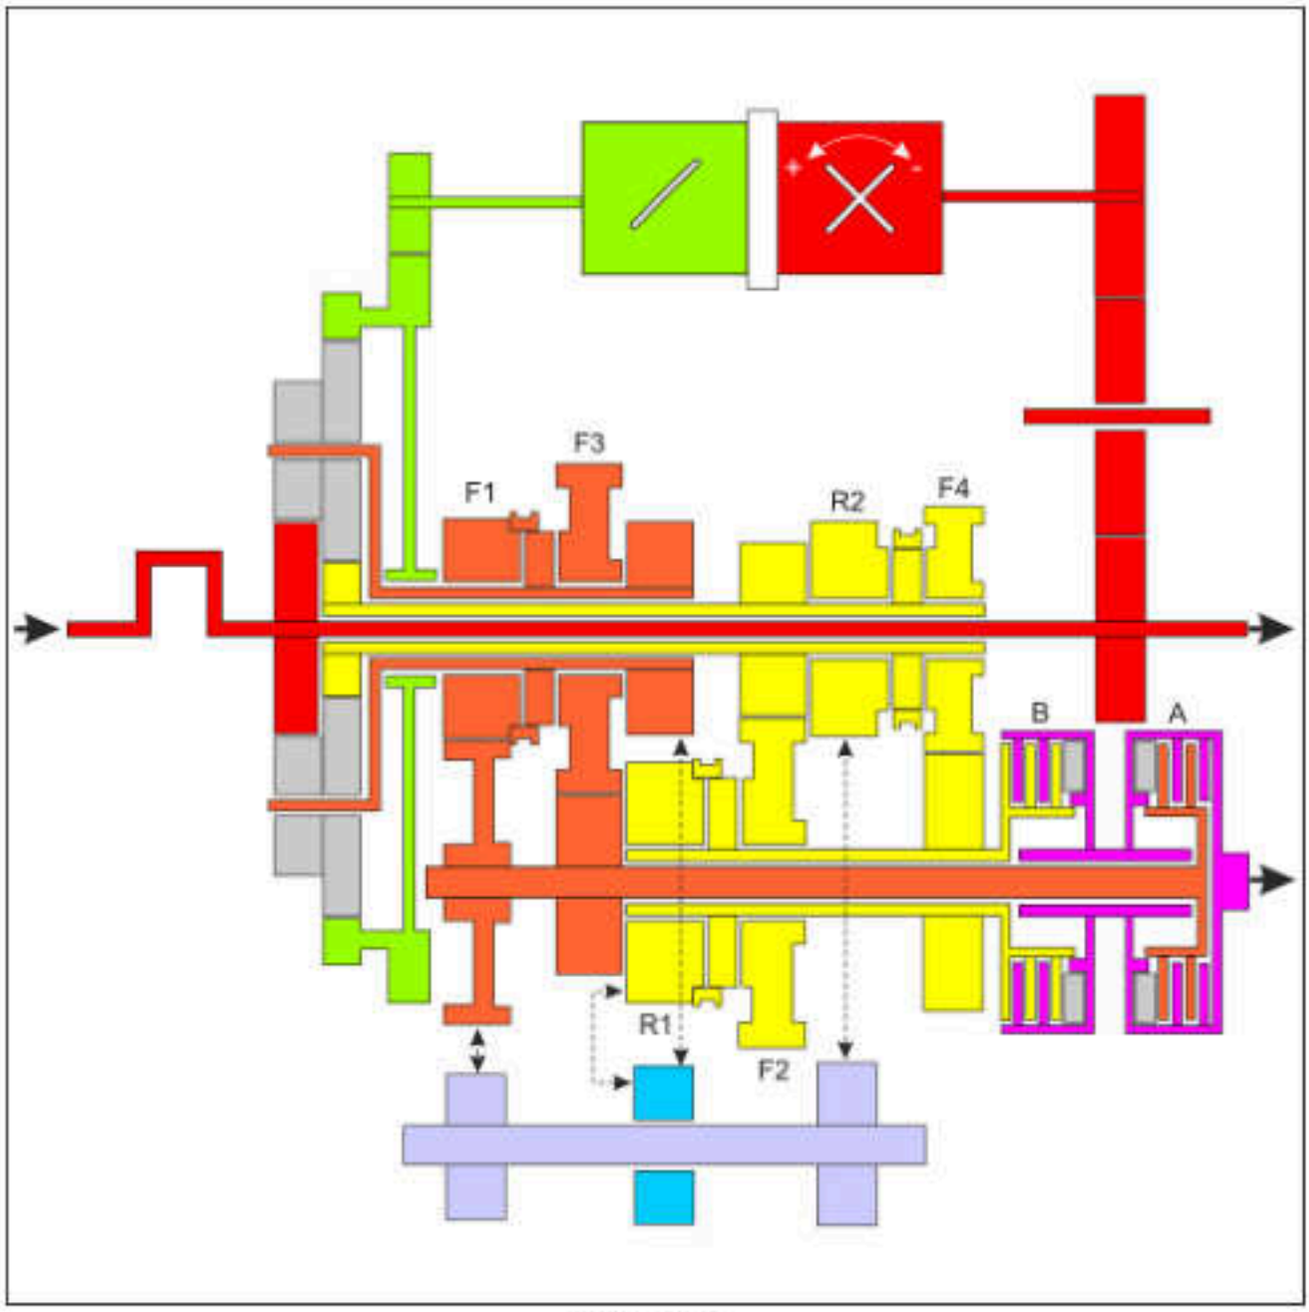


SVIL15TR68874GA 1

Neutral position and park position

In the neutral position and park position, the transmission is not non-positive. Two mechanical gears, F1 and R1, are engaged. The clutch A and the clutch B are open. If the tractor rolls away in neutral position, the resultant differences in speed are compensated by the hydrostat. This ensures that the relevant clutch A or clutch B can be engaged again for synchronous speed when the neutral position is no longer active.

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Ma... Order the manual at mid-west-tech.com >

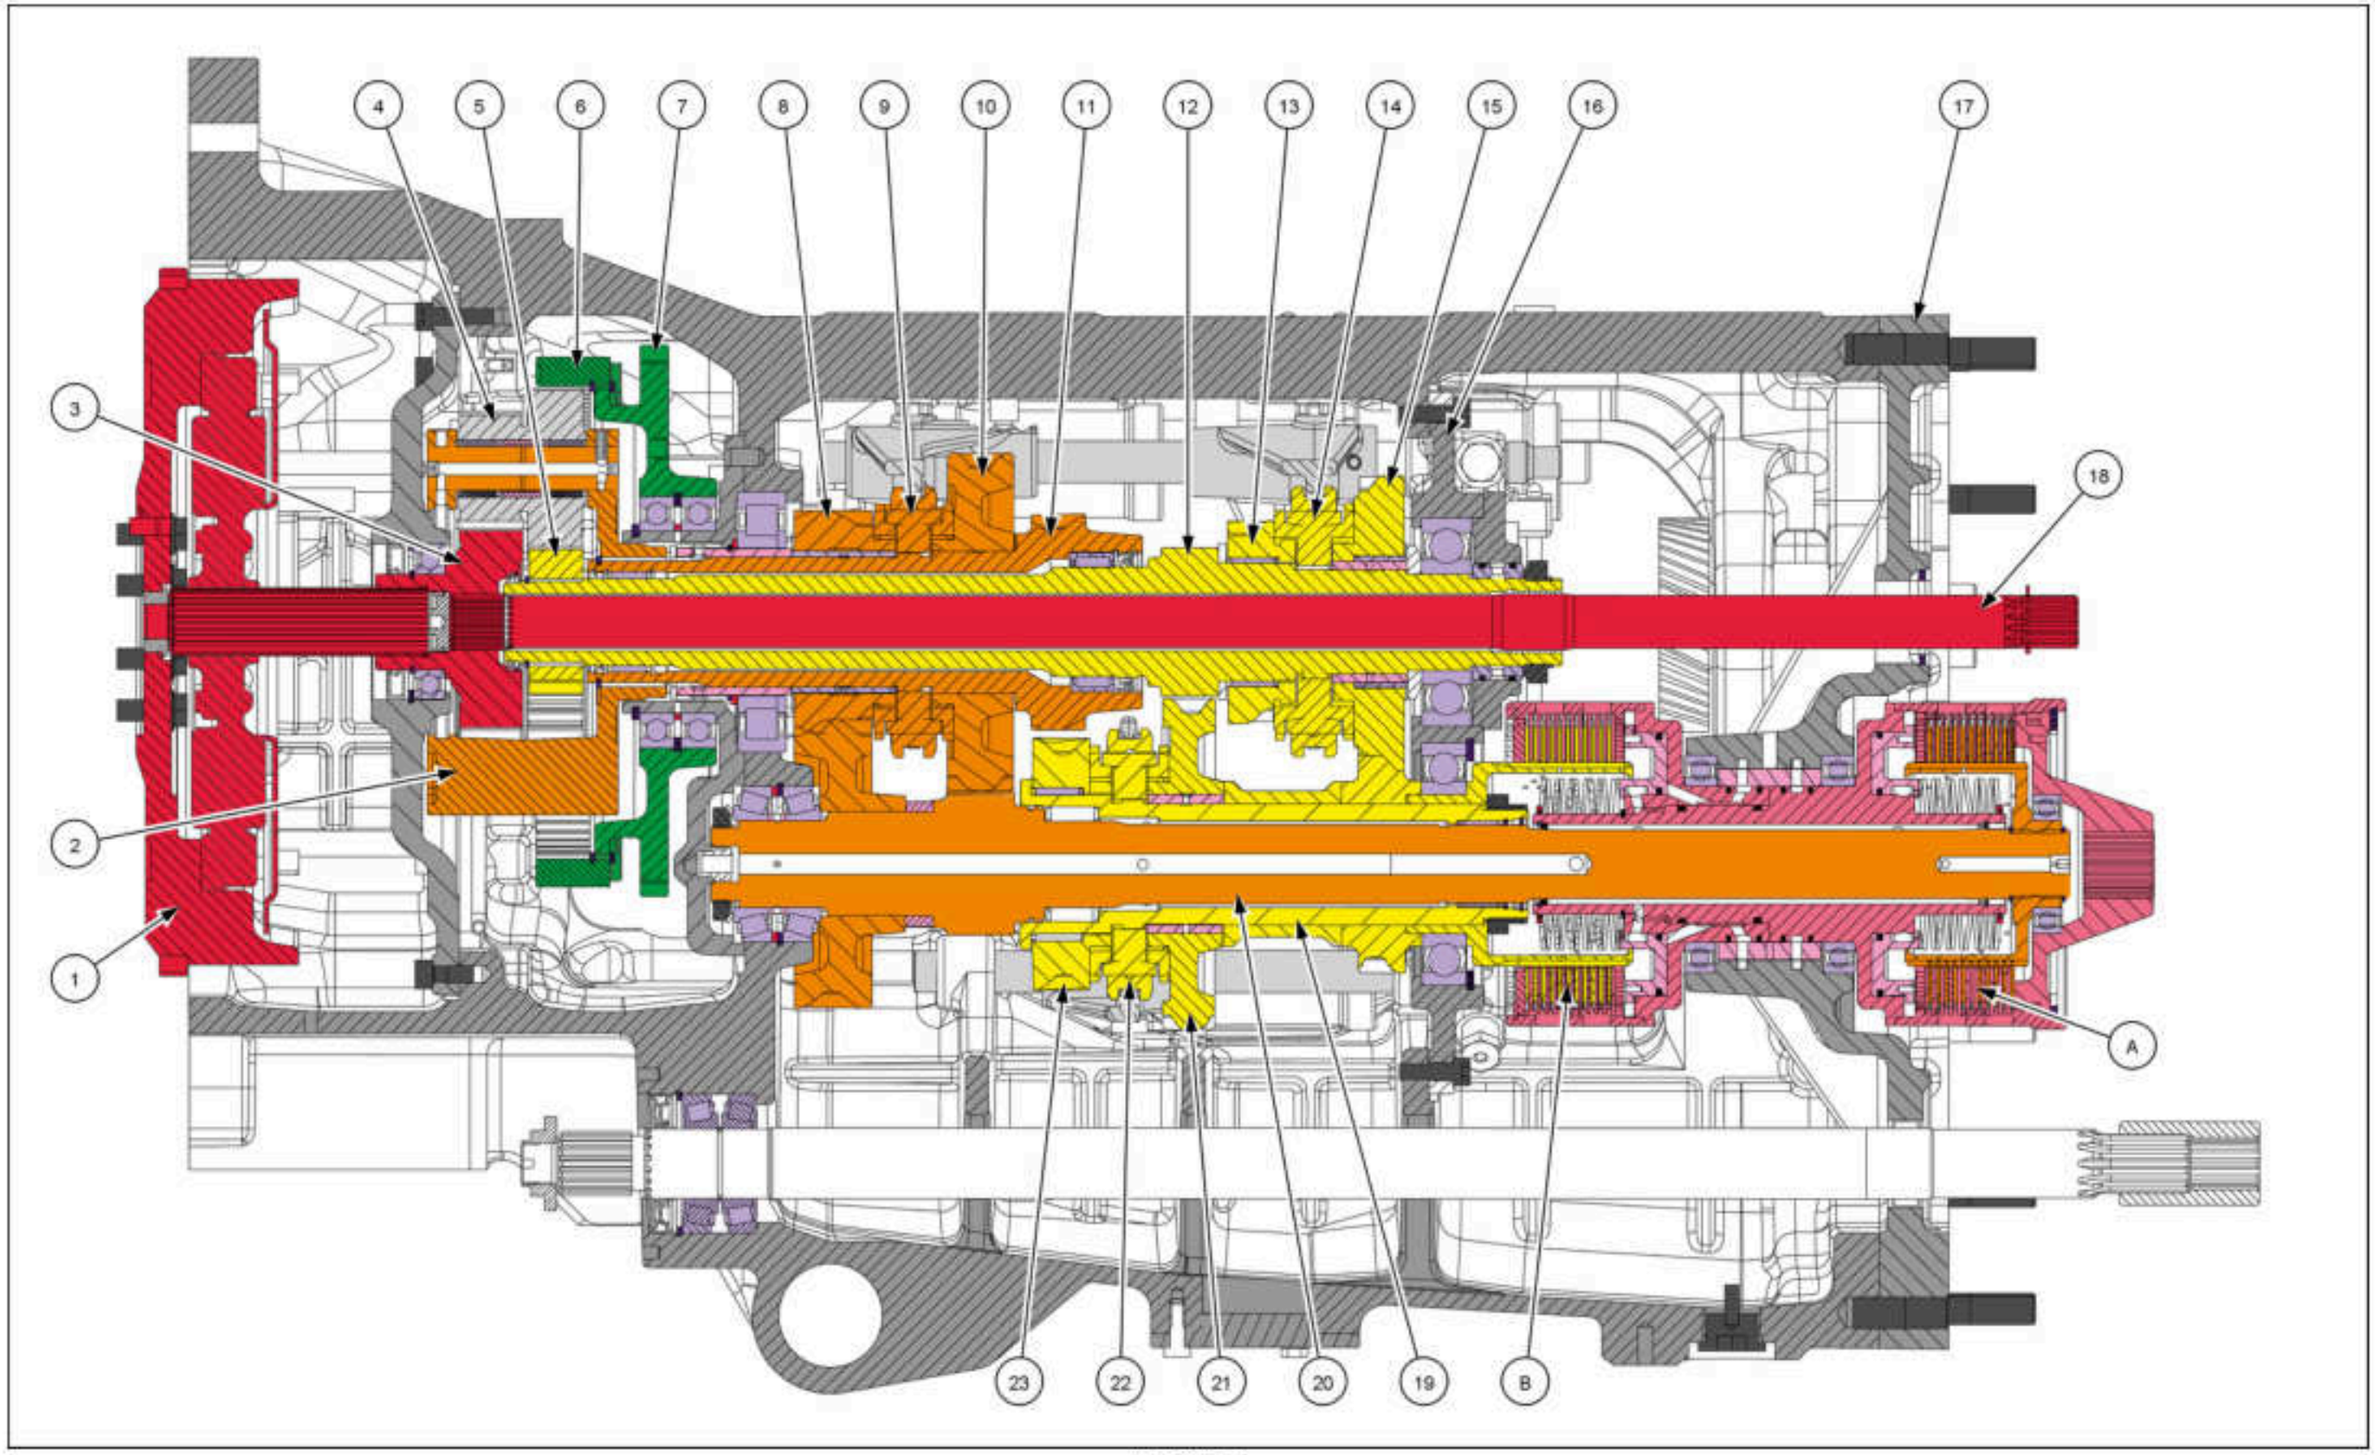

MidWestTech | New Holland T7.290, T7.315 AutoCommand Tier 4B Tractor Service Manual | Publication 48193177
Order the manual at mid-west-tech.com >