
543

Parts Manual

S/N 501111999 & Below

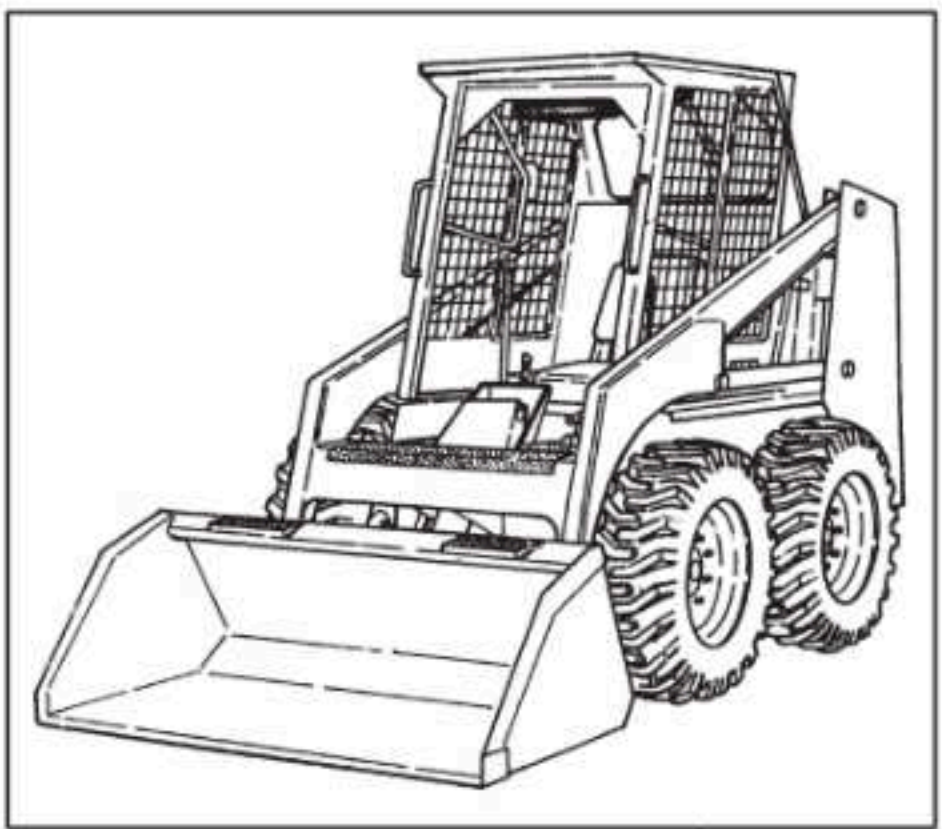

MELROE
INGERSOLL-RAND

6566216 (11-81)*

Printed in U.S.A.

bobcat

© Melroe Company 1981

MidWestTech | Bobcat 543 Skid Steer Loader Parts Manual | Publication 6566216

Order the manual at mid-west-tech.com >

Title: Seat & Seat Bar
Model Number: 543
Serial Number: 501111999 & Below

Ref #	Part #	Description	S/N	Q-ty
1	6669135	SEAT STATIC VINYL, - NLA - Order 7505149 - Was 6563140, A		1
1	7505149	SEAT OPERATOR		1
1	46954414	KNOB ADJUSTMENT		1
1	6598809	SEAT OPERATOR VINYL, NLA - Bobcat logo - Order 7505149		1
2		SEAT BELT, SEAT BELT, NLA - Order 6675074 seat belt & (2) of 6725373 spring plate - Was 6563214, A	501111001 - 501111501	
2		SEAT BELT, SEAT BELT, NLA - Order Ref. 32 - Was 6564774, A	501111502 & Above	
2		SEAT BELT, SEAT BELT, NLA - Order 6675074 Seat Belt & (2) of Ref. 3 (6725373 Spring Plates) - Was 6667875, A	501111305 & Above	
2		SEAT BELT, SEAT BELT, NLA - W/Spring Plates - Order 6675074 Seat Belt & (2) of Ref. 3 (6725373 Spring Plates) - Was 6725403, A		1
2	6675074	SEATBELT STANDARD, W/O spring plates		1
3	6563206	GUIDE ASSEMBLY, L.H. - W/Ref. 4 & 5	501111001 - 501111501	
3	6563207	GUIDE ASSEMBLY, R.H. - W/Ref. 4 & 5	501111001 - 501111501	
3		GUIDE ASSY., GUIDE ASSY., NLA - W/Ref. 4 & 5 - 13.75" (349,3 mm) long - Use W/Ref. 2 (NLA/6564794 seat belt) - Was 6565354, A	501111502 & Above	
3		NLA - W/Ref. 4 & 5 - 12.25" (311,15mm) long - Use W/ Ref. 2 (NLA/6667875 Seat Belt) - Order 6711908 Spring Plate, Ref. 4 & (2) of Ref. 5 - Was 6711907, A		2
3	6711908	SPNG PLATE, Use W/Ref. 2 (NLA/6667875 Seat Belt)		2
3	6725373	SPRING BELT GUIDE, Use W/Ref. 2 (6675074 seal belt)		2
4		GUIDE, GUIDE, NLA - Order 6703703 - Was 6565355		2
5	6630207	RIVET POP, Was 6512797, A		4

Order the manual at mid-west-tech.com >

Title: Fuel System
Model Number: 543
Serial Number: 501111999 & Below

Ref #	Part #	Description	S/N	Q-ty
1	6563210	SENDER, Fuel - Also Order Ref. 27		1
2	87G1010	SCREW, Was 85G001010B, B		5
3		STRIP, STRIP, NLA - rubber - 2.5"(63,5 mm) long - Order Ref. 49 - Was 6563233, A	501111001 - 501111312	
4	6515603	GROMMET		1
5		TANK, TANK, NLA		1
6	6661114	CAP DIESEL 1 PSI, green - Was 6632468, A		1
6		CAP, CAP, NLA - locking--Code GC020 - Was 6635877, A		1
6	6661696	CAP FUEL LOCKING, locking - W/Ref. 48 - Code PK510		1
7		HOSE, HOSE, NLA - 35"(889 mm) long - Order Ref. 46	501111001 - 501111312	
8	42HS04	CLAMP HOSE TYPE M, Was 6515575, A		4
9		HOSE, HOSE, NLA - 6"(152 mm) long - Order Ref. 46	501111001 - 501111312	
10	6562548	TUBE	501111001 - 501111312	
11	6562546	HOSE, 7"(155 mm) long - Order Ref. 47	501111001 - 501111312	
12		TUBE, TUBE, NLA - Was 6562547, A		1
13	62F4	ELBOW		1
14	6562553	VALVE	501111001 - 501111312	
15	6562559	BAND		1
16	6559447	WASHER		2
17	84G3716	SCREW THD ROLLING TT		2
18	6560117	WIRE		1

Order the manual at mid-west-tech.com >

Title: Decals
Model Number: 543
Serial Number: 501111999 & Below

Ref #	Part #	Description	S/N	Q-ty
1	6578816	KIT, DECAL, Ref. 2-12 & Ref. 2-16 on Ill. B-17768 - Was 6569279, A		1
2	6560573	DECAL SAFETY, spark arrester - Was 6708937, A		1
3	6589739	DECAL 5, diesel fuel - Was 6561379, A		1
4	6577754	DECAL WARNING, gas spring		2
5	6569021	DECAL, operating		1
6	6579510	DECAL WARNING, warning - Was 6575854, A		1
7	6557412	DECAL, Bobcat head		1
7	6557413	DECAL, Bobcat head		1
8		DECAL, DECAL, NLA - patent - Was 6557224, C		1
9	6579511	DECAL WARNING, warning - Was 6565988, A		1
10	6567875	DECAL, service		1
11		DECAL, DECAL, NLA - Bobcat Logo - Was 6727307, A		1
12	6559569	DECAL, WARNING, ether		1
13	6556500	MANUAL EMI SAFETY - LOADER, not in kit		1
14	6569075	DECAL, model no. - R.H. - Not in Kit		1
14	6569074	DECAL, model no. - L.H. - Not in Kit		1
15	6576048	DECAL WARNING, caution - Was 6557930, A		1
16	6558789	DECAL, stay clear - For European Export Kit		2
17	6558790	DECAL, Red Reflective - For European Export Kit		2
18	6564154	DECAL, engine caution - For European Export Kit		1
19		DECAL, DECAL, NLA - warning - Order Ref. 4 & 6 & Ref. 6 & 11 on Ill. B-17768 - Was 6568692, A		1
20	6708929	DECAL COOLANT, propylene glycol		1

Order the manual at mid-west-tech.com >