
Snow Blower

Model 2118
Model 2418

Bobcat®

Operation & Maintenance Manual

S/N 712100101 & Above
S/N 712200101 & Above
S/N 712300101 & Above
S/N 712400101 & Above
S/N 712500101 & Above
S/N 712600101 & Above

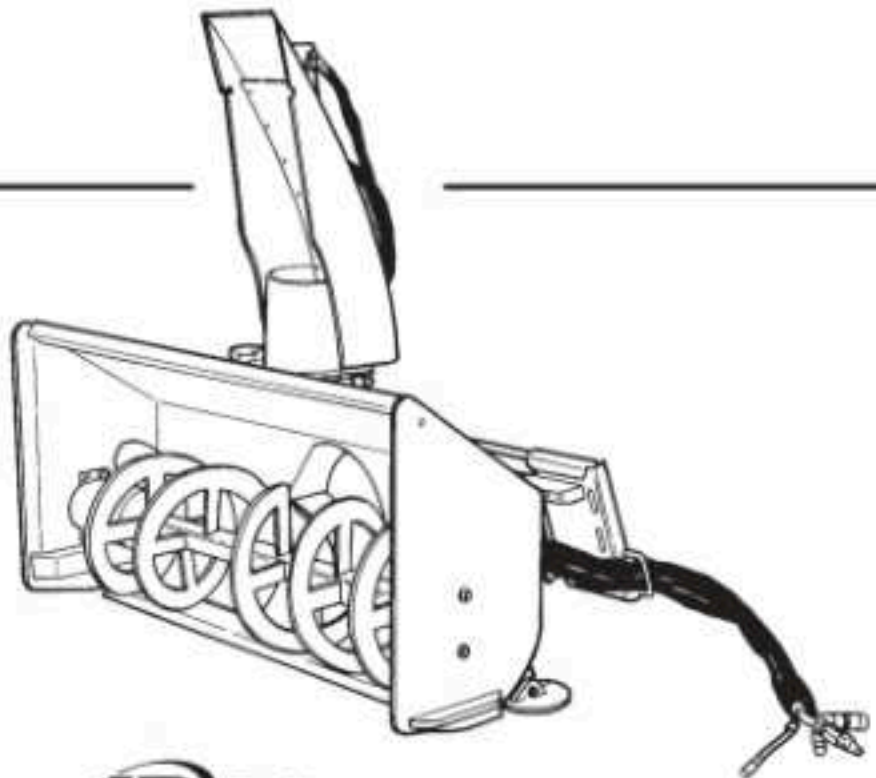

Bobcat

6901170 (10–00)
Printed in U.S.A.
© Bobcat Company 2000

MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD iii
SAFETY vii
OPERATING INSTRUCTIONS 1
MAINTENANCE 27
SPECIFICATIONS 37

REFERENCE INFORMATION

Write the correct information for YOUR Snow Blower in the spaces below. Always use these numbers when referring to your Snow Blower.

Snow Blower Serial Number ..... _____

_____

_____

_____

NOTES: _____

_____

_____

_____

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040–0128

Bobcat Company Europe
J. Huysmanslaan 59
B–1651 LOT
Belgium


MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


OPERATING THE SNOW BLOWER (Cont'd)

Operation

Engage the auxiliary hydraulics. (See page 19.)


Press the switch (Item 1) **[A]** on the right steer lever or push the right steer lever (Item 1) **[B]** fully to the right. The snow blower will be engaged.

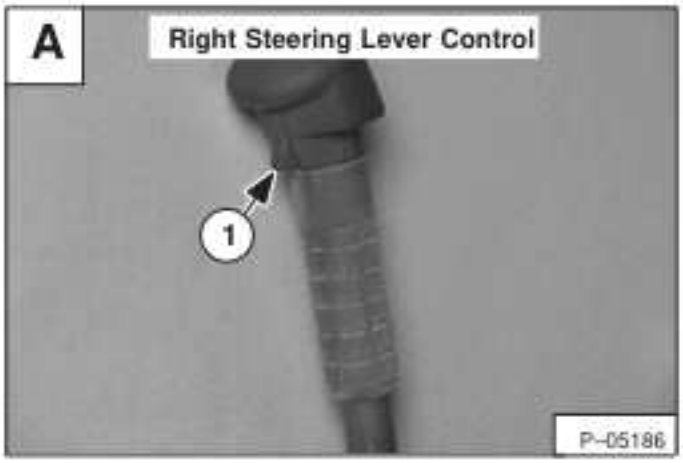


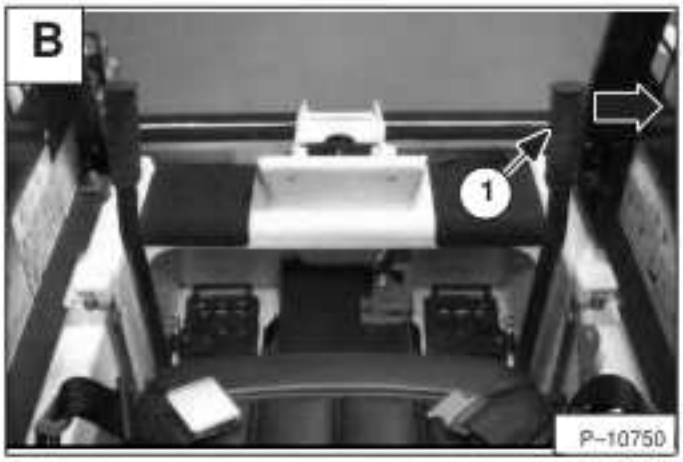

Pressing the top of the switch (Item 1) **[C]** on the right steer lever will extend the hydraulic cylinder causing the deflector (Item 1) **[D]** to rotate down, decreasing the distance the snow is thrown.

Pressing the bottom of the switch (Item 2) **[C]** on the right steer lever will retract the hydraulic cylinder causing the deflector (Item 1) **[D]** to rotate up, increasing the distance the snow is thrown.

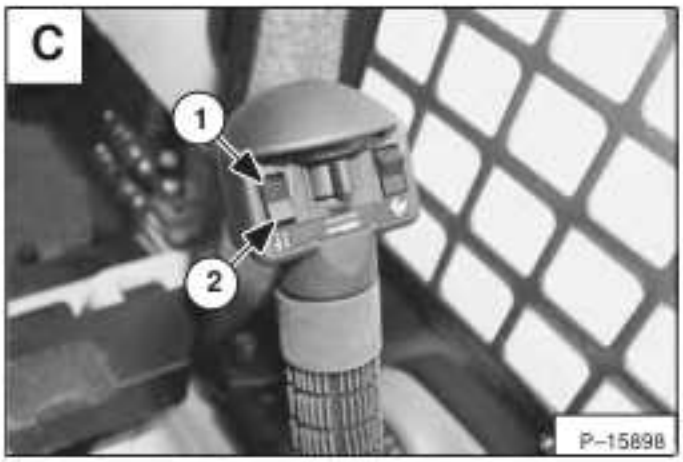

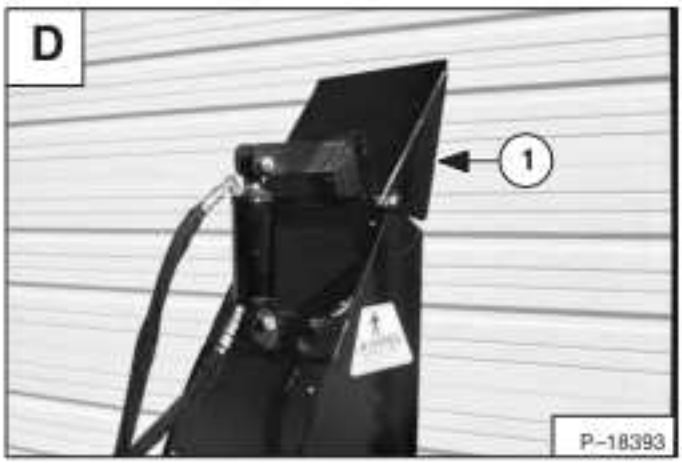

MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

LUBRICATION

Lubrication Points

Always use a good quality lithium base grease when lubricating the attachment. Apply the lubricant until extra grease shows.

IMPORTANT

Fluid such as engine oil, hydraulic fluid, coolants, grease, etc. must be disposed of in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local, state and federal regulations for the correct disposal.

I-2067-0499

Lubricate the following grease fittings **every 6 hours.**


Three chute guide rollers (Item 1) **[A]**.


Auger drive coupler (Item 1) **[B]**.


Auger bearing (Item 1) **[C]**.

Every 6 hours apply clean engine oil or chain lubricant to the chute rotation drive chain (Item 1) **[D]**.



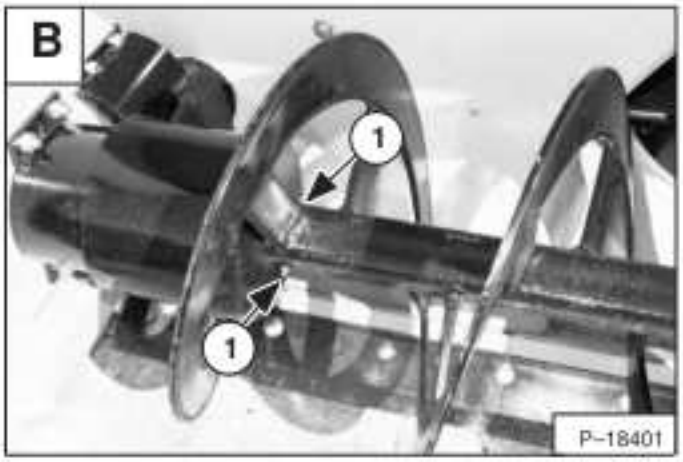


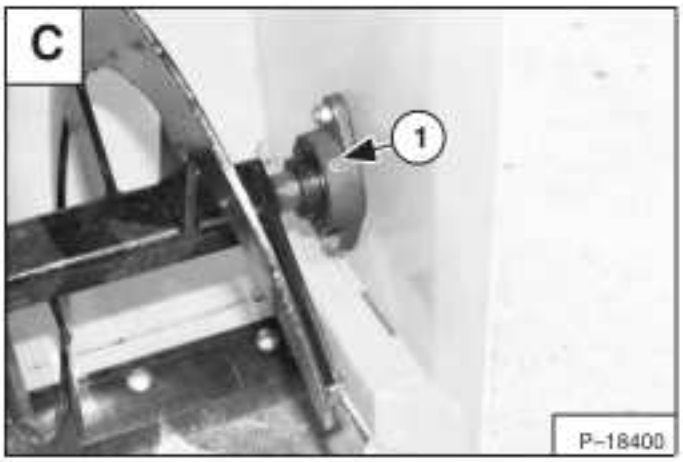

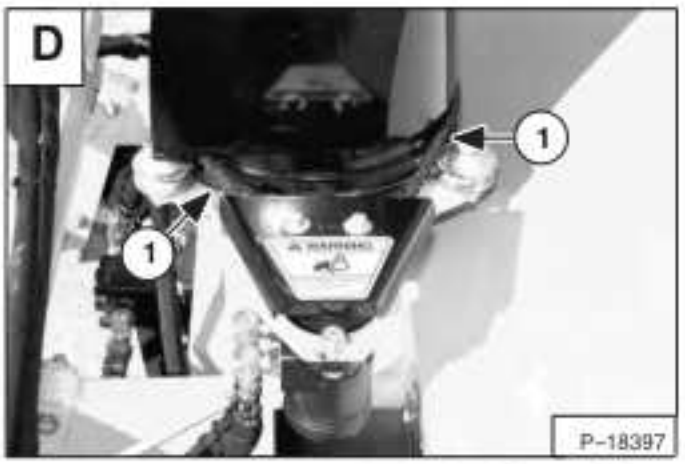

MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

HYDRAULIC SCHEMATIC FOR HIGH FLOW SNOW BLOWERS

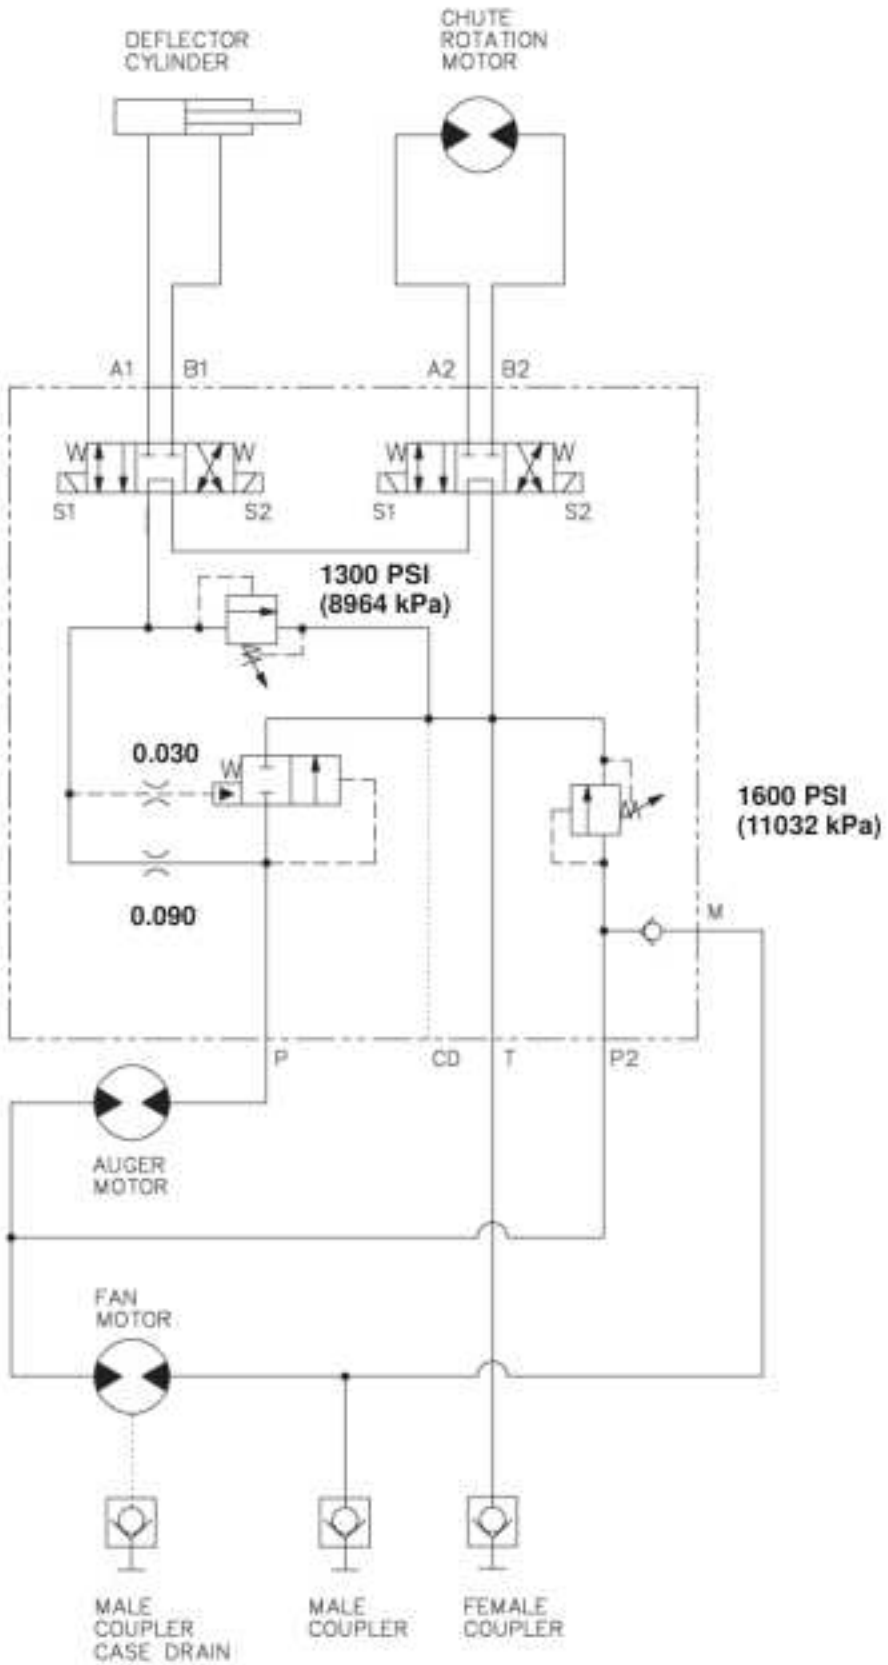

MS-01077

MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

SAFETY IS THE OPERATOR'S RESPONSIBILITY

Safety Alert Symbol
This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

The Bobcat product and attachment are designed to give maximum safety; but no machine design can prevent operator error or carelessness.

The Bobcat product and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8–10 hour column or as shown in the Operation & Maintenance Manual.

⚠WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W–2001–1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I–2019–0284

⚠WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W–2044–1285

SAFE OPERATION NEEDS A QUALIFIED OPERATOR *

A QUALIFIED OPERATOR MUST DO THE FOLLOWING:

- **UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS**
  - The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
  - Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.
- **HAVE TRAINING WITH ACTUAL OPERATION**
  - Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
  - The new operator must start in an area without bystanders and use all the controls until he can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
  - Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
  - Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- **KNOW THE WORK CONDITIONS**
  - Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
  - The operator must know any prohibited uses or work areas, for example, he needs to know about excessive slopes.
  - Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *SAFETY INSTRUCTIONS* Section of this manual.
  - Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or special applications kit are required for some work. See your dealer about Bobcat Safety equipment.

* For an operator be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

MidWestTech | Bobcat 2118, Model 2418 Snow Blower Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >