
Bobcat

Service Manual
Mower

(Mower 72) S/N 230400101 & Above
(MI Finish Mower 72) S/N A8WB00101 & Above
(90 Mower) S/N 230700101 & Above
(MI Finish Mower 90) S/N A8SD00101 & Above

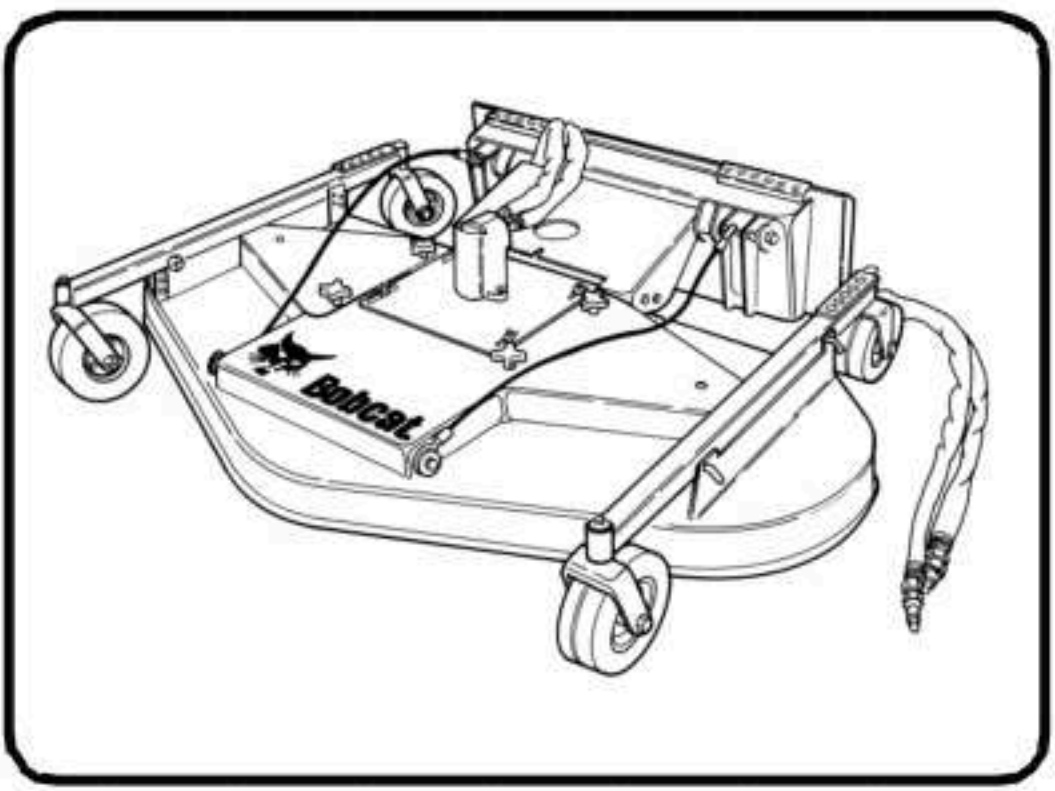

6902088 (3-10)

Printed in U.S.A.

© Bobcat Company 2010

MidWestTech | Bobcat Mower 72, MI Finish Mower 72, 90 Mower, MI Finish Mower 90 Mow... Order the manual at mid-west-tech.com >

CONTENTS

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

MAINFRAME 30-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat Mower 72, MI Finish Mower 72, 90 Mower, MI Finish Mower 90 Mow... Order the manual at mid-west-tech.com >

SERIAL NUMBER LOCATION 1-7
Attachment Serial Number 1-7


DELIVERY REPORT 1-7

ATTACHMENT IDENTIFICATION 1-8
72 Inch S/N 230400101 & Above
90 Inch S/N 230700101 & Above 1-8
72 Inch S/N A8WB00101 & Above
90 Inch S/N A8SD00101 & Above 1-9

MidWestTech | Bobcat Mower 72, MI Finish Mower 72, 90 Mower, MI Finish Mower 90 Mow... Order the manual at mid-west-tech.com >

Removal And Installation (Cont'd)

Figure 20-10-4

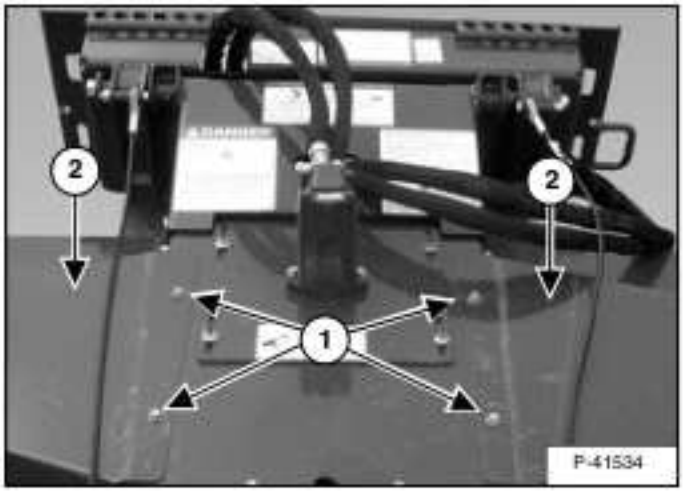


Remove the four bolts (Item 1), then remove the cover(s) (Item 2) **[Figure 20-10-4]**.

Installation: Install covers and tighten nuts to 25 - 28 ft.-lb. (34 - 38 N•m) torque.

Disconnect belts from the motor pulley.


Figure 20-10-5

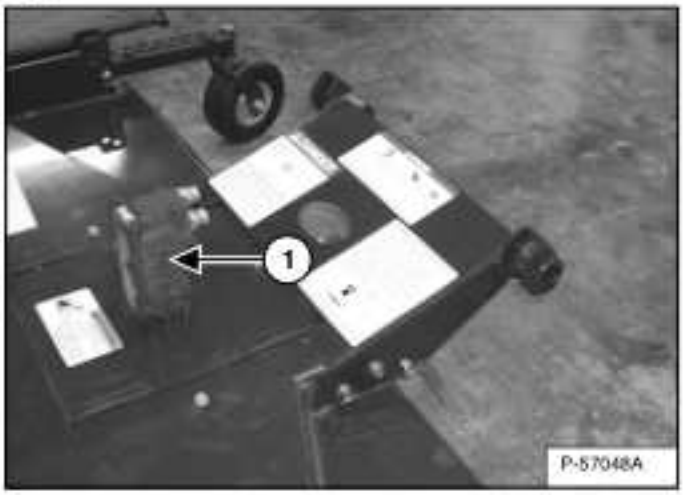

Remove the motor assembly (Item 1) **[Figure 20-10-5]**.

Installation: Install motor assembly (Item 1) **[Figure 20-10-5]**, connect the belts to motor pulley.


Figure 20-10-6

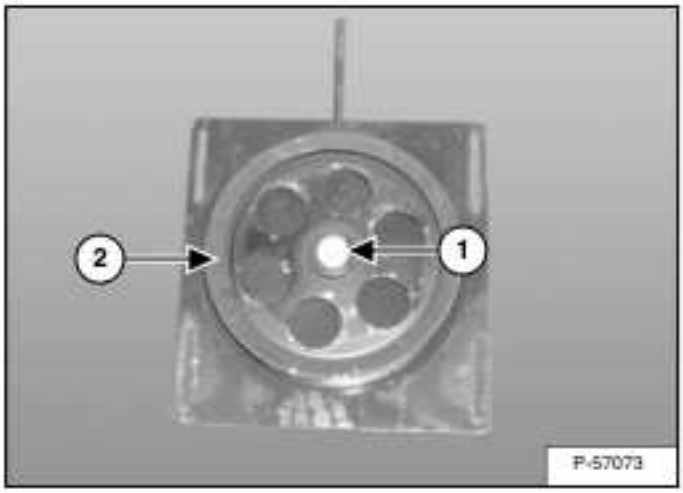

Remove bolt (Item 1) and washer. Remove the pulley (Item 2) **[Figure 20-10-6]**.

Installation: Install pulley (Item 2). Install bolt (Item 1) **[Figure 20-10-6]** and washer. Tighten to 65 - 70 ft.-lb. (88 - 95 N•m) torque.

Figure 20-10-7

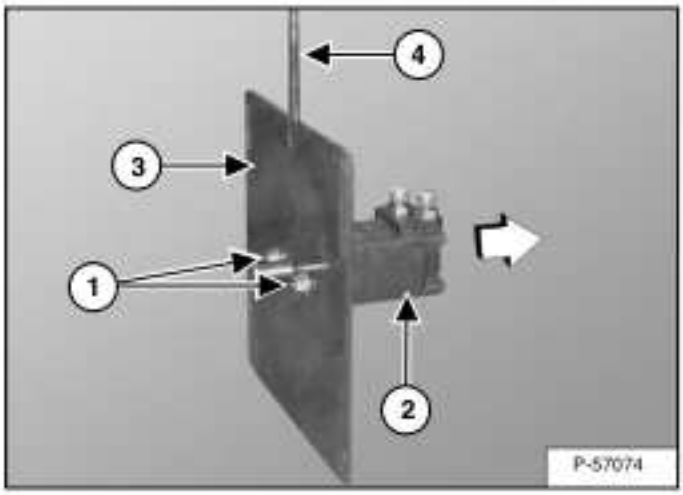


Remove the two bolts (Item 1) and nuts. Remove the hydraulic motor (Item 2) from the motor mount (Item 3) **[Figure 20-10-7]**.

Installation: Place the hydraulic motor on the motor mount with the fittings facing the belt tension bolt (Item 4) **[Figure 20-10-7]**. Install bolts and nuts, then tighten to 25 - 28 ft.-lb. (34 - 38 N•m) torque.

MidWestTech | Bobcat Mower 72, MI Finish Mower 72, 90 Mower, MI Finish Mower 90 Mow... Order the manual at mid-west-tech.com >

(90 in.) Dimensions

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

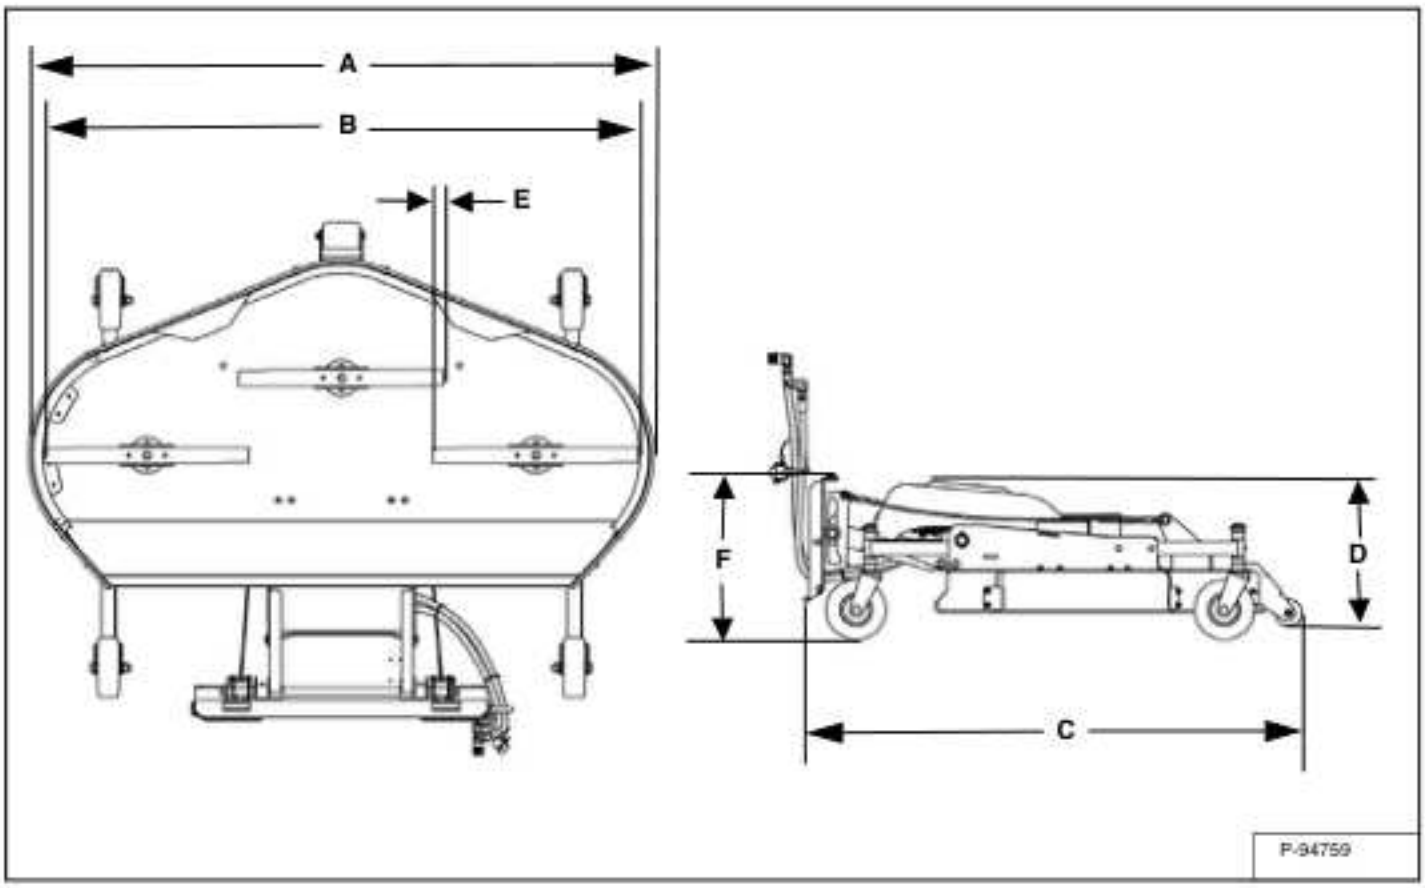

DESCRIPTION	90 in. (S/N 230700101 & Above)	90 in. (S/N A8SD00101 & Above)
Width (A)	93.9 in. (2385 mm)	94.0 in. (2388 mm)
Cutting Width (B)	89.50 in. (2273 mm)	89.50 in. (2273 mm)
Length (C)	78.4 in. (1991 mm)	75.0 in. (1905 mm)
Height (D)	22.5 in. (572 mm)	22.0 in. (559 mm)
Blade Overlap (E)	1.72 in. (43,7 mm)	1.62 in. (41,1 mm)
Dimension (F)	23.7 in. (602 mm)	24.8 in. (631 mm)

MidWestTech | Bobcat Mower 72, MI Finish Mower 72, 90 Mower, MI Finish Mower 90 Mow... Order the manual at mid-west-tech.com >