NEW HOLLAND

COMPACT CRAWLER EXCAVATOR

E50BSR TIER 4

SERVICE MANUAL

87481006 EN-US


Issued 01Jan 08

NEW HOLLAND CONSTRUCTION

www.newhollandconstruction.com

MidWestTech | New Holland E50BSR Compact Crawler Excavator Service Manual | Public... Order the manual at mid-west-tech.com >

SECTION 3 - SYSTEMS
CHAPTER 1 - HYDRAULIC SYSTEM

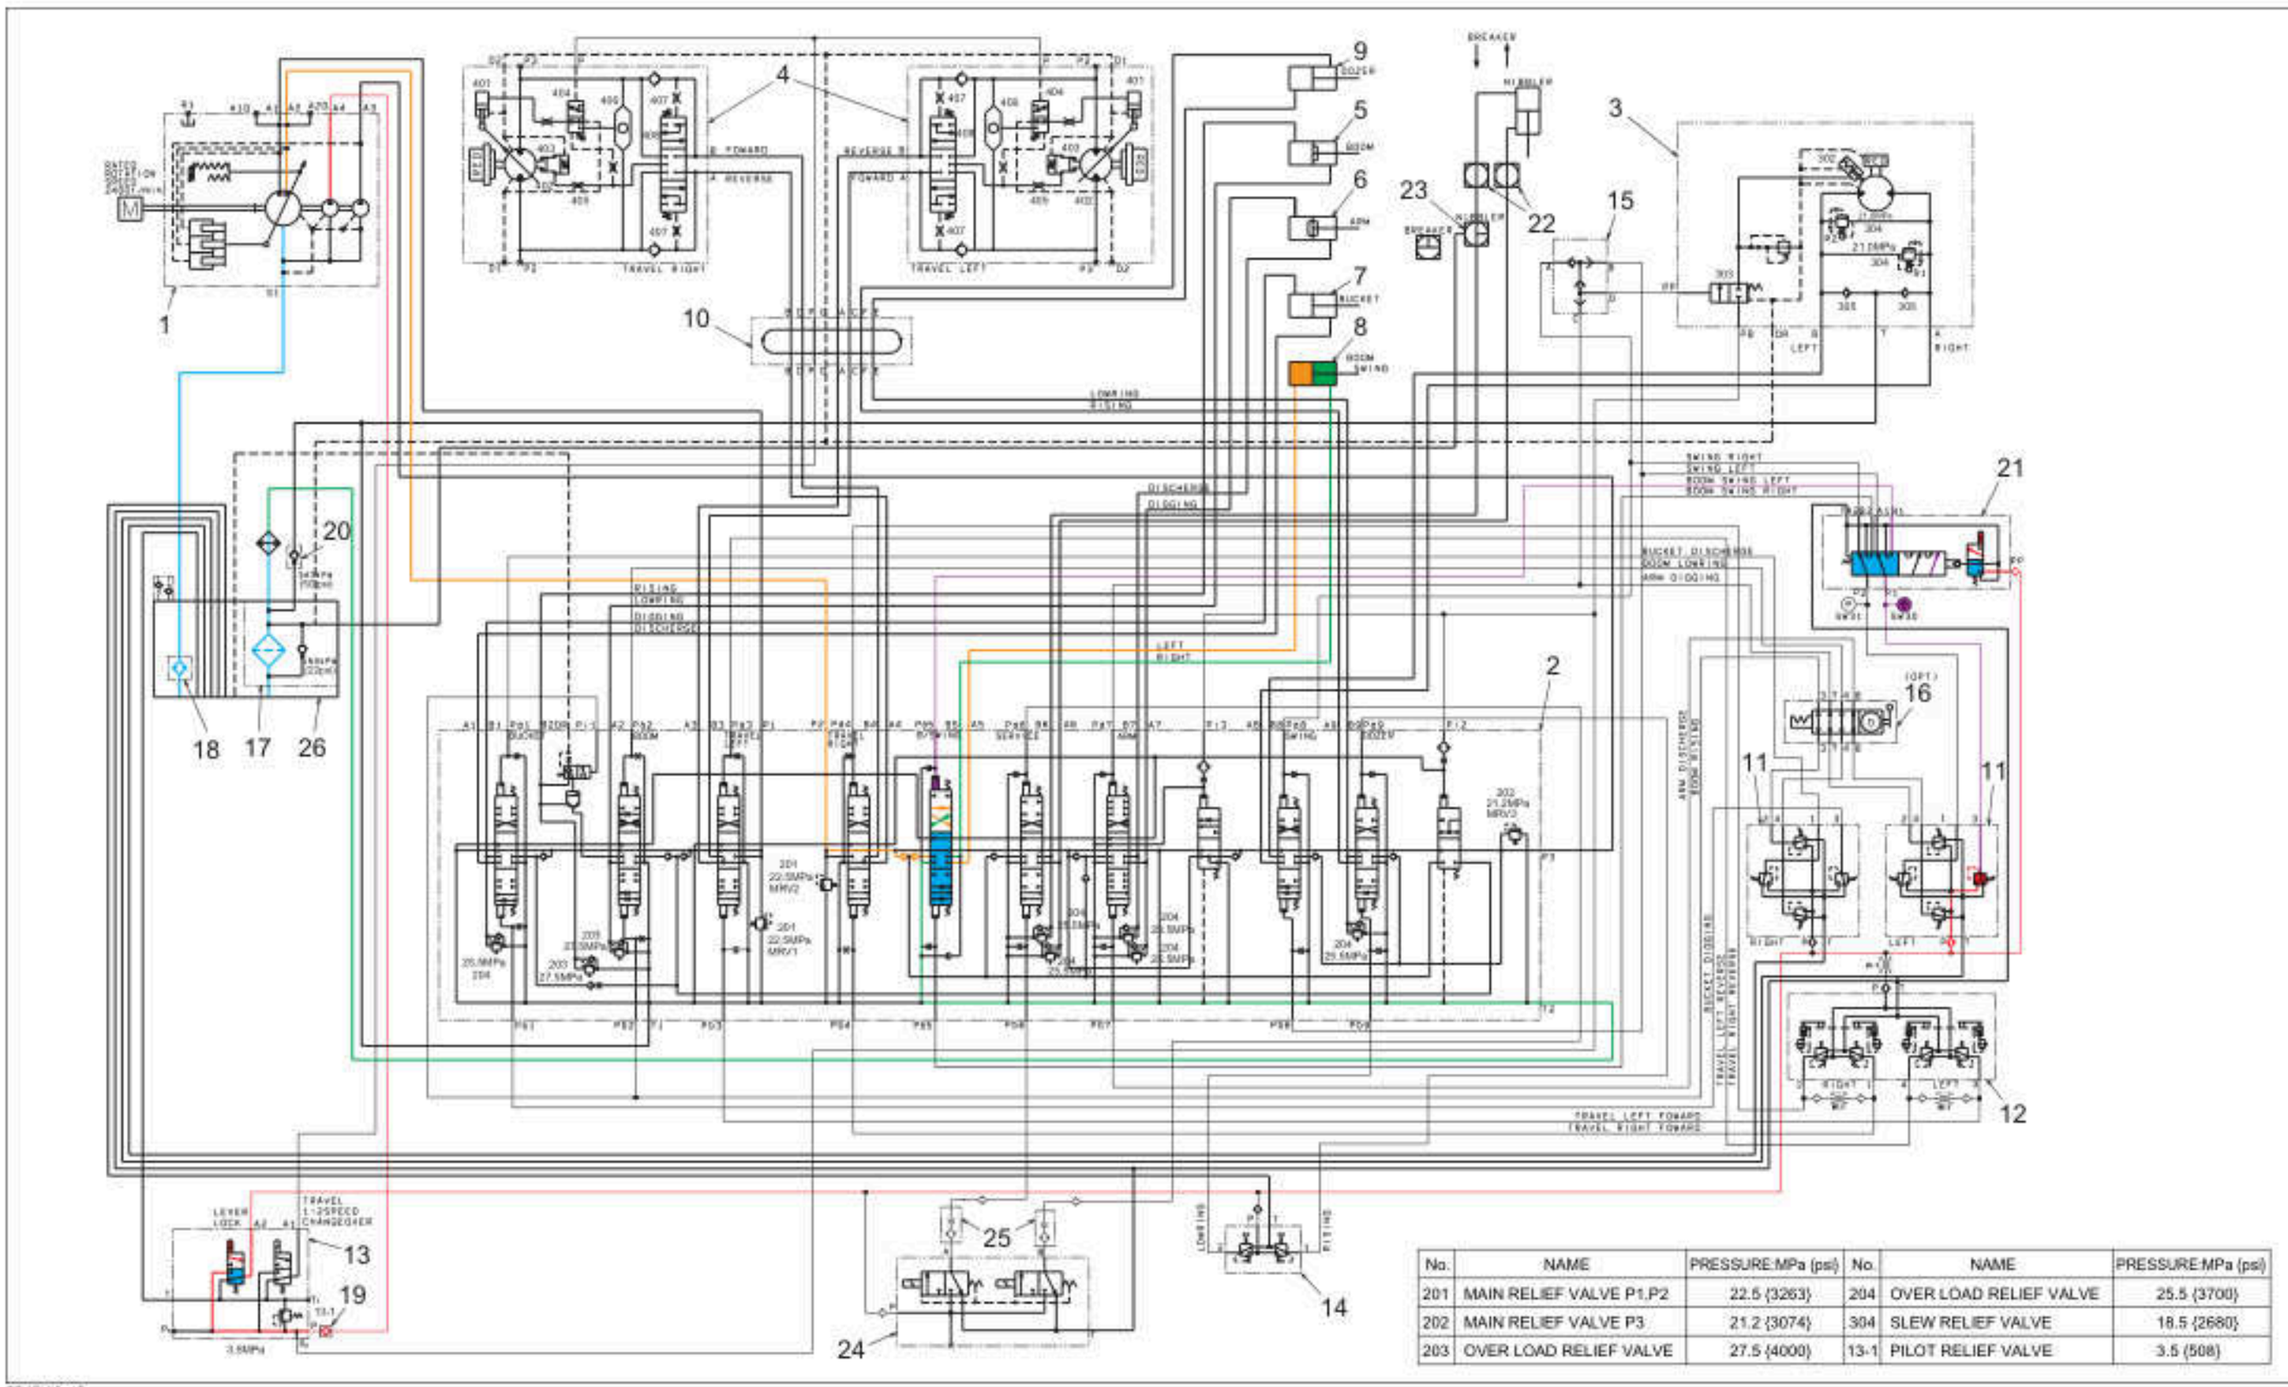

No.	NAME	PRESSURE:MPa {psi}	No.	NAME	PRESSURE:MPa {psi}
201	MAIN RELIEF VALVE P1,P2	22.5 {3263}	204	OVER LOAD RELIEF VALVE	25.5 {3700}
202	MAIN RELIEF VALVE P3	21.2 {3074}	304	SLEW RELIEF VALVE	18.5 {2680}
203	OVER LOAD RELIEF VALVE	27.5 {4000}	13-1	PILOT RELIEF VALVE	3.5 {508}

GRAPHIC_10

Figure 8

SWING CIRCUIT: BOOM SWING LEFT OPERATION

MidWestTech | New Holland E50BSR Compact Crawler Excavator Service Manual | Publication 87481006

Order the manual at mid-west-tech.com >