NEW HOLLAND

COMPACT WHEEL LOADER

W50BTC
W60BTC
W70BTC
W80BTC
TIER 3

SERVICE MANUAL

87734623A NA

Issued 01May 08

NEW HOLLAND CONSTRUCTION

www.newhollandconstruction.com

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel Load... Order the manual at mid-west-tech.com >

INDEX

SECTION 00 - INTRODUCTION

1. SAFETY INSTRUCTIONS 1
2. GENERAL SAFETY INSTRUCTIONS 2
3. TECHNICAL SPECIFICATIONS 12

SECTION 10 - ENGINE

1. DIESEL ENGINE 1
2. FUEL SYSTEM 2

SECTION 25 - FRONT AXLES

1. REMOVAL AND INSTALLATION 1
2. DIMENSIONS 3
3. TECHNICAL SPECIFICATIONS 5
4. OIL CHANGE 9
5. DISASSEMBLY AND ASSEMBLY 12
   - 5.1 DISC BRAKE ASSY 12
   - 5.2 BRAKE CALIPER 19
   - 5.3 REDUCTION GEAR (W50BTC) 27
   - 5.4 REDUCTION UNIT (W60BTC, W70BTC, W80BTC) 30
   - 5.5 WHEEL HUB (W50BTC) 33
   - 5.6 WHEEL HUB (W60BTC, W70BTC, W80BTC) 42
   - 5.7 WHEEL SHAFT (W60BTC, W70BTC, W80BTC) 48
   - 5.8 BRAKE AND WHEEL SHAFT (W60BTC, W70BTC, W80BTC "HIGH SPEED") 52
   - 5.9 DIFFERENTIAL SUPPORT 60
   - 5.10 DIFFERENTIAL ASSY 68
   - 5.11 PINION 75
6. TROUBLESHOOTING 81
7. SPECIAL TOOLS 84

SECTION 27 - REAR AXLES

1. REMOVAL AND INSTALLATION 1
2. DIMENSIONS 3
3. TECHNICAL SPECIFICATIONS 7
4. OIL CHANGE 14
5. DISASSEMBLY AND ASSEMBLY 18
   - 5.1 MOTOR TB150 18
   - 5.2 MOTOR TB138.5 "HIGH SPEED" 21
   - 5.3 TRANSMISSION BOX TB150 25
   - 5.4 TRANSMISSION TB138.5 "HIGH SPEED" 34
   - 5.5 REDUCTION GEAR (W50BTC) 54
   - 5.6 REDUCTION UNIT (W60BTC, W70BTC, W80BTC) 57
   - 5.7 WHEEL HUB (W50BTC) 61
   - 5.8 WHEEL HUB (W60BTC, W70BTC, W80BTC) 70

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >

5.9 WHEEL SHAFT (W60BTC, W70BTC, W80BTC) 76
5.10 DIFFERENTIAL SUPPORT 80
5.11 DIFFERENTIAL ASSY 88
5.12 LIMITED SLIP DIFFERENTIAL ASSY 94
5.13 PINION 101
6. TROUBLESHOOTING 107
7. SPECIAL TOOLS 110

SECTION 33 - BRAKE SYSTEM

1. BRAKE SYSTEM DIAGRAM 1
1.1 STANDARD DIAGRAM 1
1.2 "HIGH SPEED" DIAGRAM 2
2. TECHNICAL SPECIFICATIONS 3
2.1 BRAKE PEDAL VALVE 3
2.2 PRESSURE SWITCHES 3
3. OPERATION 4
3.1 SERVICE BRAKE OPERATION 6
3.2 PARKING BRAKE OPERATION 8
4. BRAKE PEDAL VALVE 9
5. PRESSURE SWITCHES 11
6. BRAKE ACCUMULATOR 12
6.1 TECHNICAL SPECIFICATIONS 12
7. CHECKS AND ADJUSTMENTS 13
7.1 SERVICE BRAKE SYSTEM PRESSURE CHECK 13
7.2 ACCUMULATOR PRESSURE CHECK 14
7.3 PEDAL ANGLE ADJUSTMENT 15
7.4 "INCHING" VALVE ADJUSTMENT 16
8. TROUBLESHOOTING 17

SECTION 35 - HYDRAULIC SYSTEM

1. HYDRAULIC DIAGRAMS 1
1.1 HYDRAULIC DIAGRAM FOR W50BTC 1
1.2 HYDRAULIC DIAGRAM FOR W50BTC WITH OPTIONAL OUTFITS 3
1.3 HYDRAULIC DIAGRAM FOR W60BTC 5
1.4 HYDRAULIC DIAGRAM FOR W60BTC WITH OPTIONAL OUTFITS 7
1.5 HYDRAULIC DIAGRAM FOR W70BTC 9
1.6 HYDRAULIC DIAGRAM FOR W70BTC WITH OPTIONAL OUTFITS 11
1.7 HYDRAULIC DIAGRAM FOR W80BTC 13
1.8 HYDRAULIC DIAGRAM FOR W80BTC WITH OPTIONAL OUTFITS 15
2. TRANSMISSION 17
2.1 HYDRAULIC DIAGRAM 17
2.2 OPERATION 18
2.3 ADJUSTMENTS 20
3. VARIABLE-DISPLACEMENT PISTON PUMP 22
3.1 TECHNICAL SPECIFICATIONS 23
3.2 MAIN VALVES 24
3.3 DISASSEMBLY 32
3.4 ASSEMBLY 51

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >

4. GEAR PUMP 58
4.1 TECHNICAL SPECIFICATIONS 58
4.2 COMPONENTS 59
4.3 DISASSEMBLY AND ASSEMBLY 60
5. PRIORITY VALVE 63
5.1 TECHNICAL SPECIFICATIONS 63
6. TRAVEL MOTOR 64
6.1 TECHNICAL SPECIFICATIONS 64
6.2 MAIN COMPONENTS 65
6.3 OPERATION 66
6.4 REMOVAL 69
7. DISASSEMBLY AND ASSEMBLY 70
8. ONE-WAY DISTRIBUTOR VALVE 84
9. HYDRAULIC OIL TANK 85
9.1 OIL FILTER 86
10. TROUBLESHOOTING 87

SECTION 39 - FRAME

1. ARTICULATED JOINT 1
1.1 COMPONENTS 1
1.2 DISASSEMBLY AND ASSEMBLY 2

SECTION 41 - STEERING SYSTEM

1. OPERATION 1
1.1 EMERGENCY STEERING 3
1.2 PRESSURE ADJUSTMENT 4
2. POWER STEERING 5
2.1 TECHNICAL SPECIFICATIONS 6
2.2 COMPONENTS 7
2.3 DISASSEMBLY AND ASSEMBLY 8
2.4 TROUBLESHOOTING 24
2.5 SPECIAL TOOLS 25
3. STEERING CYLINDER 26
3.1 REMOVAL AND INSTALLATION 27
3.2 DISASSEMBLY 29
4. TROUBLESHOOTING 34

SECTION 50 - HEATING AND AIR CONDITIONING SYSTEM

1. HEATING 1
2. AIR CONDITIONING 3
3. TROUBLESHOOTING 29

SECTION 55 - ELECTRICAL SYSTEM

1. ELECTRICAL DIAGRAMS 1
2. FUSES AND RELAYS 17

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >

3. TECHNICAL SPECIFICATIONS

FRONT AXLE CA147195 (W50BTC)

Model	28.16
Differential type	limited slip
Dry weight	230 kg (506 lb)
Bevel gear reduction ratio	2.90 / 1
Reduction gear ratio	6.00 / 1
Total reduction ratio	17.45 / 1
Input rotation direction	clockwise
Bevel gear play	0.17 ÷ 0.24 mm (0.006 ÷ 0.009 in)
Pinion bearing preload (measured on D = 34.5 mm (1.35 in) without seal rings)	P = 9.2 ÷ 13.7 daN (P = 20.68 ÷ 30.80 lbf)
Ring gear-pinion bearing total preload (measured on D = 34.5 mm (1.35 in) without seal rings)	T = (P + 3.1) ÷ (P + 4.7) daN T = (P + 6.96) ÷ (P + 10.56) lbf
Maximum service pressure	55 bar (797 psi)
Differential oil capacity	7.5 litres (2 gal)
Reduction gear oil capacity (each side)	0.7 litres (0.18 gal)

FRONT AXLE CA150144 (W60BTC, W70BTC, W80BTC)

Model	28.25
Differential type	limited slip
Dry weight	318 kg (700 lb)
Bevel gear reduction ratio	3.667 / 1
Reduction gear ratio	6.00 / 1
Total reduction ratio	22.00 / 1
Input rotation direction	clockwise
Bevel gear play	0.17 ÷ 0.24 mm (0.006 ÷ 0.009 in)
Pinion bearing preload (measured on D = 34.5 mm (1.35 in) without seal rings)	P = 9.2 ÷ 13.7 daN (P = 20.68 ÷ 30.80 lbf)
Ring gear-pinion bearing total preload (measured on D = 34.5 mm (1.35 in) without seal rings)	T = (P + 2.5) ÷ (P + 3.8) daN T = (P + 5.62) ÷ (P + 8.54) lbf
Maximum service pressure	55 bar (797 psi)
Differential oil capacity	8 litres (2.10 gal)
Reduction gear oil capacity (each side)	0.6 litres (0.20 gal)

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >


2.1 TECHNICAL SPECIFICATIONS

	W50BTC - W60BTC - W70BTC	W80BTC
Model	OSPC 200 LS	OSPC 315 LS
Displacement	200 cm^3/rev (12.20 in^3/rev)	315 cm^3/rev (19.22 in^3/rev)
Rated oil flow	20 l/min (5.30 gal/min)	32 l/min (8.40 gal/min)
Weight	5.8 kg (13 lb)	6.2 kg (14 lb)
Relief valve adjustment	240 bar (3480 psi)	240 bar (3480 psi)

TIGHTENING TORQUES

Steering wheel nut	55 Nm (40.56 lbf·ft)
Steering column bracket	23 Nm (16.96 lbf·ft)
End cover	30 Nm (22.12 lbf·ft)
Connector	45 Nm (33.19 lbf·ft)
Adaptors	55 Nm (40.56 lbf·ft)
Check valve	30 Nm (22.12 lbf·ft)

HYDRAULIC DIAGRAM

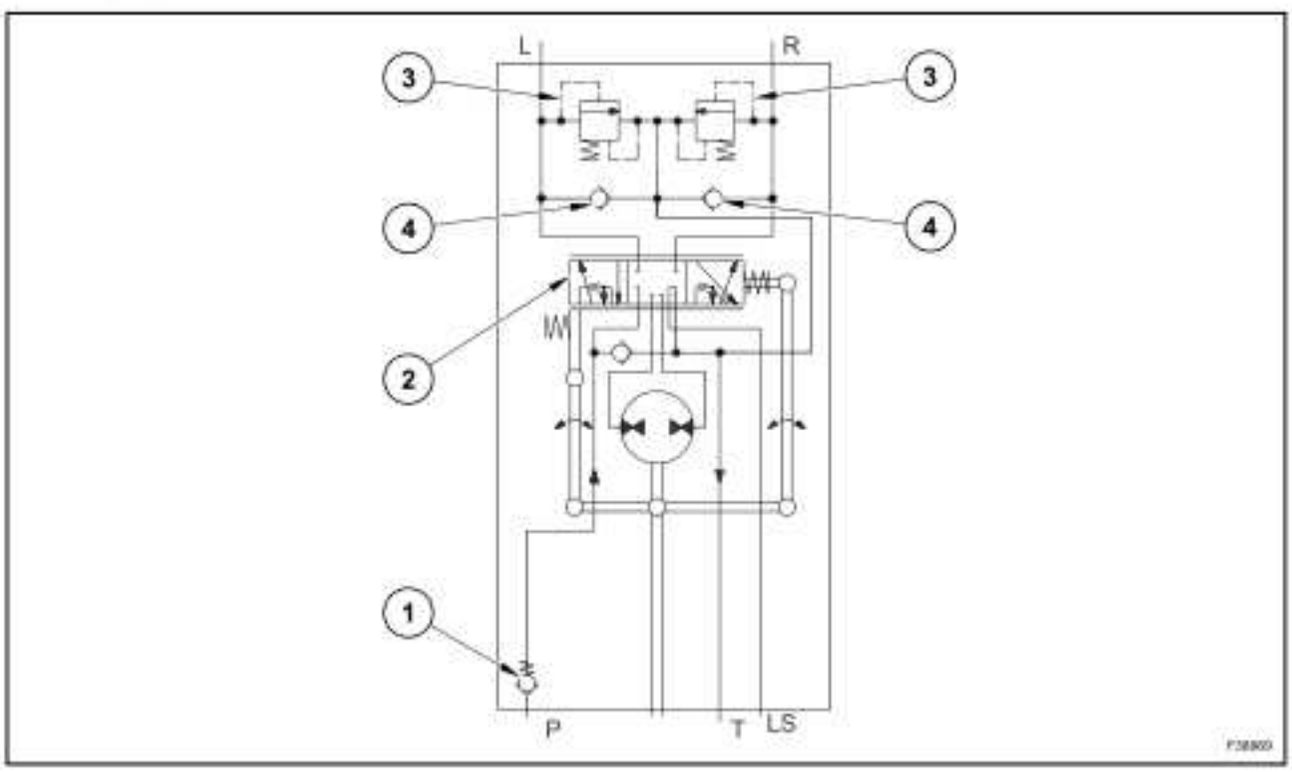

1. Check valve
2. Power steering control valve
3. High pressure valve 240 bar (3480 psi)
4. Anticavitation valve


MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >

4. TROUBLESHOOTING

FAULT	CAUSE	ACTION
Steering wheel hard.	Pump drive coupling defective.	Consult your Dealer.
Steering wheel hard to turn when travelling on level ground.	Oil level too low.	Refill.
	Pressure too low.	Consult your Dealer.
	Limited-slip differential or steering mechanics sluggish.	Consult your Dealer.
Steering wobbly, permanent tread correction necessary.	Air in hydraulic system.	Purge system of air.
	Internal leaks in steering valve.	Repair or replace.
Steering wheel easy to turn at stopper.	Internal leaks in steering valve.	Repair or replace.
During fast steering action, wheel turns fast for a short time (steering catching up).	Air in hydraulic system.	Purge system of air.
	Internal leaks in steering valve.	Repair or replace.
	Oil supply rate insufficient.	Consult your Dealer.
The steering wheel when released still turns.	Steering valve jams.	Consult your Dealer.

MidWestTech | New Holland W50BTC, W60BTC, W70BTC, W80BTC Compact Wheel... Order the manual at mid-west-tech.com >

1.6 HYDRAULIC DIAGRAM FOR W70BTC WITH OPTIONAL OUTFITS

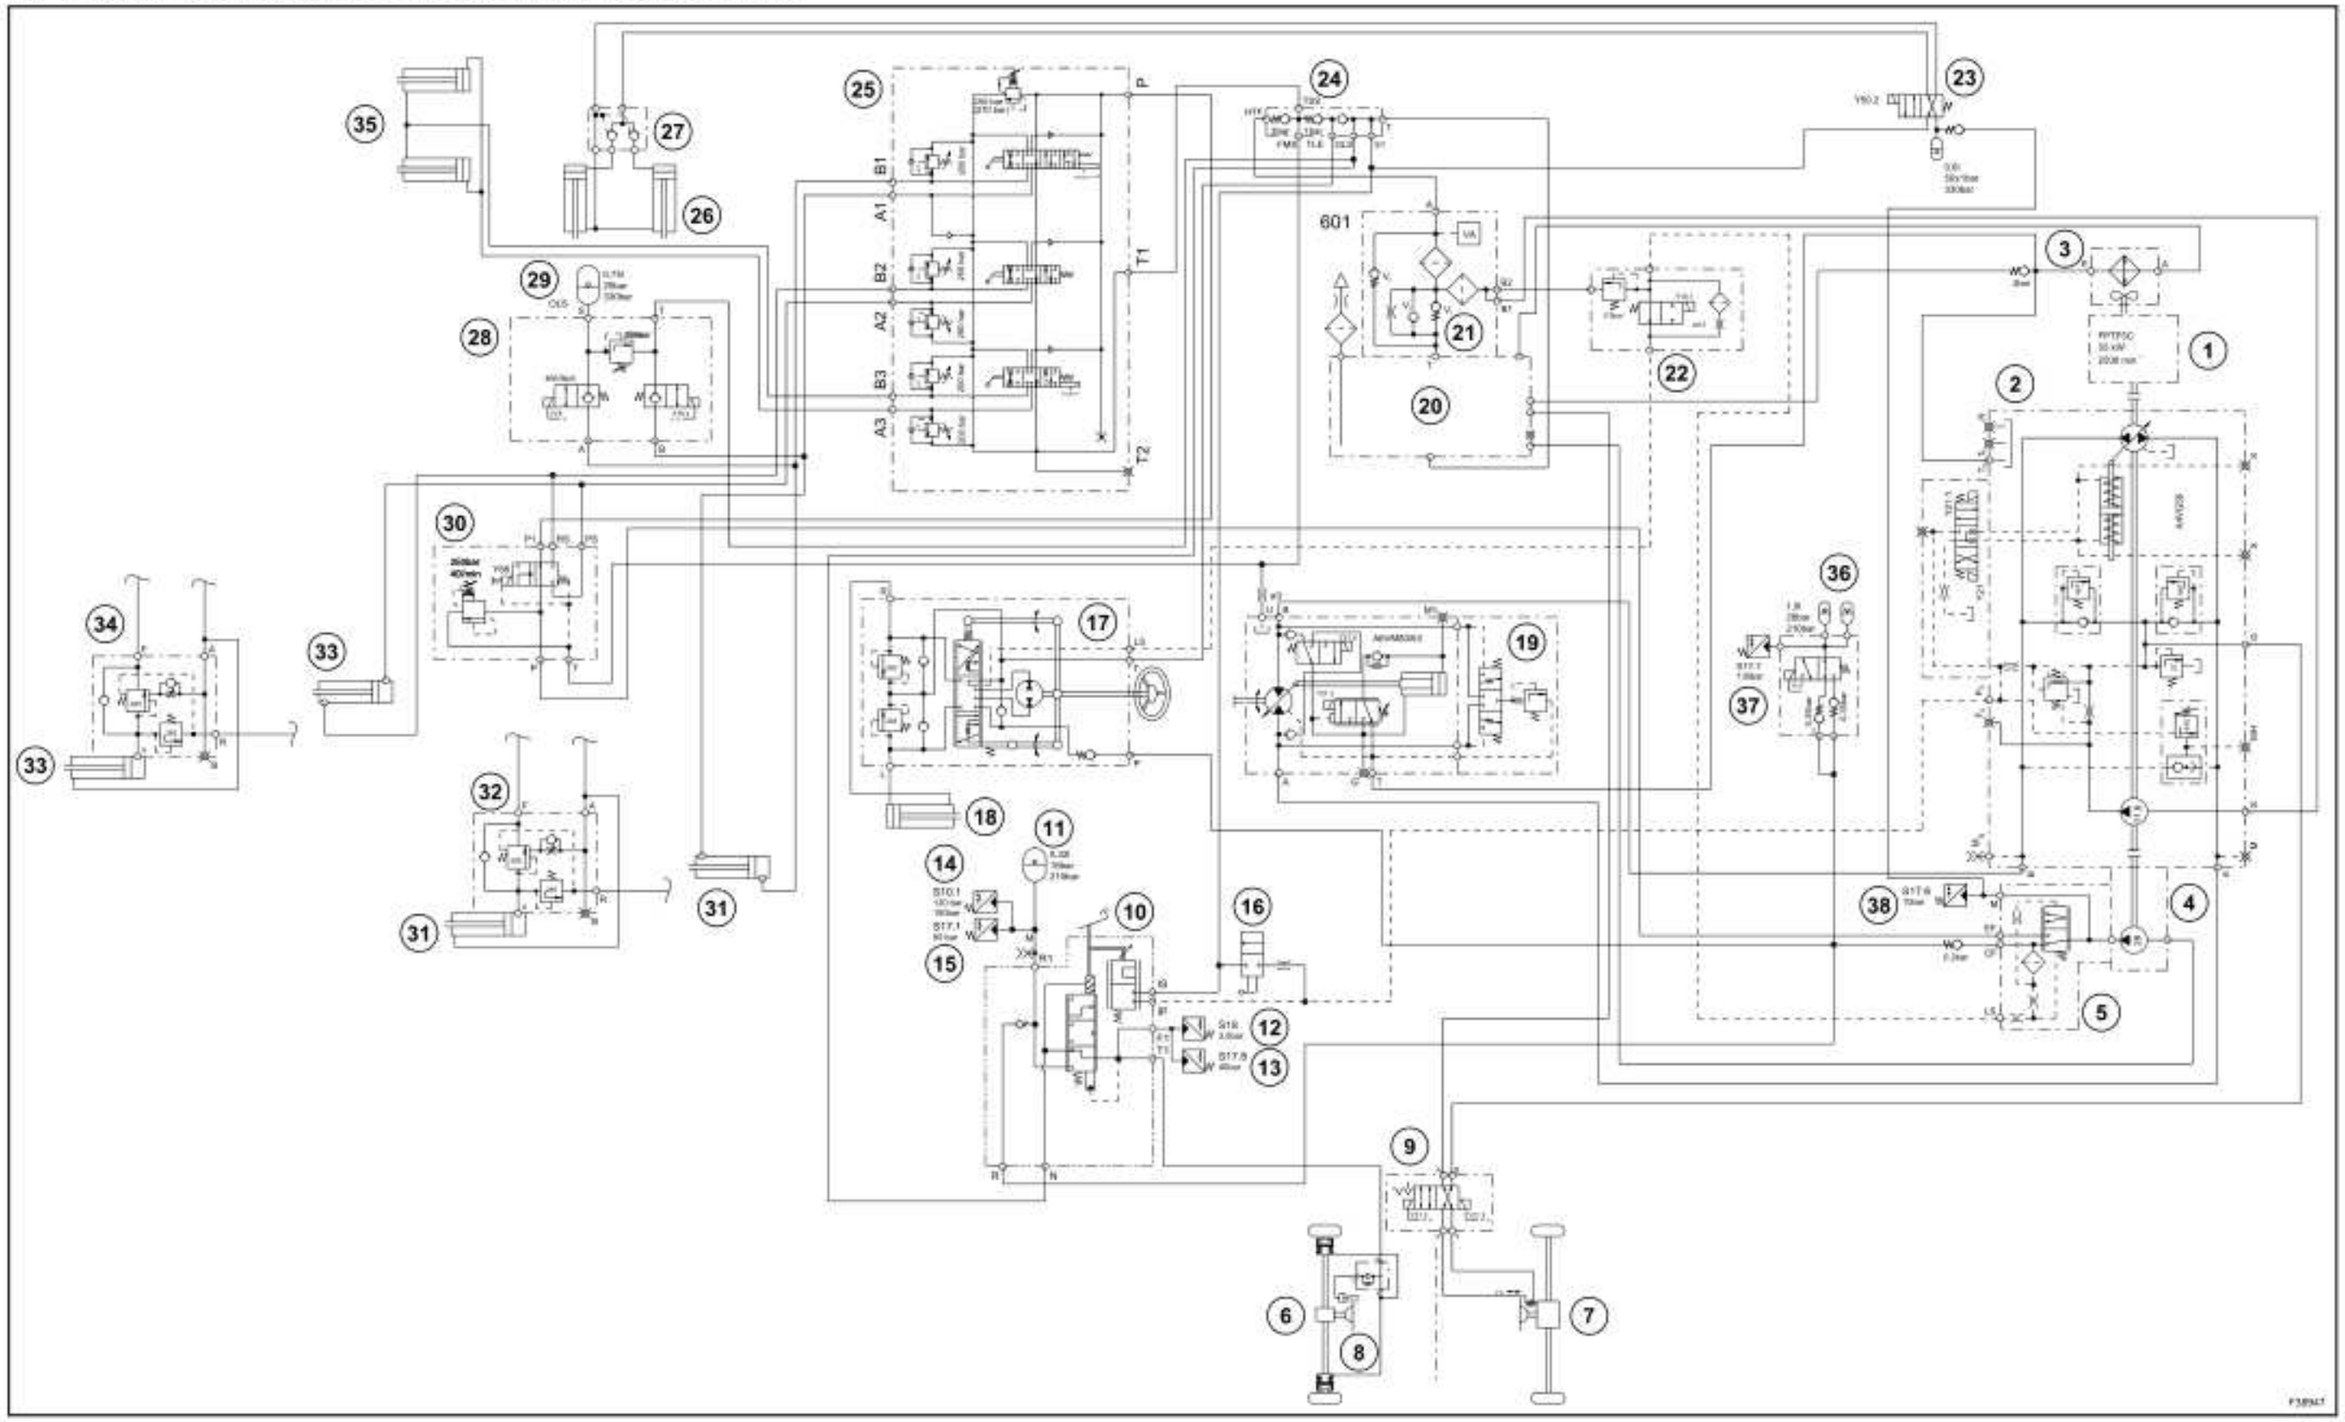

Order the manual at mid-west-tech.com >