CRAWLER EXCAVATOR

SERVICE MANUAL

HX60S (China)

HYUNDAI

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publication H...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-5
Group 3 Swing Device 2-7
Group 4 Travel Device 2-17

SECTION 3 HYDRAULIC AND ELECTRICAL SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Monitoring system 3-2
Group 3 Electrical Circuit 3-22
Group 4 Error codes 3-35

SECTION 4 TROUBLESHOOTING

Group 1 Before Troubleshooting 4-1
Group 2 Hydraulic and Mechanical System 4-4
Group 3 Electrical System 4-24

SECTION 5 MAINTENANCE STANDARD

Group 1 Operational Performance Test 5-1
Group 2 Major Components 5-21
Group 3 Track and Work Equipment 5-30

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

SECTION 6 DISASSEMBLY AND ASSEMBLY


Group 1 Precaution 6-1
Group 2 Tightening Torque 6-4
Group 3 Main Control Valve 6-6
Group 4 Swing Device 6-20
Group 5 Travel Device 6-41
Group 6 RCV Lever 6-67
Group 7 Turning Joint 6-81
Group 8 Boom, Arm and Bucket Cylinder 6-86
Group 9 Undercarriage 6-104
Group 10 Work Equipment 6-116

ERROR CODES TABLE 6-120

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

2. SPECIFICATIONS

1) 3.0 m (9'10") mono boom, 1.6 m (5'3") arm

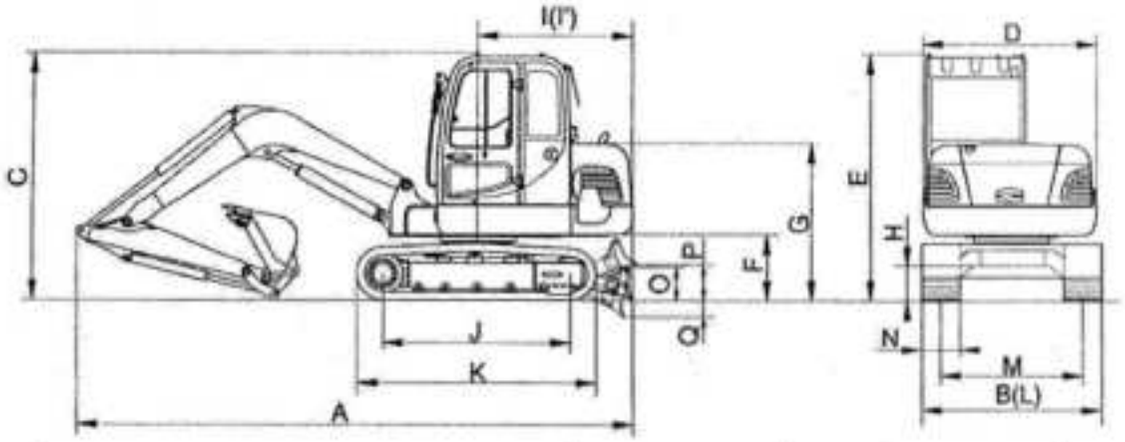

Description		Unit	Specification
Operating weight		kg	5,720
Bucket capacity (SAE heaped), standard		m^3	0.21
Overall length	A	mm	5,900
Overall width (400 mm track)	B		1,920
Overall height	C		2,500
Superstructure width	D		1,830
Overall height of cab	E		2,550
Ground clearance of counterweight	F		690
Engine cover height	G		1,650
Minimum ground clearance	H		380
Rear-end distance	I		1,640
Rear-end swing radius	I'		1,650
Distance between tumblers	J		1,990
Undercarriage length	K		2,530
Undercarriage width	L		1,900
Track gauge	M		1,500
Track shoe width, standard	N		400
Height of blade	O		350
Ground clearance of blade up	P		420
Depth of blade down	Q		540
Travel speed (low/high)		km/h	2.38/4.13
Swing speed		rpm	10.88
Gradeability		Degree (%)	35
Ground pressure (400 mm shoe)		kgf/cm^2	0.32


MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

SECTION 3 HYDRAULIC AND ELECTRICAL SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Monitoring system 3-2
Group 3 Electrical Circuit 3-22

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

2) BOOM, ARM OR BUCKET SPEED IS LOW

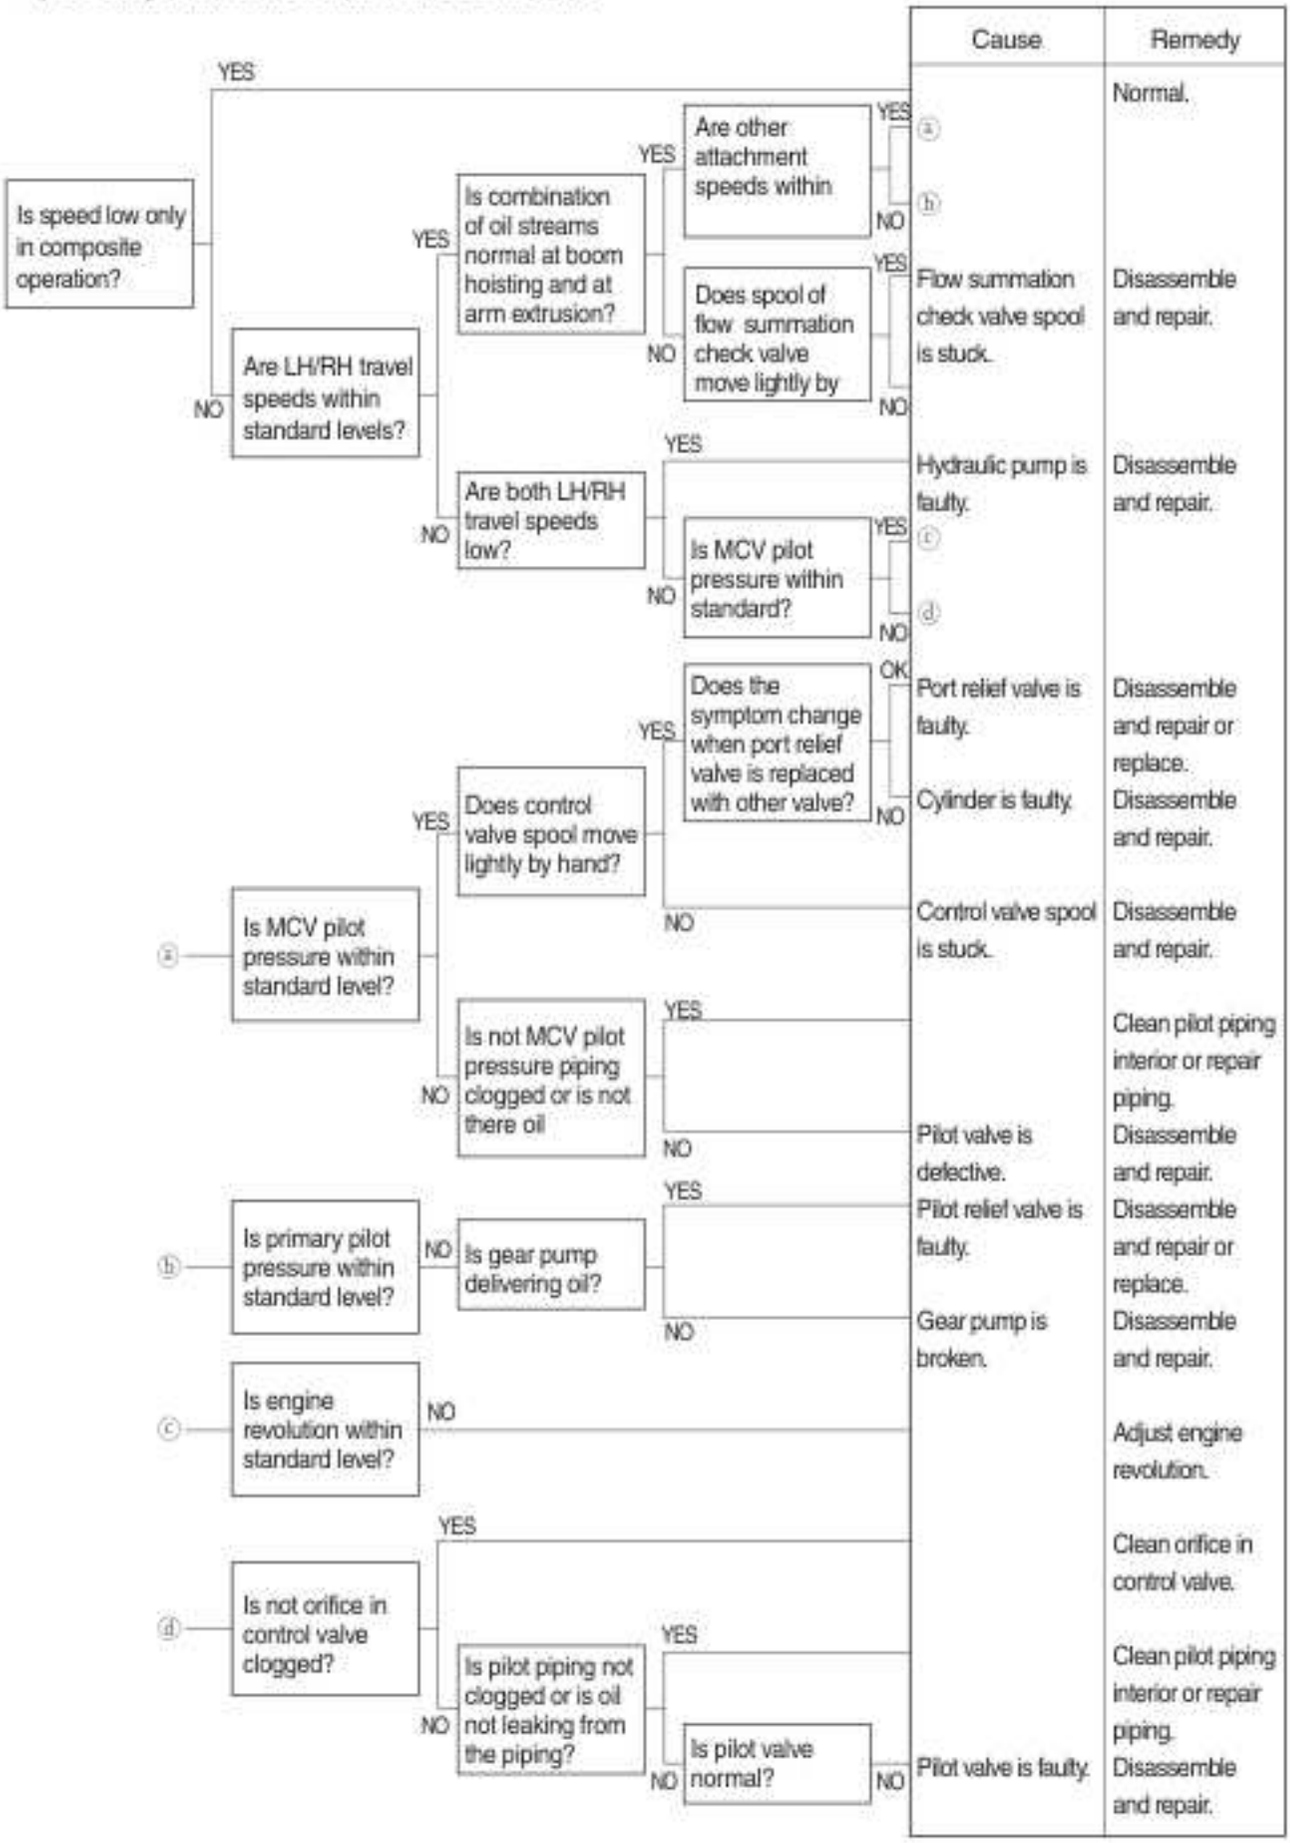


MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

12) Place the piston-shoe assemblies into the shoe holder.



13) Place 3 pins,barrel holder and 9 piston-shoe assembliesin that order into the cylinder barrel.

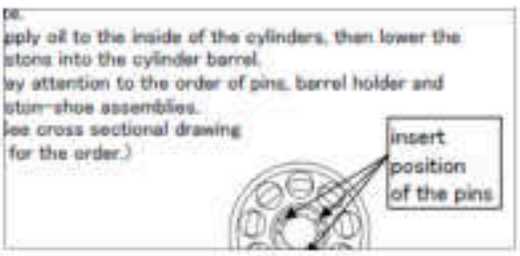



7078TM04/04A

※ Apply oil to the inside of the cylinders, then lower the pistons into the cylinder barrel.

※ Pay attention to the order of pins, barrel holder and piston-shoe assemblies. (See cross sectional drawing for the order.)



7078TM05/05A

14) Inset the cylinder barrel assembly into the body 2 so that the shoes contact the swash plate.

※ Pay attention not to lose the each part.



7078TM06

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

8) Remove the 3 snap rings, 1 thrust plate 2, 3 b2 gears, 69 needles, 3 rings and 3 thrust washers.


※ Pay attention not to lose the each part.







MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

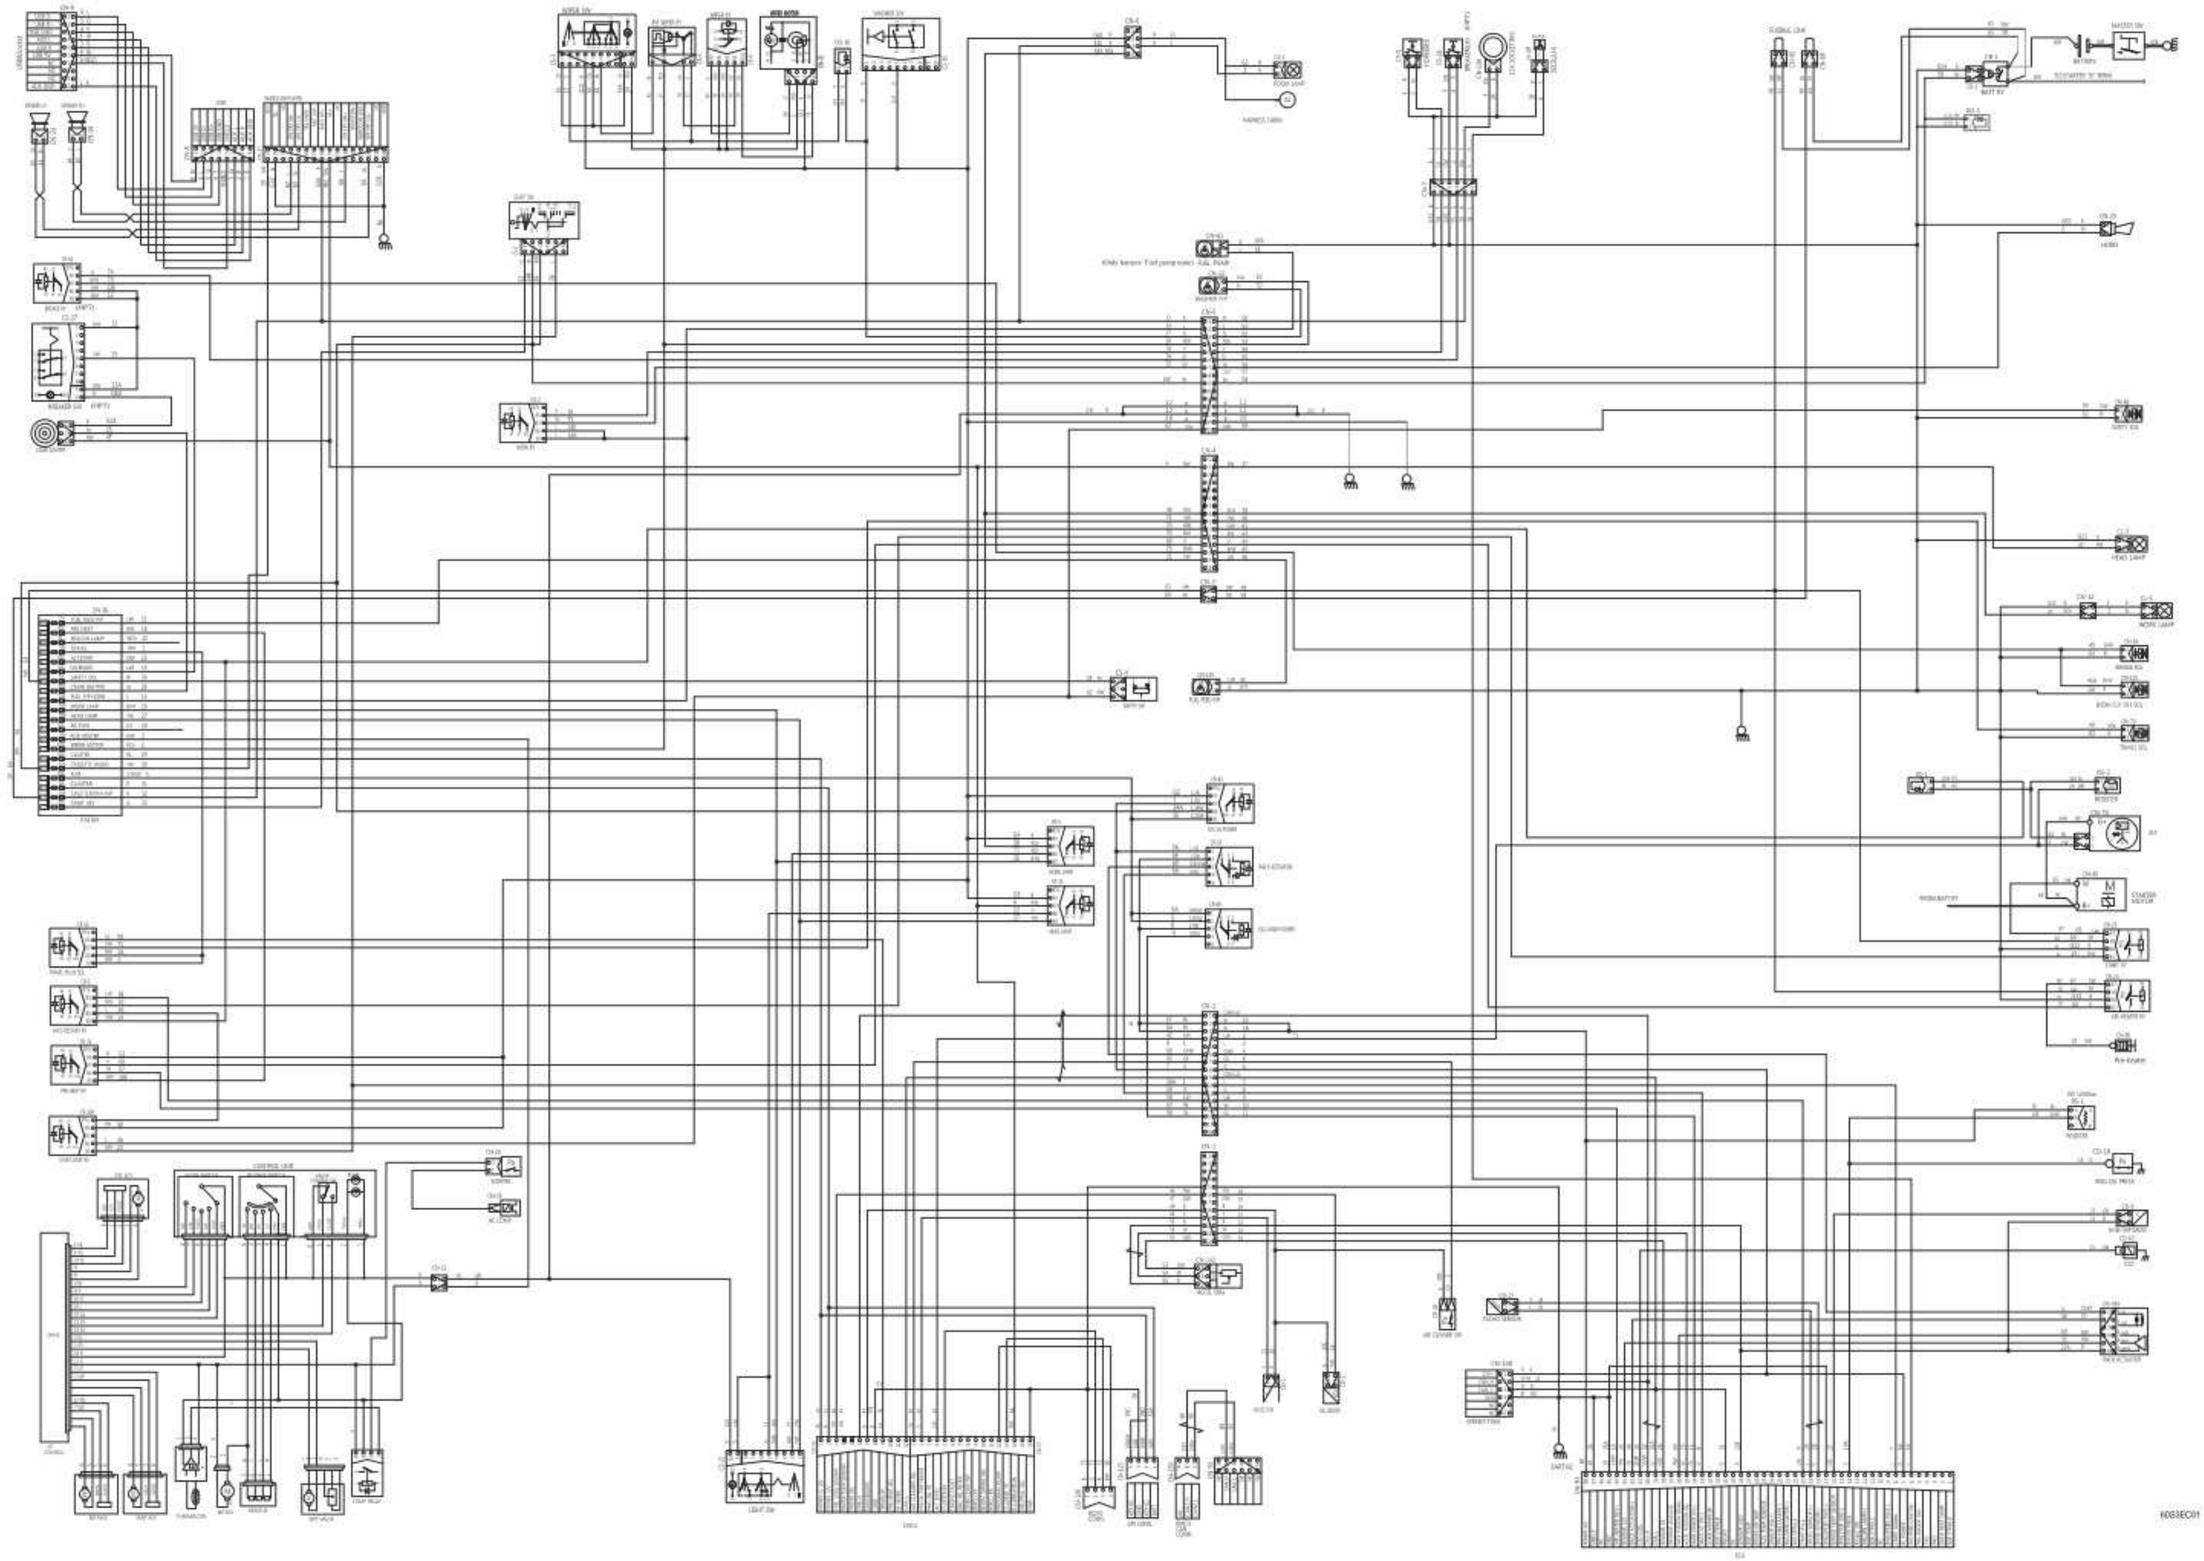

MidWestTech | Hyundai HX60S (China) Crawler Excavator Service Manual | Publication HX60S (China)

Order the manual at mid-west-tech.com >