KOBELCO

PARTS CATALOG

HYDRAULIC EXCAVATOR

SK330LC

Revision Date: 04/2000

Applicable:SK330LC YC06U0101~

LC91Z00002D4-01

MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00002D4-01

Order the manual at mid-west-tech.com >

CONTENTS


NAME OF EQUIPMENT ----------PAGE

LOCATION

SUPERSTRUCTURE




FRAME ASSY UPPER---------- 010-01

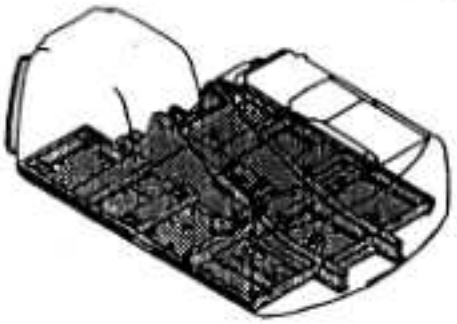


GENERAL MAINTENANCE ITEMS



FILTER LIST ---------- 004-01
SERVICE COMPONENTS-------- 005-01

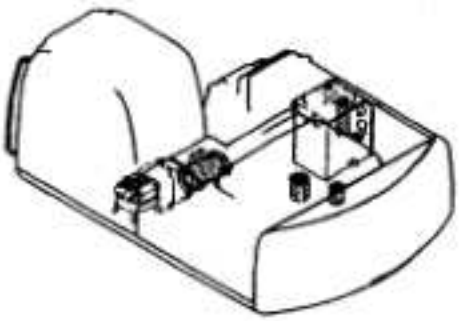

COUNTERWEIGHT ASSY --------- 015-01

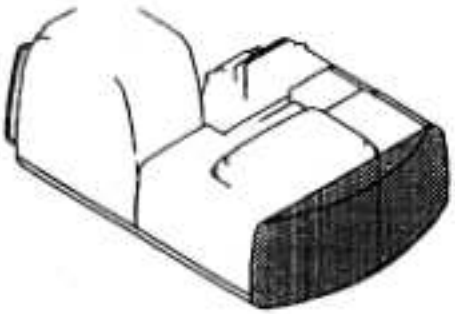


ENGINE ASSY ---------- 024-01
ENGINE INSTAL ---------- 029-01




MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

CONTENTS


RADIATOR INSTAL ---------- 033-01
RADIATOR ASSY ---------- 038-01

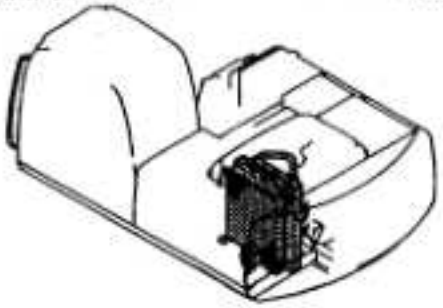


TANK ASSY, FUEL ---------- 056-01

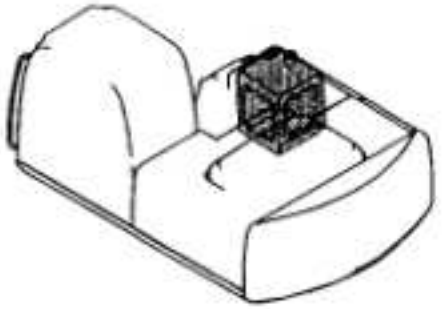

CLEANER ASSY, AIR ---------- 042-01

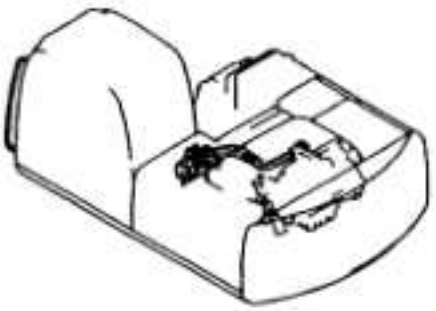


TANK ASSY, HYD ---------- 061-01

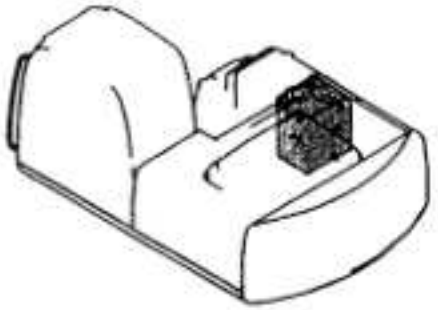


MUFFLER ASSY ---------- 047-01



CONTROL ASSY, ENGINE ---------- 063-01

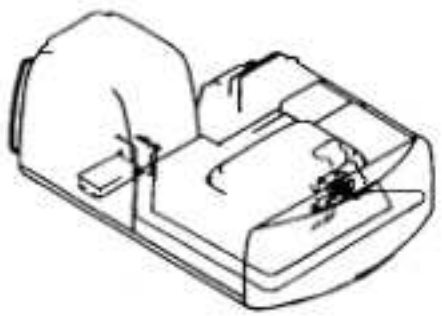

FUEL LINES ---------- 051-01
FILTER ASSLY ---------- 053-01

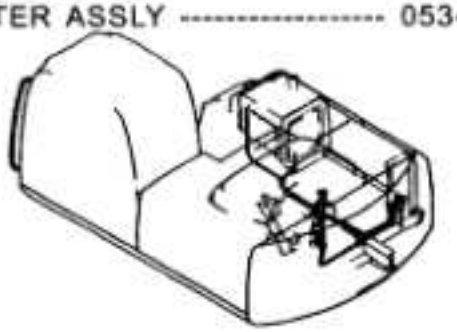


POWER TAKE OFF ASSY ---------- 066-01




MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

CONTENTS


MOTOR INSTAL, SWING ---------- 070-01
REDUCTION ASSY, SWING ---------- 071-01

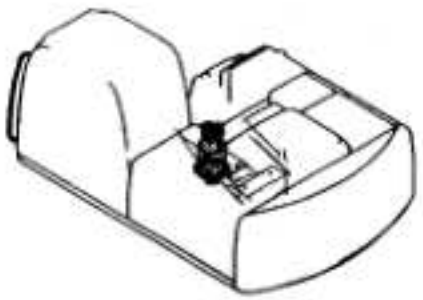


VALVE INSTAL ---------- 079-01

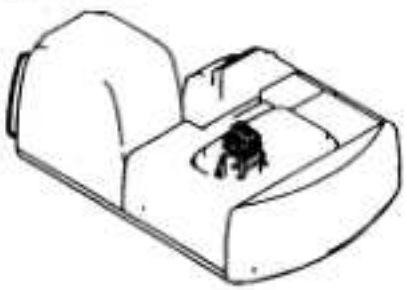


HYD LINES,UPP ---------- 082-01
(SUCTION DELIVERY)

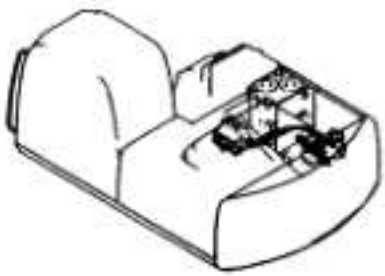


HYD LINES,UPPER (MAIN)---------- 087-01
HYD LINES,UPPER N&B---------- 087-60

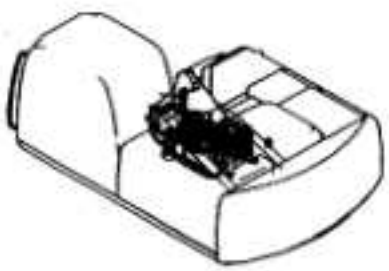


HYD LINES,UPP ---------- 097-01
(RETURN)

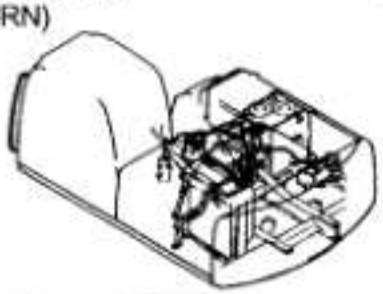


CONTROLS, OPERATOR'S ---------- 102-01
CONTROL BOX ASSY ---------- 104-01
LEVER ASSY, PROPEL ---------- 108-01

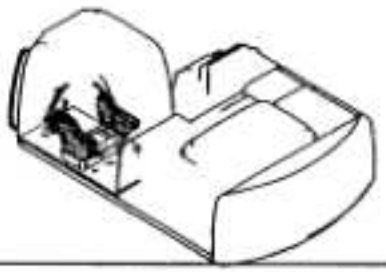

R. CTRL LINES (STD) ---------- 114-01
R. CTRL LINES (N&B) ---------- 114-60
R. CTRL LINES (BKR) ----------114-63
R. CTRL LINES (B&A SFTY) ----------115-01
R. CTRL LINES (B&A SFTY) ----------115-60
(N&B)
R. CTRL LINES (B&A SFTY) ----------115-63
(BKR)

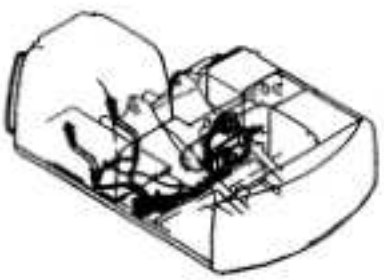


R. CTRL LINES ---------- 120-01
R. CTRL LINES (B&A)(N&B/BKR) ---- 121-01

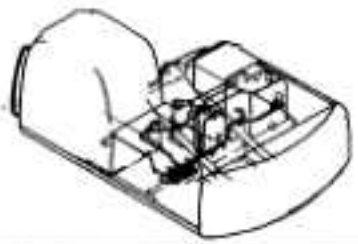


MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

AIR DRYER ASSEMBLY

YC06U0101~

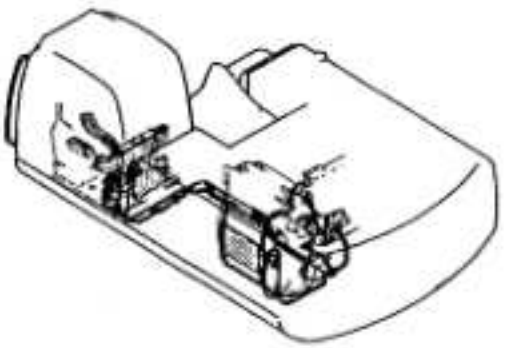

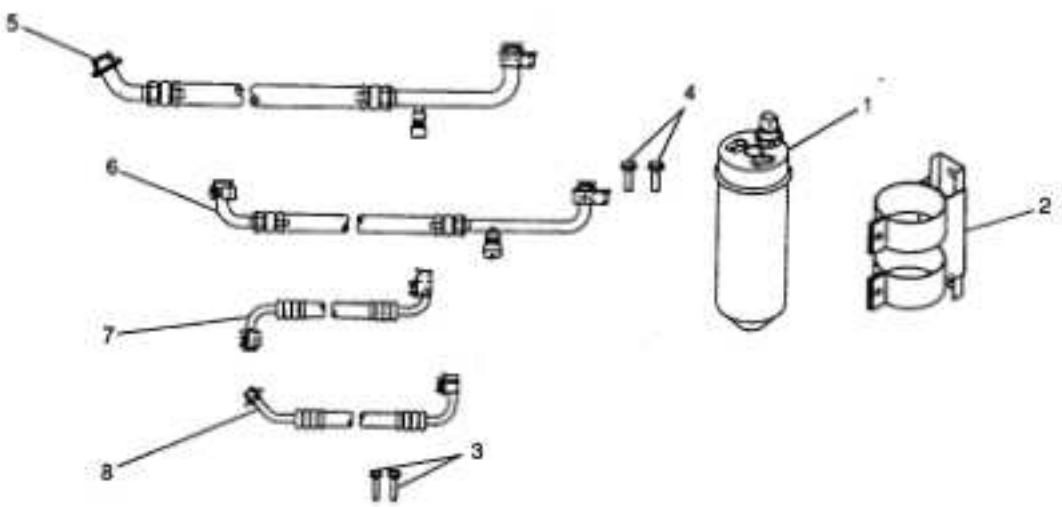

ITEM	PART NUMBER	DESCRIPTION	QTY
	LC96V00001F1	DRIER ASSEMBLY, AIR	
1	YT54S00002P1	RECEIVER	1
2	YN20M01069P1	BRACKET	1
3	YT96V00001S010	CAPSCREW (RECEIVER)	2
4	YT96V00001S009	CAPSCREW (COMPRESSOR)	2
5	LC20M01035F1	HOSE ASSY (S)	1
6	LC20M01039F1	HOSE ASSY (D)	1
7	LC20M01037F1	HOSE ASSY (L)	1
8	LC20M01038F1	HOSE ASSY (L)	1

MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

BOOM HYDRAULIC LINES 6.5M (21FT 4in)

YC06U0101-

(BOOM SAFETY) (OPT)
(NIBBLER & BREAKER)

ITEM	PART NUMBER	DESCRIPTION	QTY	
		HYD LINES, BOOM 6.5M (BOOM SAFETY) (N&B)		
01	LC01V00001F1	CYLINDER ASSY, RH BOOM	1	See CPM
02	LC01V00002F1	CYLINDER ASSY, LH BOOM	1	See CPM
03	LC01V00005F1	CYLINDER ASSY, ARM	1	See CPM
	LC42H00013F2	HYD LINES, BOOM (N&B)		
A1	LC42H01056P1	TUBE	1	
A2	LC42H01057P1	TUBE	1	
A3	LC42H01058P1	TUBE	1	
A4	LC42H01059P1	TUBE	1	
A5	LC42H01060P2	TUBE	1	
A6	LC42H01061P2	TUBE	1	
A7	ZX20H16145	HOSE	2	
A8	HG23T16016G1	CONNECTOR (L=110mm, 1 7/16-12UN)	2	
A9	2432T5924	CLAMP	2	
A11	LC42H01103P1	CLAMP	8	
A12	LC42H01021P1	CLAMP	2	
A13	LC42H01026P1	BUSHING	12	
A14	ZD12A02100	O-RING	12	
A15	ZS18C12055	CAPSCREW	8	
A16	ZS18C10030	CAPSCREW	8	
A17	ZW16H12000	WASHER	8	
A18	ZW16H10000	WASHER	8	
	LC42H00028F1	HYD LINES, BOOM CYLINDER (BOOM SAFETY)		
B1	LC28V00002F1	VALVE, HOLDING (~3/29/00)	1	See CPM
	LC28V00002F2	VALVE, HOLDING (3/29/00~)	1	See CPM
B2	LC28V00001F1	VALVE, HOLDING (~3/29/00)	1	See CPM
	LC28V00001F2	VALVE, HOLDING (3/29/00~)	1	See CPM
B3	LC42H01099P1	TUBE	1	
B4	LC42H01100P1	TUBE	1	
B5	ZX20U16086	HOSE (L=860mm)	4	
B6	2444Z4607	ELBOW (PF 3/8; M22X1.5)	2	
B7	ZE13X16000	CLAMP, HALF	8	
B8	2432T5986	CLAMP	4	
B9	ZS28C12040	CAPSCREW	24	
B10	ZS28C12065	CAPSCREW	8	
B11	ZS18C14085	CAPSCREW	2	
B13	ZW26K12000	LOCK WASHER	32	
B14	ZW16H14000	WASHER	2	
B15	ZH22Z04000	CONNECTOR (PF 1/4 x PT 1/4)	2	
B16	ZG91S02000	FITTING, GREASE	2	
B17	ZD12P03400	O-RING	6	
B18	ZD12A02100	O-RING	2	
B19	ZX20H10125	HOSE (L=1250mm)	1	
B20	HG33H16016G1	ELBOW (PF 1; 1 7/16-12UN)	2	
B21	ZA23F15006	CONNECTOR (PF 3/8; M22X1.5)	2	
B22	ZG23F10008	CONNECTOR (PF 1/2; 1-14 UNS)	1	
B23	LC42H01117P1	TUBE	2	

ITEM	PART NUMBER	DESCRIPTION	QTY
B24	LC42H01109P1	TUBE	1
B25	LC42H01110P1	TUBE	1
B26	LC42H01111P1	TUBE	1
B27	LC42H01112P1	TUBE	1
B28	ZC26X15009	CLAMP	4
B29	ZS18C08040	CAPSCREW	4
B30	ZW16H08000	WASHER	4
B31	2444R1133D8	HOSE (L=950mm)	4
B32	LC42H01035P1	BLOCK, TAPPED	2
B33	PY01P01043D0	CLIP	16
B34	ZD12G03500	O-RING	2
B35	YN42H01602P1	TEE (PF 1/4 X PF 1/2 X 1-14UNS)	1
B36	ZD12A01600	O-RING	2
B37	ZE72X04000	PLUG (PF 1/4)	1
B38	2444Z3713	CONNECTOR (PF 1/2)	1
	LC42H00015F1	HYD LINES, ARM CYLINDER	
C1	LC42H01064P1	TUBE	1
C2	LQ02B01017D8	HOSE (L=1130mm)	1
C3	YN02B01030D2	HOSE (L=1170mm)	1
C4	LS43H01005P1	CLAMP	2
C5	LC42H01020P1	BUSHING	1
C6	ZH22Z04000	CONNECTOR	1
C7	ZE13X16000	CLAMP, HALF	2
C8	ZS18C10030	CAPSCREW	2
C9	ZS28C12040	CAPSCREW	8
C10	ZW16H10000	WASHER	2
C11	ZW26K12000	LOCK WASHER	8
C12	ZD12P03400	O-RING	2
C13	ZD12A02100	O-RING	1
C14	ZG91V02000	FITTING, GREASE	1
	LC42H00014F1	HYD LINES, BOOM (N&B)	
D3	LC42H01062P1	TUBE	1
D4	LC42H01063P1	TUBE	1
D5	2444R1166D7	HOSE (L=1400mm)	2
D6	LC42H01041D1	HOSE (L=1300mm)	2
D7	ZE72X16000	PLUG	4
D8	LS42H01018P1	CLAMP	4
D9	LS42H01019P1	CLAMP	8
D11	2432T6076	CLAMP	8
D12	LC42H01020P1	BUSHING	4
D13	LC43H01013P1	BUSHING	6
D14	ZD12P03800	O-RING	6
D15	ZS18C12065	CAPSCREW	16
D16	ZS18C10030	CAPSCREW	12
D17	ZW16H12000	WASHER	16
D18	ZW16H10000	WASHER	12
D19	ZE13X20001	CLAMP, HALF	12
D20	ZS28C14050	CAPSCREW	24
D21	ZW26K14000	LOCK WASHER	24
D22	LC42H01123P1	TUBE	1
D23	LC42H01124P1	TUBE	1

MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

LONG ARM HYDRAULIC LINES 4.15M (13ft 7in) YC06U0101~
(BREAKER)

ITEM	PART NUMBER	DESCRIPTION	QTY	
		HYDRAULIC LINES, ARM 4.15M (BREAKER)		
0	LC01V00006F1	CYLINDER ASSY, BUCKET	1	See CPM
	LC12B00027F1	CYLINDER INSTAL		
A1	LC12B01045P1	PIN	1	
A2	HS18C20165G1	CAPSCREW	1	
A3	ZN18C20016	NUT	2	
A4	B16T0442D40	SHIM, ID=92XI0.9	1	
A5	B16T0442D13	SHIM, ID=92XI1.2	1	
A6	B16T0442D14	SHIM, ID=92XI1.6	1	
A7	B16T0442D15	SHIM, ID=92XI2.3	1	
	LC43H00006F1	HYD LINES, CYLINDER		
B1	LC43H01001P1	TUBE	1	
B2	LC43H01016P1	TUBE	1	
B3	LS43H01005P1	CLAMP	4	
B4	LC42H01020P1	BUSHING	2	
B5	ZG91V02000	FITTING, GREASE	1	
B6	ZS28C12040	CAPSCREW	8	
B7	ZS18C10025	CAPSCREW	4	
B8	ZW26K12000	LOCK WASHER	8	
B9	ZW16H10000	WASHER	4	
B10	ZD12P03400	O-RING	2	
B11	ZG91S04000	NIPPLE, GREASE	1	
	LC43H00008F1	HYD LINES, ARM		
C1	ZX50H16150	HOSE	2	
C2	2444R1153D16	HOSE (L=860mm)	2	
C3	2418P31105	TUBE	2	
C4	ZC26X35016	CLAMP	4	
C5	ZE13X16000	CLAMP, HALF	8	
C6	ZS18C14070	CAPSCREW	4	
C7	ZS28C12045	CAPSCREW	16	
C8	ZW26X14000	LOCK WASHER	4	
C9	ZW26K12000	LOCK WASHER	16	
C10	ZD12P03400	O-RING	4	
C11	ZD12A02100	O-RING	2	

ITEM	PART NUMBER	DESCRIPTION	QTY
	LC43H00018F1	HYD LINES, ARM (BREAKER)	
D1	LC43H01032P2	TUBE	1
D2	LC43H01033P2	TUBE	1
D3	LC43H01047P1	TUBE	2
D4	LC43H01011D3	HOSE	2
D5	LC43H01011D4	HOSE	2
D6	24100P3133F1	VALVE, STOP	2
D6-1	2436P317	BODY, VALVE	1
D6-2	2436T311	VALVE	1
D6-3	ZR16X04000	RETAINING RING-	1
D6-4	ZS23C06010	CAPSCREW	1
D6-5	ZD12G03500	O-RING	1
D6-6	ZD65G03500	RING, BACK-UP	1
D6-7	ZD12G04000	O-RING	1
D6-8	ZD75G04000	RING, BACK-UP	1
D6-9	2418T8945D1	SPACER	1
D6-10	ZD11G04000	O-RING	2
D7	LC43H01019P1	CONNECTOR	2
D8	ZE13X20001	CLAMP, HALF	20
D9	YN43H01150P1	BRACKET	2
D10	LS42H01018P1	CLAMP	16
D11	LC43H01013P1	BUSHING	8
D12	ZD12P03800	O-RING	12
D13	ZS18C08025	CAPSCREW	8
D14	ZS18C10025	CAPSCREW	4
D15	ZS18C10030	CAPSCREW	12
D16	ZS18C12045	CAPSCREW	4
D17	ZS28C14050	CAPSCREW	32
D18	ZS28C14070	CAPSCREW	8
D19	ZW26X12000	LOCKWASHER	4
D20	ZW26K14000	LOCK WASHER	40
D12	ZW16H10000	WASHER	16
D22	YN43H01151P1	WASHER	8
D23	YN43H01163P1	WASHER	4
D24	ZN18C14011	NUT	8
	YN43H00004F1	CONNECTOR ASSY	
E1	2444P1744D3	CONNECTOR	2
E2	2444T2406	PLUG	2
E3	ZD12P03800	O-RING	2

MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00... Order the manual at mid-west-tech.com >

CONTROLER GROUP

WIRE NO	WIRE COLOR	WIRE SIZE	FROM	CONNECTION	TO	FUNCTION
1A	RY	AVSS0.75sq	CN-5F		CN-9M	MECHATRO CONTROLLER — FUSE BOX
1B	RY	AVSS0.75sq	CN-27F		CN-9M	15PAF-J/B — FUSE BOX
1C	RY	AVSS0.75sq	CN-27F		CN-5F	15PAF-J/B — MECHATRO CONTROLLER
1D	RY	AVSS0.75sq	CN-27F		CN-18F	15PAF-J/B — RESISTOR
2A	WY	AVSS0.75sq	CN-26F		CN-9M	15PAF-J/B — FUSE BOX
2B	WY	AVSS0.75sq	CN-26F		CN-18F	15PAF-J/B — WORK LIGHT RELAY
2C	WY	AVSS0.75sq	CN-26F		CN-17F	15PAF-J/B — TRAVEL ALARM RELAY
2D	WY	AVSS0.75sq	CN-26F		CN-29F	15PAF-J/B — WIPER RELAY ASSY
3	YL	AVSS0.75sq	CN-9M		CN-36M	FUSE BOX — CIGARETTE LIGHTER
4	GL	AVSS0.75sq	CN-9M		CN-39F	FUSE BOX — DC-DC CONVERTER
5A	WG	AVSS0.75sq	CN-9M		CN-27F	FUSE BOX — 15PAF-J/B
5B	WG	AVSS0.75sq	CN-15F		CN-27F	HORN RELAY — 15PAF-J/B
5C	WG	AVSS0.75sq	CN-15F		CN-27F	HORN RELAY — 15PAF-J/B
7A	YG	AVSS0.75sq	CN-9M		CN-26F	FUSE BOX — 15PAF-J/B
7B	YG	AVSS0.75sq	CN-5F		CN-26F	MECHATRO CONTROLLER — 15PAF-J/B
7C	YG	AVSS0.75sq	CN-39F		CN-26F	HOUR METER — 15PAF-J/B
9A	YB	AVSS0.75sq	CN-9M		CN-26F	FUSE BOX — 15PAF-J/B
9B	YB	AVSS0.75sq	CN-36M		CN-26F	ENG. ROOM LIGHT — 15PAF-J/B
9C	YB	AVSS0.75sq	CN-54F		CN-26F	ROOM LIGHT — 15PAF-J/B
9D	YB	AVSS0.75sq	CN-39F		CN-26F	DC-DC CONVERTER — 15PAF-J/B
10	WY	AVSS1.25sq	CN-8F		CN-36M	FUSE BOX — KEY SW.
11	YR	AVSS0.75sq	CN-8F		CN-36M	FUSE BOX — TIMER AMP'R
12A	RG	AVSS1.25sq	CN-9M		CN-26F	FUSE BOX — 15PAF-J/B
12B	RG	AVSS0.75sq	CN-17F		CN-26F	TRAVEL ALARM RELAY — 15PAF-J/B
12C	RG	AVSS0.75sq	CN-41F		CN-26F	DRIVE FLASHER & WORKING LIGHT (R) — 15PAF-J/B
13	W	AVSS0.75sq	CN-9M		CN-36M	FUSE BOX — CLUSTER GAUGE
14	RB	AVSS1.25sq	CN-9M		CN-29F	FUSE BOX — WIPER RELAY ASSY
15A	WB	AVSS0.75sq	CN-9M		CN-27F	FUSE BOX — 15PAF-J/B
15B	WB	AVSS0.75sq	CN-13F		CN-27F	RESISTOR — 15PAF-J/B
15C	WB	AVSS0.75sq	CN-32M		CN-27F	LEVER LOCK SW. — 15PAF-J/B
16	RW	AVSS1.25sq	CN-9M		CN-18F	FUSE BOX — WORK LIGHT RELAY
17A	WL	AVSS1.25sq	CN-9M		CN-27F	FUSE BOX — 15PAF-J/B
17B	WL	AVSS0.75sq	CN-49F		CN-27F	OPT. WORK LIGHT RELAY — 15PAF-J/B
17C	WL	AVSS0.75sq	CN-49F		CN-27F	OPT. WORK LIGHT RELAY — 15PAF-J/B
18	WG	AVSS1.25sq	CN-9M		CN-36M	FUSE BOX — AIR CONDITIONER AMP.
19	RL	AVSS0.75sq	CN-9M		CN-36M	FUSE BOX — AIR CON. AMP.
20	WB	AVSS1.25sq	CN-9M		CN-43F	FUSE BOX — RESERVE
50	G	AVSS0.75sq	CN-12F		CN-30F	SAFETY RELAY — ALTERNATOR
50	L	AVSS1.25sq	CN-8F		CN-36M	FUSE BOX — KEY SW.
51	W	AVS2sq	CN-8F		CN-30F	FUSE BOX — HEATER RELAY
52	R	AVS5sq	CN-8F		CN-33M	FUSE BOX — BATTERY RELAY
53	Y	AVS5sq	CN-8F		CN-33M	FUSE BOX — BATTERY RELAY
58A	P	AVSS0.75sq	CN-36M		CN-26F	KEY SW. — 15PAF-J/B
58B	P	AVSS0.75sq	CN-40F		CN-26F	DIODE — 15PAF-J/B
58C	P	AVSS0.75sq	CN-30F		CN-26F	GLOW RELAY — 15PAF-J/B
59A	W	AVSS0.75sq	CN-30F		CN-27F	BATTERY RELAY — 15PAF-J/B
59B	W	AVSS0.75sq	CN-46F		CN-27F	DIODE — 15PAF-J/B
59C	W	AVSS0.75sq	CN-12F		CN-27F	SAFETY RELAY — 15PAF-J/B
60A	WL	AVSS0.75sq	CN-45F		CN-26F	DIODE — 15PAF-J/B
60B	WL	AVSS0.75sq	CN-36M		CN-26F	KEY SW. — 15PAF-J/B
60C	WL	AVSS0.75sq	CN-40F		CN-26F	DIODE — 15PAF-J/B
60D	WL	AVSS0.75sq	CN-2F		CN-26F	MECHATRO CONTROLLER — 15PAF-J/B
61A	GrB	AVSS0.75sq	CN-36M		CN-26F	KEY SW. — 15PAF-J/B
61B	GrB	AVSS0.75sq	CN-40F		CN-26F	DIODE — 15PAF-J/B
61C	GrB	AVSS0.75sq	CN-40F		CN-26F	DIODE — 15PAF-J/B
61D	GrB	AVSS0.75sq	CN-2F		CN-26F	MECHATRO CONTROLLER — 15PAF-J/B
63	WY	AVSS0.75sq	CN-36M		CN-30F	KEY SW. — STARTER RELAY
64	LW	AVSS0.75sq	CN-12F		CN-30F	SAFETY RELAY — STARTER RELAY
65A	WR	AVSS0.75sq	CN-30F		CN-26F	ALTERNATOR — 15PAF-J/B
65B	WR	AVSS0.75sq	CN-2F		CN-26F	MECHATRO CONTROLLER — 15PAF-J/B
65C	WR	AVSS0.75sq	CN-36M		CN-26F	HOUR METER — 15PAF-J/B
65D	WR	AVSS0.75sq	CN-12F		CN-26F	SAFETY RELAY — 15PAF-J/B
80	GrR	AVSS0.75sq	CN-36M		CN-29F	WIPER MOTOR — WIPER RELAY ASSY
81	GrB	AVSS0.75sq	CN-36M		CN-29F	WIPER MOTOR — WIPER RELAY ASSY
82	GO	AVSS0.75sq	CN-30F		CN-29F	WASHER MOTOR — WIPER RELAY ASSY
83	GO	AVSS0.75sq	CN-15F		CN-30F	HORN RELAY — HORN
84A	WR	AVSS0.75sq	CN-15F		CN-27F	HORN RELAY — 15PAF-J/B
84B	WR	AVSS0.75sq	CN-32M		CN-27F	HORN SW. — 15PAF-J/B
84C	WR	AVSS0.75sq	CN-36M		CN-27F	HORN SW. — 15PAF-J/B
85A	WB	AVSS1.25sq	CN-18F		CN-26F	WORK LIGHT RELAY — 15PAF-J/B
85B	WB	AVSS1.25sq	CN-30F		CN-26F	ROOM WORKING LIGHT — 15PAF-J/B
85C	WB	AVSS0.75sq	CN-31M		CN-26F	SW ASSY INSIDE BUZZER STOP) — 15PAF-J/B
85D	WB	AVSS0.75sq	CN-36M		CN-26F	AIR CONDITIONER AMP. — 15PAF-J/B
85E	WB	AVSS0.75sq	CN-36M		CN-26F	SW ASSY (WIPER, WASHER, LIGHT) — 15PAF-J/B
86	OW	AVSS0.75sq	CN-32M		CN-30F	TIMER — OPERATING LEVER (DEA SOL)
87	YV	AVSS0.75sq	CN-32M		CN-7F	LEVER LOCK SW. — MECHATRO CONTROLLER
88	PG	AVSS0.75sq	CN-17F		CN-30F	TRAVEL ALARM RELAY — TRAVEL ALARM
89	BrL	AVSS0.75sq	CN-32M		CN-49F	OPT. WORK LIGHT SW. — OPT. WORK LIGHT RELAY
90A	RY	AVSS1.25sq	CN-49F		CN-26F	OPT. WORK LIGHT RELAY — 15PAF-J/B
90B	RY	AVSS1.25sq	F-1		CN-26F	CAB WORKING LIGHT — 15PAF-J/B
90C	RY	AVSS1.25sq	F-3		CN-26F	CAB WORKING LIGHT — 15PAF-J/B
95	WG	AVSS0.75sq	CN-36M		CN-39F	TUNER AMP'R — DC-DC CONVERTER
97	YV	AVSS0.75sq	CN-36M		CN-39F	TUNER AMP'R — DC-DC CONVERTER
98	LW	AVSS0.75sq	CN-36M		CN-25F	TUNER AMP'R — SPEAKER LEFT
99	Br	AVSS0.75sq	CN-36M		CN-25F	TUNER AMP'R — SPEAKER LEFT
100	LR	AVSS0.75sq	CN-36M		CN-24F	TUNER AMP'R — SPEAKER RIGHT
101	OB	AVSS0.75sq	CN-36M		CN-24F	TUNER AMP'R — SPEAKER RIGHT
150	BP	AVSS0.75sq	CN-36M		CN-30F	AIR CONDITIONER UNIT — RECEIVER DRIER
151	B	MVVS0.75sq	CN-36M		CN-33M	AIR CONDITIONER UNIT — AIR CONDITIONER SW.
152	G		CN-36M		CN-32M	AIR CONDITIONER UNIT — AIR CONDITIONER SW.
153	W		CN-36M		CN-32M	AIR CONDITIONER UNIT — AIR CONDITIONER SW.
154	B		CN-36M		CN-32M	AIR CONDITIONER UNIT — AIR CONDITIONER SW.
SH4	Gr		CN-36M		CN-32M	SHIELD
401	GR	AVSS0.75sq	CN-40F		CN-41F	DRIVE FLASHER & REAR WORKING LIGHT — FLASHER RELAY
402	YG	AVSS0.75sq	CN-40F		CN-41F	DRIVE FLASHER & REAR WORKING LIGHT — FLASHER RELAY
403	Br	AVSS0.75sq	CN-40F		CN-41F	DRIVE FLASHER & REAR WORKING LIGHT — FLASHER RELAY
500	LeR	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (BOOM RAISING)
501	LeW	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (BUCKET DUMP)
502	LeY	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (BOOM ROD IN)
503	LO	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (BOOM LOWERING)
504	PG	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (ARM IN)
505	PL	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (ARM OUT)
506	VY	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (SWING RIGHT)
507	VG	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (SWING LEFT)
508	VY	AVSS0.75sq	CN-1F		CN-31M	MECHATRO CONTROLLER — PRESS. SENSOR (TRAVEL RIGHT)
509	Sb	AVSS0.75sq	CN-1F		CN-31M	MECHATRO CONTROLLER — PRESS. SENSOR (TRAVEL LEFT)
510	Gr	AVSS0.75sq	CN-2F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (P1 MEGA-CON)
511	LY	AVSS0.75sq	CN-2F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (P2 MEGA-CON)
512	Sb	AVSS0.75sq	CN-3F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (BACK PRESS.)
513	LeR	AVSS0.75sq	CN-3F		CN-31M	MECHATRO CONTROLLER — PRESS. SENSOR (P1 OPT.)
514	GO	AVSS0.75sq	CN-3F		CN-31M	MECHATRO CONTROLLER — PRESS. SENSOR (P2 OPT.)
515	V	AVSS0.75sq	CN-2F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (PUMP P1)
516	L	AVSS0.75sq	CN-2F		CN-30F	MECHATRO CONTROLLER — PRESS. SENSOR (PUMP P2)
517	P	AVSS0.75sq	CN-1F		CN-36M	MECHATRO CONTROLLER — ACCEL POTENTIO
520	LO	AVSS0.75sq	CN-2F		CN-31M	MECHATRO CONTROLLER — & MAINTENANCE CONNECTOR
540	LG	AVSS0.75sq	CN-3F		CN-44F	MECHATRO CONTROLLER — INDEPENDENT TRAVEL SW.
541	PL	AVSS0.75sq	CN-2F		CN-44F	MECHATRO CONTROLLER — TWO-SPEED ROTARY SW.
542A	GrG	AVSS0.75sq	CN-4F		CN-27F	MECHATRO CONTROLLER — 15PAF-J/B
542B	GrG	AVSS0.75sq	CN-32M		CN-27F	POWER BOOST SW. — 15PAF-J/B
542C	GrG	AVSS0.75sq	CN-36M		CN-27F	POWER BOOST SW. — 15PAF-J/B
543	GO	AVSS0.75sq	CN-7F		CN-44F	MECHATRO CONTROLLER — HEAVY LIFT SW.
544	GB	AVSS0.75sq	CN-1F		CN-30F	MECHATRO CONTROLLER — STOPPING MOTOR
545	Le	AVSS0.75sq	CN-2F		CN-10F	MECHATRO CONTROLLER — SWING PARKING RELEASE SW.
546A	PG	AVSS0.75sq	CN-2F		CN-26F	RELEASE CONTROLLER — 15PAF-J/B
546B	PG	AVSS0.75sq	CN-11F		CN-26F	KPSS RELEASE SW. — 15PAF-J/B
546C	PG	AVSS0.75sq	CN-11F		CN-26F	KPSS RELEASE SW. — 15PAF-J/B
546D	PG	AVSS0.75sq	CN-13F		CN-26F	RESISTOR — 15PAF-J/B
547	GB	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — ENG. WATER TEMP SW.
548	GY	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — ENG. OIL PRESS. SW.
549	Le	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — AIR FILTER RESTRICTION SW.
550	BG	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — ENG. OIL LEVEL SW.
551	GL	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — ENG. COOLANT LEVEL SW.
552	BrL	AVSS0.75sq	CN-4F		CN-30F	MECHATRO CONTROLLER — HYD. FLUID LEVEL SW.
553A	VW	AVSS0.75sq	CN-36F		CN-27F	MECHATRO CONTROLLER — 15PAF-J/B
553B	VW	AVSS0.75sq	CN-4F		CN-27F	MECHATRO CONTROLLER — 15PAF-J/B
553C	VW	AVSS0.75sq	CN-18F		CN-27F	RESISTOR — 15PAF-J/B
556	BrW	AVS0.5sq	CN-4F		CN-51F	MECHATRO CONTROLLER — SW BOX ASSY
557	L	AVS0.75sq	CN-4F		CN-38M	MECHATRO CONTROLLER — WIPER MOTOR
558	G	AVS0.75sq	CN-4F		CN-38M	MECHATRO CONTROLLER — WIPER MOTOR
559	PB	AVS0.75sq	CN-7F		CN-60F	MECHATRO CONTROLLER — WIPER INTERLOCK SW.
560	LeY	AVS0.75sq	CN-7F		CN-39F	MECHATRO CONTROLLER — DRIVE FLASHER SW.

MidWestTech | Kobelco SK330LC Hydraulic Excavator Parts Catalog | Publication LC91Z00002D4-01

Order the manual at mid-west-tech.com >