PART NO. TODAQ50-EN-00

HITACHI

Reliable solutions

# Technical Manual
## Operational Principle

# ZX
# 130-6
# 130LCN-6
## Hydraulic Excavator

Service Manual consists of the following separate Part No.

| | |
|---|---|
| Technical Manual (Operational Principle) | : Vol. No.TODAQ50-EN |
| Technical Manual (Troubleshooting) | : Vol. No.TTDAQ50-EN |
| Workshop Manual | : Vol. No.WDAQ50-EN |
| Engine Manual | : Vol. No.EDBR50-EN |

MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technical Service Manual | Publication TODAQ50-EN-00

Order the manual at mid-west-tech.com >

# SECTION 1

# GENERAL

## CONTENTS


### Group 1 Specifications

Specifications ..... T1-1-1
Working Ranges ..... T1-1-4

### Group 2 Component Layout

Main Component ..... T1-2-1
Electrical System (Overview) ..... T1-2-3
Electrical System (Rear Tray) ..... T1-2-4
Electrical System (Switch Panel) ..... T1-2-5
Electrical System (Around Air Cleaner) ..... T1-2-6
Electrical System (Relays) ..... T1-2-7
Engine ..... T1-2-8
Aftertreatment Device ..... T1-2-9
Aftertreatment Device ..... T1-2-10
Pump Device ..... T1-2-11
Around Pump Device ..... T1-2-12
Control Valve ..... T1-2-13
Signal Control Valve ..... T1-2-13
Swing Device ..... T1-2-15
Travel Device ..... T1-2-15
4-Spool Solenoid Valve Unit ..... T1-2-16
Maximum Pump 1 Flow Rate Limit Control Solenoid Valve ..... T1-2-16
2-Spool Solenoid Valve Unit (Aftertreatment Device Regeneration Control) ..... T1-2-16
DEF Tank ..... T1-2-17
DEF Supply Module ..... T1-2-17
Layout of Attachment Spec. Parts ..... T1-2-19

### Group 3 Component Specifications

Engine ..... T1-3-1
Engine Accessories ..... T1-3-5
Hydraulic Component ..... T1-3-6
Electrical Component ..... T1-3-10
Optional Parts ..... T1-3-11


MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

# SECTION 2

# SYSTEM

## CONTENTS


### Group 1 Controller
Outline ..... T2-1-1
CAN Circuit ..... T2-1-2

### Group 2 Control System
Outline ..... T2-2-1
Engine Control ..... T2-2-4
Pump Control ..... T2-2-34
Valve Control (Standard) ..... T2-2-52
Valve Control (Option) ..... T2-2-70
Other Control ..... T2-2-80

### Group 3 Engine System
ECM System ..... T2-3-1
Fuel Injection Control ..... T2-3-2
Fuel Injection Amount Correction Control ..... T2-3-10
EGR Control ..... T2-3-12
Preheating Control ..... T2-3-14
Variable Turbocharger Control ..... T2-3-15
Alarm Control ..... T2-3-16
Urea SCR System ..... T2-3-17
Engine Output Restriction Control (INDUCEMENT) ..... T2-3-28
Aftertreatment Device ..... T2-3-32
Aftertreatment Device Regeneration Control ..... T2-3-36

### Group 4 Hydraulic System
Outline ..... T2-4-1
Pilot Circuit ..... T2-4-2
Main Circuit ..... T2-4-14
Blade/Breaker/Pulverizer/Crusher Circuit (Option) ..... T2-4-32
Outline (2-Piece Boom) ..... T2-4-41
Pilot Circuit (2-Piece Boom) ..... T2-4-42
Main Circuit (2-Piece Boom) ..... T2-4-46

### Group 5 Electrical System
Outline ..... T2-5-1
Main Circuit ..... T2-5-2
Electric Power Circuit (Key Switch: OFF) ..... T2-5-4
CAN Circuit ..... T2-5-6
Accessory Related Circuit (Key Switch: ACC) ..... T2-5-8
Starting Circuit (Key Switch: START) ..... T2-5-10
Charging Circuit (Key Switch: ON) ..... T2-5-12
Surge Voltage Prevention Circuit ..... T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON) ..... T2-5-18
Auto Shut-Down Circuit/Automatic Engine Stop Circuit at Low Temperature ..... T2-5-20
Engine Stop Circuit ..... T2-5-22
Monitor Circuit ..... T2-5-25
Security Circuit ..... T2-5-26
Radio Circuit ..... T2-5-28
Air Conditioner Circuit ..... T2-5-28
Accessory Circuit ..... T2-5-31
Work Light Circuit ..... T2-5-32
Wiper/Washer Circuit ..... T2-5-34
Cab Light Circuit ..... T2-5-36


MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

# SECTION 3

# COMPONENT OPERATION

## CONTENTS


### Group 1 Pump Device
Outline ..... T3-1-1
Main Pump ..... T3-1-2
Regulator ..... T3-1-4
Solenoid Valve ..... T3-1-22
Pilot Pump, Blade Pump (Option) ..... T3-1-24
Pump Delivery Pressure Sensor ..... T3-1-24
Pump Control Pressure Sensor ..... T3-1-24

### Group 2 Swing Device
Outline ..... T3-2-1
Swing Reduction Gear ..... T3-2-2
Swing Motor ..... T3-2-3
Swing Parking Brake ..... T3-2-4
Valve Unit ..... T3-2-6

### Group 3 Control Valve
Outline ..... T3-3-1
Hydraulic Circuit ..... T3-3-20
Flow Combiner Valve ..... T3-3-26
Main Relief Valve ..... T3-3-28
Overload Relief Valve (with Make-Up Function) ..... T3-3-32
Regenerative Valve ..... T3-3-36
Anti-Drift Valve ..... T3-3-44
Flow Rate Control Valve ..... T3-3-48
Digging Regenerative Valve ..... T3-3-52
Boom Lower Meter-In Cut Valve ..... T3-3-54
Auxiliary Flow Combiner Valve and Bypass Shut-Out Valve ..... T3-3-56
Blade Control Valve (Option), Positioning Control Valve (Option) ..... T3-3-60
2-Piece Boom (Option) ..... T3-3-62
Blade Circuit (Option) ..... T3-3-66

### Group 4 Pilot Valve
Outline ..... T3-4-1
Operation (Front Attachment/Swing and Travel Pilot Valves) ..... T3-4-3
Operation (Auxiliary, Blade, Positioning Pilot Valves) ..... T3-4-11
Shockless Function (Only for Travel Pilot Valve) ..... T3-4-16

### Group 5 Travel Device
Outline ..... T3-5-1
Travel Reduction Gear ..... T3-5-2
Travel Motor ..... T3-5-4
Parking Brake ..... T3-5-6
Travel Brake Valve ..... T3-5-8
Overload Relief Valve ..... T3-5-12
Travel Mode Control ..... T3-5-14

### Group 6 Signal Control Valve
Outline ..... T3-6-1
Pilot Port ..... T3-6-2
Shuttle Valve ..... T3-6-7
Shockless Valve ..... T3-6-10
Pump 1 Flow Rate Control Valve, Pump 2 Flow Rate Control Valve ..... T3-6-14
Bucket Flow Rate Control Valve Control Spool, Flow Combiner Valve Control Spool, Swing Parking Brake Release Spool, Arm 1 Flow Rate Control Valve Control Spool ..... T3-6-16

### Group 7 Others (Upperstructure)
Pilot Shut-Off Solenoid Valve ..... T3-7-1
Solenoid Valve ..... T3-7-3
Hose Rupture Valve ..... T3-7-8
Pilot Relief Valve ..... T3-7-14
Recirculation Valve (Option) ..... T3-7-15

### Group 8 Others (Undercarriage)
Swing Bearing ..... T3-8-1
Centerjoint ..... T3-8-2
Track Adjuster ..... T3-8-4


MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

## Group 3 Component Specifications

**IMPORTANT: This list shows design specifications, which are not servicing standards.**

| Performance | without fan | with fan |
|---|---|---|
| Fuel Consumption Ratio | 210 g/kW·h at 78.5 kW/ (at Full Load: 2000 $min^{-1}$) | 220 g/kW·h at 74.9 kW/(at Full Load: 2000 $min^{-1}$) |
| | 214 g/kW·h at 71.0 kW/(at Working Load: 1800 $min^{-1}$) | 222 g/kW·h at 68.3 kW/(at Working Load: 1800 $min^{-1}$) |
| Maximum Output Torque | 375 N·m at 1800 $min^{-1}$ | 361 N·m at 1800 $min^{-1}$ |
| Compression Pressure | 3 MPa at 200 $min^{-1}$ | |
| Valve Clearance (Intake/ Exhaust) | 0.15/0.15 mm (when cold) | |
| No Load Speed | Slow: 1050 $min^{-1}$ | |
| | Fast: 2000 $min^{-1}$ | |



MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

## CAN Circuit

CAN (Controller Area Network) is ISO Standards of the serial communication protocol.
Four networks (CAN bus (4)), CAN 0 (1), CAN 1 (5), ISO-CAN (18), and Local-CAN (20) are equipped for this machine.
CAN 0 (1) and ISO-CAN (18) are used for the engine control. CAN 1 (5) is used for the accessories. Local-CAN (20) is used for the urea SCR system.
CAN bus (4) consists of two harnesses, CAN-H (High) (2) and CAN-L (Low) (3).
Each controller judges the CAN bus (4) level by the potential difference between CAN-H (High) (2) and CAN-L (Low) (3).
Each controller arranges the CAN bus (4) level and sends the signal and data to other controllers.
Termination resistors (120 Ω) (17) are installed to both ends of CAN bus (4).




MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

## Hose Rupture Valve


The hose rupture valve is installed to boom cylinder (bottom side circuit), arm cylinder (rod side circuit), and positioning cylinder (2-piece boom) (rod side circuit). When the hose of front attachment is damaged, the hose rupture valve blocks returning oil from each cylinder and prevents the front attachment from falling.

*NOTE: The hose rupture valve in boom cylinder is explained here.*

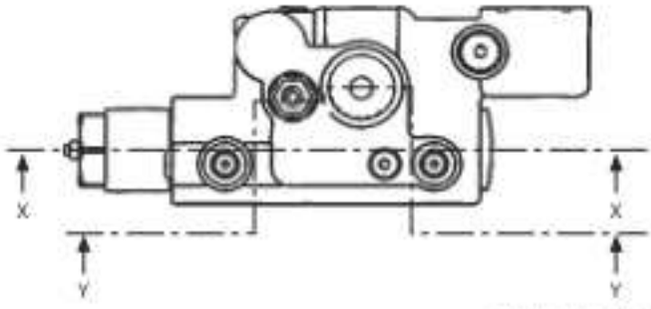


TDAA-03-07-011

- Control Lever in Neutral
  1. As pilot pressure Pi dose not act on spool(2), spool (2) is pushed to the right by the spring (10) force.
  2. One holding pressure of cylinder at port B acts on poppet (6) and the other acts on spool (2) through passage E (8).
  3. Pressure oil which flows to the spring (5) chamber through poppet (6) also acts on spool (2) through passage C (4). Pressure oil is blocked by spool (2) and does not flow to passage D (9). Holding pressure of cylinder through passage E (8) is blocked by spool (2).
  4. Poppet (6) is pushed down by the force (pressure of the spring (5) chamber + spring (5) force).
  5. Consequently, as holding pressure of cylinder at port B is blocked completely, the front attachment is prevented from falling when the hose of front attachment is damaged.

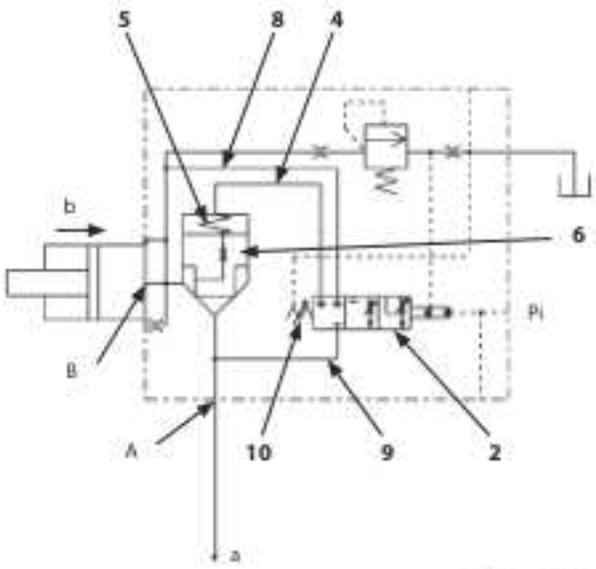



TDAA-03-07-005

A- Port A
B- Port B
a- To Control Valve Spool (To Front Attachment Hose)
b- External Load
2- Spool
4- Passage C
5- Spring
6- Poppet
8- Passage E
9- Passage D
10- Spring




MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

*NOTE: The illustration shows the pump1 regulator.*

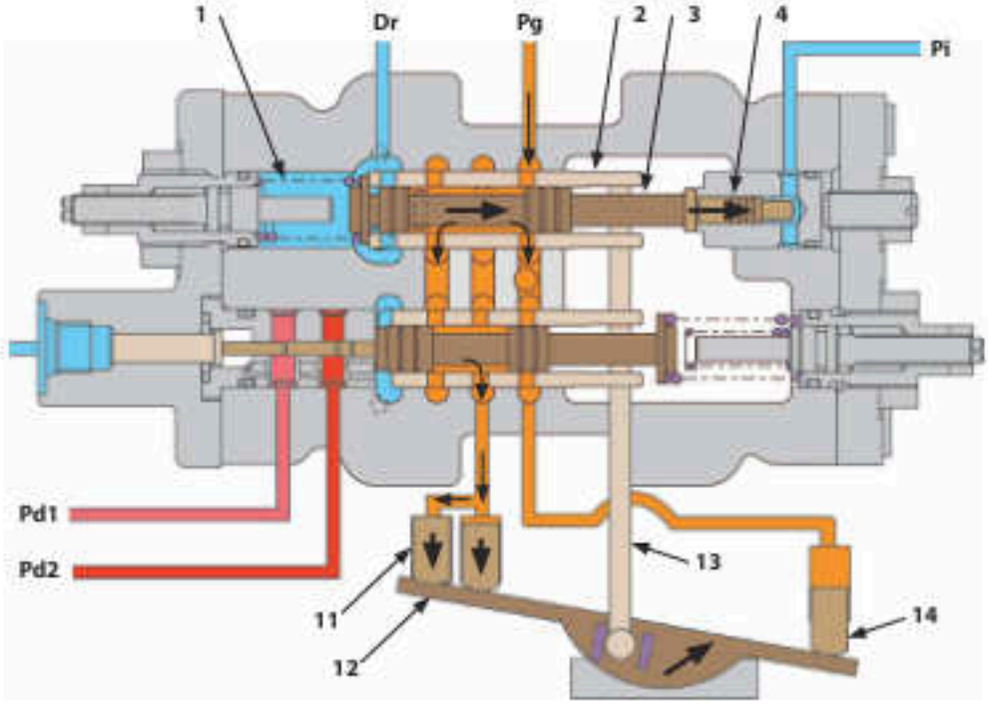


TDAD-03-01-029

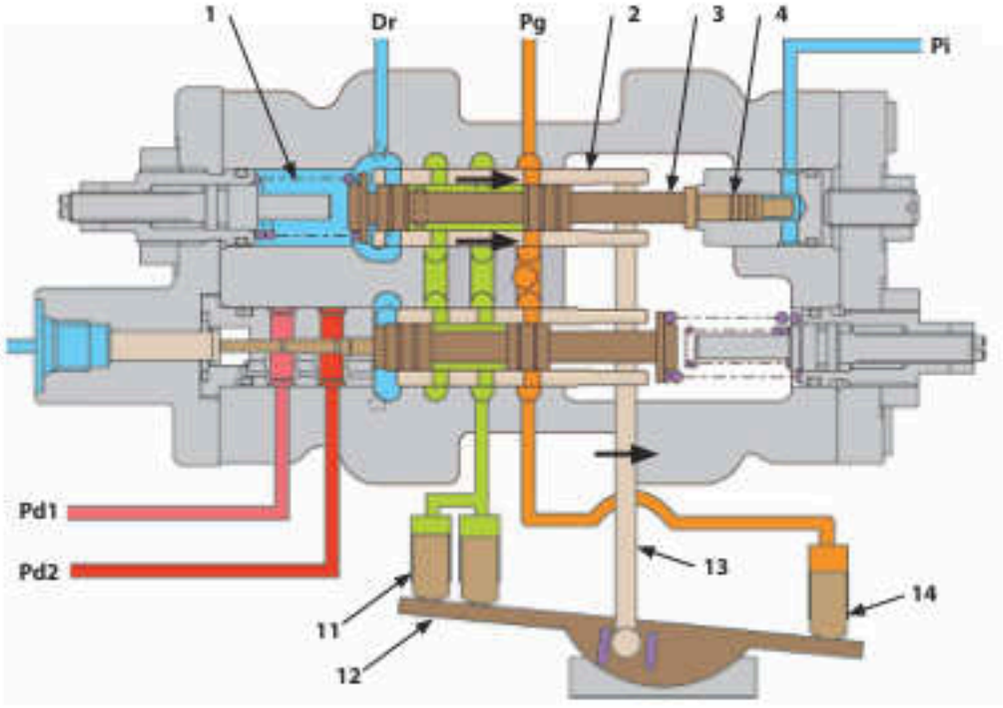


TDAD-03-01-030

Pd1- Pump 1 Delivery Pressure
Pd2- Pump 2 Delivery Pressure

Dr- Returning to Hydraulic Oil Tank

Pi- Pump Control Pressure
Pps- Torque Control Pressure


Pg- Primary Pilot Pressure (From Pilot Pump)

1- Spring
2- Sleeve A
3- Spool A
4- Piston
11- Servo Piston 1 (2 used)
12- Swash Plate
13- Link
14- Servo Piston 2




MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >

Front Attachment / Swing Pilot Valve

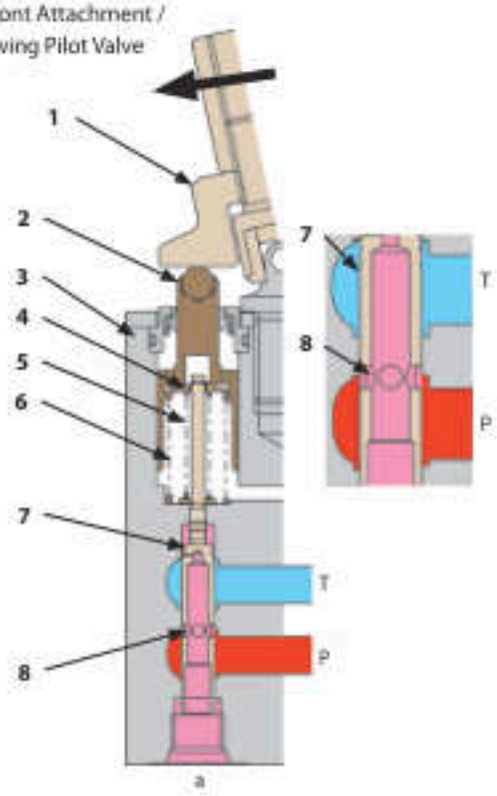



TPPP-03-04-007

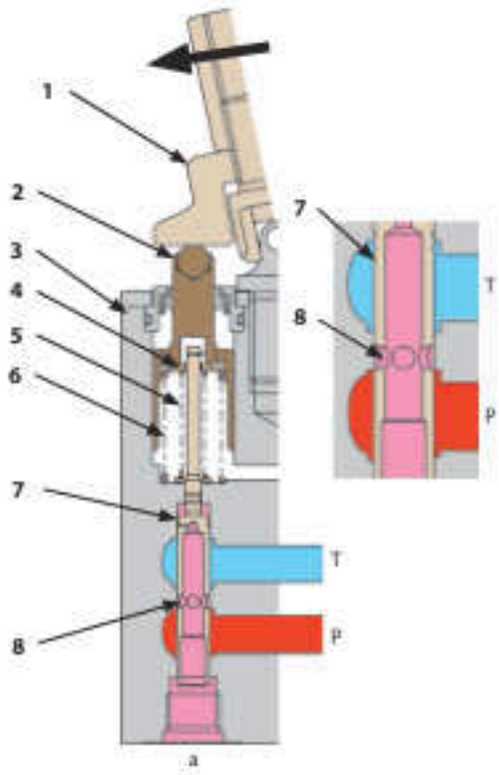



TPPP-03-04-008

Travel Pilot Valve

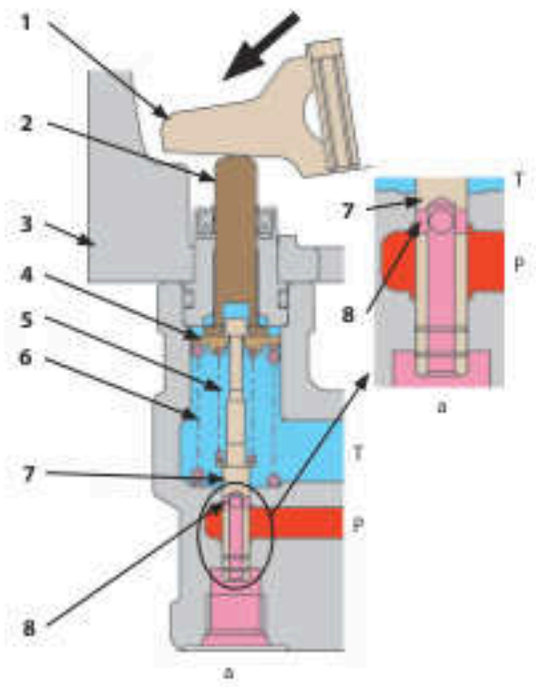


TPPP-03-04-012

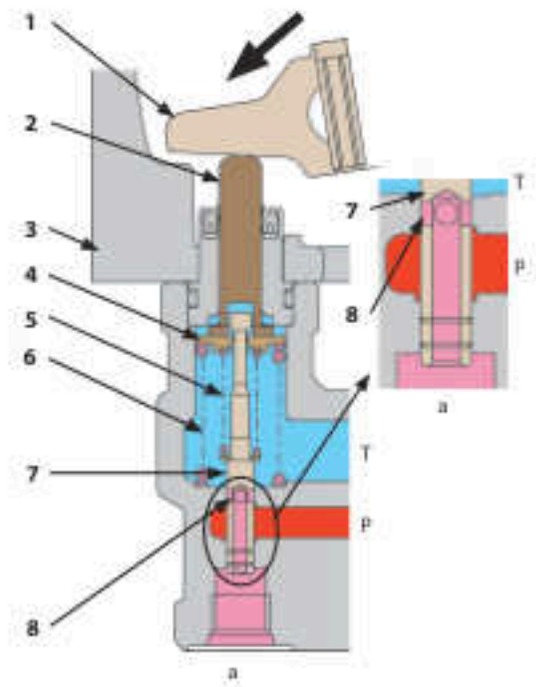


TPPP-03-04-013

P- Port P
T- Port T
a- Output Port

1- Cam
2- Pusher
3- Casing
4- Spring Guide
5- Balance Spring
6- Return Spring
7- Spool
8- Hole



MidWestTech | Hitachi ZX130-6, ZX130LCN-6 Excavator Operational Principle Technic... Order the manual at mid-west-tech.com >