PART NO. TOLBE50-EN-00

HITACHI

Reliable solutions

Technical Manual

Operational Principle

ZX170W-6

Wheeled Excavator

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TOLBE50-EN
Technical Manual (Troubleshooting)	: Vol. No.TTLBE50-EN
Workshop Manual	: Vol. No.WLBE50-EN
Engine Manual	: Vol. No.ETDC150-EN, EWDC150-EN

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical Servi... Order the manual at mid-west-tech.com >

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications ZX170W-6 (Rear Blade) T1-1-1
Specifications ZX170W-6 (Standard Gauge, Rear Outrigger) T1-1-2
Specifications ZX170W-6 (Standard Gauge, Front Blade Rear Outrigger) T1-1-3
Specifications ZX170W-6 (Standard Gauge, Front Outrigger, Rear Blade) T1-1-4
Specifications ZX170W-6 (Standard Gauge, Front Outrigger, Rear Outrigger) T1-1-5
Working Ranges ZX170W-6 Monoblock Boom T1-1-6
Working Ranges ZX170W-6 2-Piece Boom T1-1-7

Group 2 Component Layout

Main Component T1-2-1
Electrical System (Overview) T1-2-5
Electrical System (Cab) T1-2-7
Electrical System (Switch Panel) T1-2-8
Electrical System (Controller, Relays) T1-2-10
Electrical System (Around Air Cleaner) T1-2-12
Electrical System (Relays) T1-2-13
Electrical System (Lights) T1-2-14
Engine T1-2-15
Aftertreatment Device T1-2-16
Pump Device T1-2-17
Around Pump Device T1-2-18
Control Valve T1-2-19
Signal Control Valve T1-2-20
Swing Shockless Valve T1-2-21
Swing Device T1-2-22
Travel Shockless Valve T1-2-22
Accumulator Charging Valve T1-2-22
Brake Valve T1-2-22
Solenoid Valve Unit T1-2-23
Transmission Control Solenoid Valve T1-2-25
Travel Device T1-2-25
Around DEF Tank T1-2-26
Layout of Attachment Spec. Parts T1-2-27
Auxiliary Control Solenoid Valve Unit T1-2-28
Breaker Relief Solenoid Valve T1-2-28
Selector Valve Control Valve T1-2-28

Group 3 Component Specifications

Engine T1-3-1
Engine Accessories T1-3-5
Hydraulic Component T1-3-6
Electrical Component T1-3-11

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller
Outline T2-1-1
CAN Circuit T2-1-2

Group 2 Control System
Outline T2-2-1
Engine Control T2-2-6
Pump Control T2-2-40
Valve Control (Standard) T2-2-70
Valve Control (Option) T2-2-92
Other Control T2-2-102
MC2 Control T2-2-130

Group 3 Engine System
ECM System T2-3-1
Fuel Injection Control T2-3-2
Fuel Injection Amount Correction Control T2-3-10
EGR Control T2-3-12
Preheating Control T2-3-14
Variable Turbocharger Control T2-3-15
Alarm Control T2-3-16
Urea SCR System T2-3-17
Engine Output Restriction Control (INDUCEMENT) T2-3-28
Aftertreatment Device T2-3-32
Aftertreatment Device Regeneration Control T2-3-34

Group 4 Hydraulic System
Outline T2-4-1
Pilot Circuit T2-4-2
Steering Circuit T2-4-24
Main Circuit T2-4-26
Breaker/Pulverizer/Crusher Circuit (Option) T2-4-44

Group 5 Electrical System
Outline T2-5-1
Main Circuit T2-5-2
Electric Power Circuit (Key Switch: OFF) T2-5-4
CAN Circuit T2-5-6
Accessory Related Circuit (Key Switch: ACC) T2-5-8
Starting Circuit (Key Switch: START) T2-5-10
Charging Circuit (Key Switch: ON) T2-5-12
Surge Voltage Prevention Circuit T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON) T2-5-18
Auto Shut-Down Circuit/Automatic Engine Stop Circuit at Low Temperature T2-5-20
Engine Stop Circuit T2-5-22
Monitor Circuit T2-5-25
Security Circuit T2-5-26
Radio Circuit T2-5-28
Air Conditioner Circuit T2-5-28
Accessory Circuit T2-5-31
Work Light Circuit T2-5-32
Wiper/Washer Circuit T2-5-38
Cab Light Circuit T2-5-40
Light Circuit T2-5-43
Light Lighting Circuit T2-5-44
Turn Signal Light Circuit T2-5-52
Hazard Light Circuit T2-5-56
Brake Light Circuit T2-5-58
Horn Circuit T2-5-60
Forward/Reverse OFF Buzzer Circuit T2-5-62
Beacon Light Circuit (Optional) T2-5-64

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

SECTION 3

COMPONENT OPERATION

CONTENTS

Group 1 Pump Device
Outline T3-1-1
Main Pump T3-1-2
Regulator T3-1-6
Solenoid Valve T3-1-24
Pilot Pump, Steering Pump, Assist Pump (Option) T3-1-26
Pump Delivery Pressure Sensor T3-1-26
Pump Control Pressure Sensor T3-1-26

Group 2 Swing Device
Outline T3-2-1
Swing Reduction Gear T3-2-2
Swing Motor T3-2-3
Swing Parking Brake T3-2-4
Valve Unit T3-2-6

Group 3 Control Valve
Outline T3-3-1
Hydraulic Circuit T3-3-20
Main Relief Valve T3-3-26
Overload Relief Valve (with Make-Up Function) T3-3-30
Make-Up Valve T3-3-34
Regenerative Valve T3-3-36
Anti-Drift Valve T3-3-44
Flow Rate Control Valve T3-3-48
Boom Lower Meter-In Cut Valve T3-3-52
Auxiliary Flow Combiner Valve and Bypass Shut-Out Valve T3-3-54

Group 4 Pilot Valve
Outline T3-4-1
Operation (Front Attachment/Swing Pilot Valves) T3-4-3
Operation (Travel Pilot Valve) T3-4-11

Group 5 Electric Lever
Outline T3-5-1
Operation T3-5-2

Group 6 Transmission
Outline T3-6-1
Transmission T3-6-2
Shift Interlock Control T3-6-10
Shock Reducing Function T3-6-12
Parking Brake Release Device T3-6-14

Group 7 Axle
Front Axle T3-7-1
Differential Gear T3-7-2
Reduction Gear T3-7-6
Steering Cylinder T3-7-8
Rear Axle T3-7-9

Group 8 Travel Motor
Outline T3-8-1
Rotor Section T3-8-3
Regulator T3-8-4
Slow Speed (Large Displacement Angle) Selection T3-8-8
Overload Relief Valve T3-8-14
Travel Brake Valve T3-8-15

Group 9 Signal Control Valve
Outline T3-9-1
Pilot Port T3-9-2
Shuttle Valve T3-9-7
Shockless Valve T3-9-10
Pump 1 Flow Rate Control Valve, Pump 2 Flow Rate Control Valve T3-9-14
Arm 1 Flow Rate Control Valve Control Spool, Bucket Flow Rate Control Valve Control Spool, Swing Parking Brake Release Spool T3-9-16

Group 10 Steering Valve
Outline T3-10-1
Structure T3-10-4
Operation T3-10-5
Overload Relief Valve T3-10-10
Make-Up Valve T3-10-10
Relief Valve T3-10-12

Group 11 Brake Valve
Outline T3-11-1
Operation T3-11-2

Group 12 Others (Upperstructure)
Pilot Shut-Off Solenoid Valve T3-12-1
Transmission Control Solenoid Valve T3-12-4
Solenoid Valve T3-12-8
Travel Shockless Valve T3-12-14
Swing Shockless Valve T3-12-16
Accumulator Charging Valve, Accumulator Manifold T3-12-18
Hose Rupture Valve T3-12-24

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

CYLINDER (Mono Boom)		Boom	Arm	Bucket
	Rod Diameter	80 mm	90 mm	75 mm
	Cylinder Bore	110 mm	120 mm	105 mm
	Stroke	1005 mm	1365 mm	935 mm
	Fully Retracted Length	1655 mm	1905 mm	1460 mm
	Plating Thickness	30 µm	30 µm	30 µm

CYLINDER (2-piece Boom)		Boom	Arm	Bucket	Positioning
	Rod Diameter	80 mm	90 mm	75 mm	105 mm
	Cylinder Bore	110 mm	120 mm	105 mm	170 mm
	Stroke	940 mm	1365 mm	935 mm	703 mm
	Fully Retracted Length	1680 mm	1905 mm	1460 mm	1290 mm
	Plating Thickness	30 µm	30 µm	30 µm	30 µm

CYLINDER (Option)		Blade	Outrigger
	Rod Diameter	60 mm	70 mm
	Cylinder Bore	105 mm	120 mm
	Stroke	195 mm	381 mm
	Fully Retracted Length	615 mm	854 mm
	Plating Thickness	30 µm	30 µm

Hose Rupture Valve	Relief Set-Pressure	$40.5^{+1.0}_{0}$ MPa at 0.5±0.1 L/min

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

Radiator Coolant Temperature Pump Torque Decrease Control

Purpose:
The radiator coolant temperature pump torque decrease control reduces the pump delivery flow rate and the pump driving torque so that engine stall is prevented when the coolant temperature is high (100°C or more). It also reduces the pump delivery flow rate and the pump driving torque so that engine stall is prevented when the coolant temperature is low (less than 50 °C).

Operation:

1. When the coolant temperature is high or low, the ECM (20) sends the coolant temperature sensor (21) signal to MC1 (12) by CAN communication (19).
2. MC1 (12) activates the torque control solenoid valve (28).
3. The torque control solenoid valve (28) delivers pilot pressure oil to the regulator and reduces the pump delivery flow rate.
4. Therefore, the engine overheating is prevented when the coolant temperature increases, or the engine stall is prevented when the coolant temperature decreases.

NOTE: The radiator coolant temperature pump torque decrease control can be set to enabled or disabled by MPDr. (16). Even if it is set to disabled, the radiator coolant temperature pump torque decrease control becomes enabled when coolant temperature is low. (Radiator Coolant Temperature Pump Torque Decrease Control Selection)

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

AUXILIARY FLOW COMBINER HARNESS

⚠ CAUTION: Parts numbers on the drawing are provided only for reference purpose.
To order parts on the drawing, be sure to consult the Parts Catalog.

Applicable Machine

Attach to vol. No.	Model
TTLAB50-EN-00	ZX140W-6
TTLAC50-EN-00	ZX145W-6
TTLBE50-EN-00	ZX170W-6
TTLBF50-EN-00	ZX190W-6


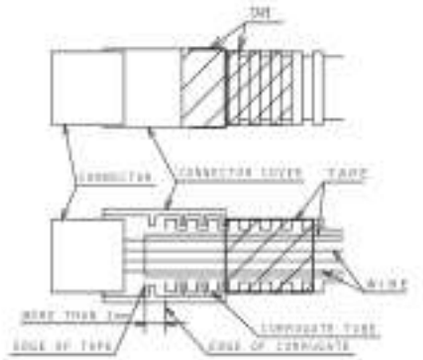



FIG.1 DETAIL OF CONNECTOR WITH REAR COVER

NO.	SIZE	COLOR	CIRCUIT FROM	CIRCUIT TO	COMMENT
1116	0.5	R	2ND_SPEED_3	ATT FLOW CON SOL-1	AVS
1254	0.5	PG	2ND_SPEED_2	2SPEED SOL-1	AVS
1268	0.5	YG	2ND_SPEED_4	ATT FLOW CON SOL-2	AVS
1269	0.5	LB	D1-A	(1254)	AVS
1270	0.5	L	D1-K	(1283)	AVS
1283	0.5	WY	2ND_SPEED_1	2SPEED SOL-2	AVS
1291	0.5	Sb	2ND_SPEED_6	ATT_P_2	AVSS
1316	0.5	BY	2ND_SPEED_5	ATT_P_1	AVSS
1317	0.5	BY	2ND_SPEED_7	ATT_P_3	AVSS

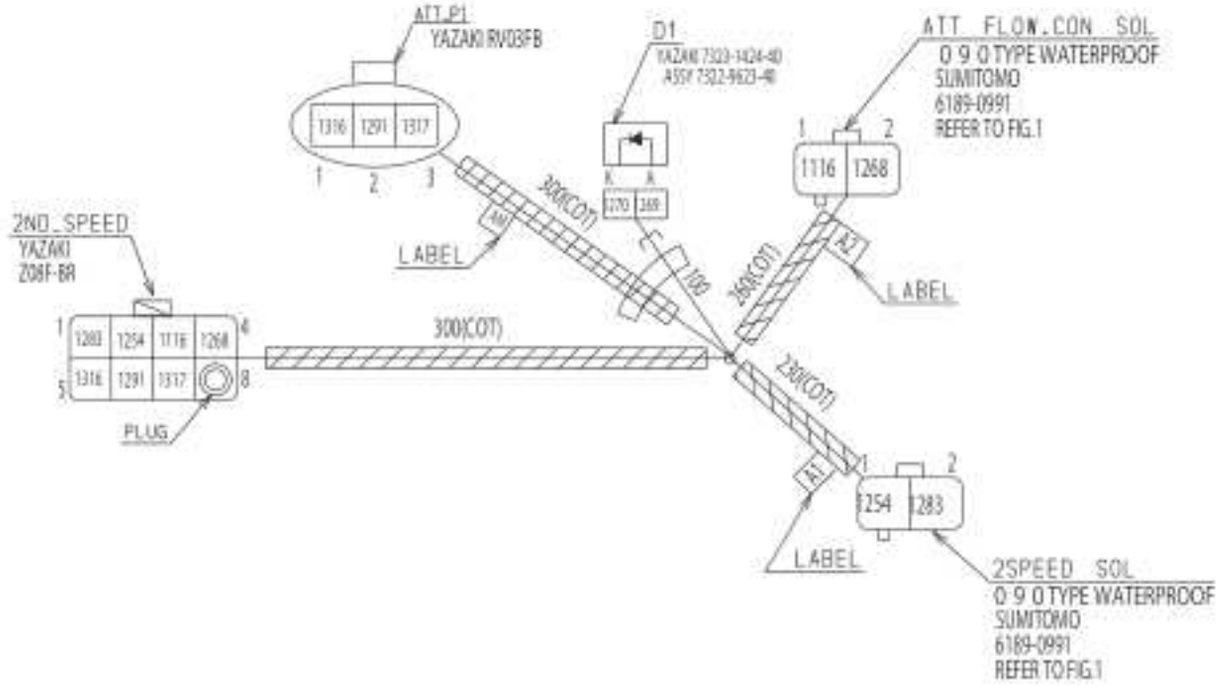


MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical Service Manual | Publication TOLBE50-EN-00
Order the manual at mid-west-tech.com >

NOTE: The figure shows the pump 2 regulator.

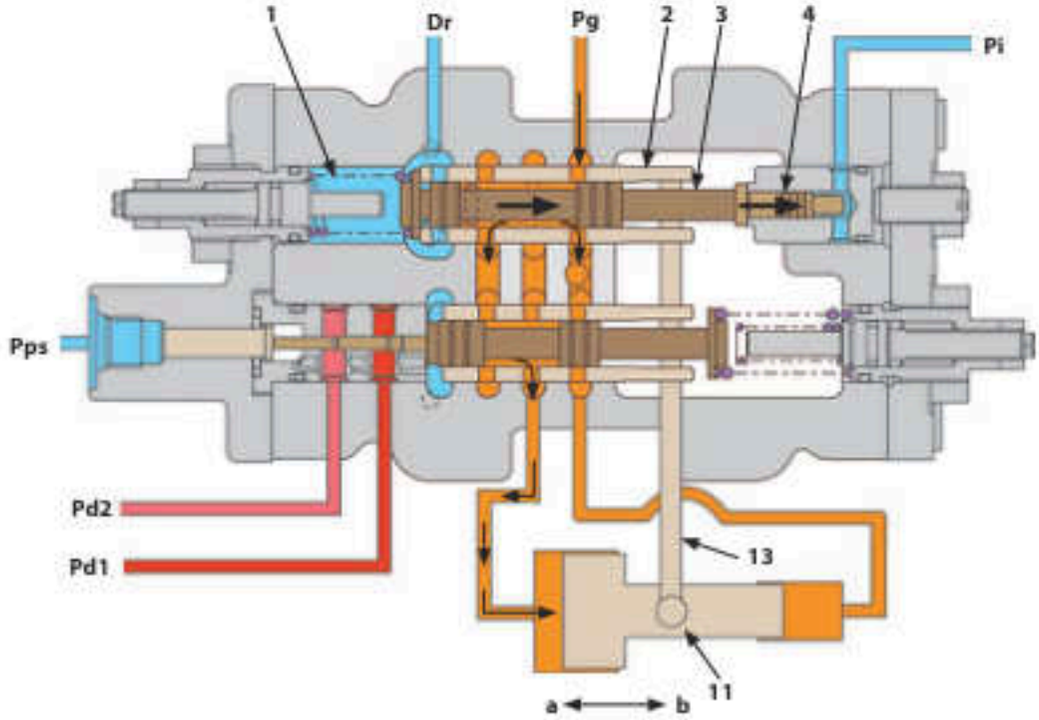

TPPP-03-01-018

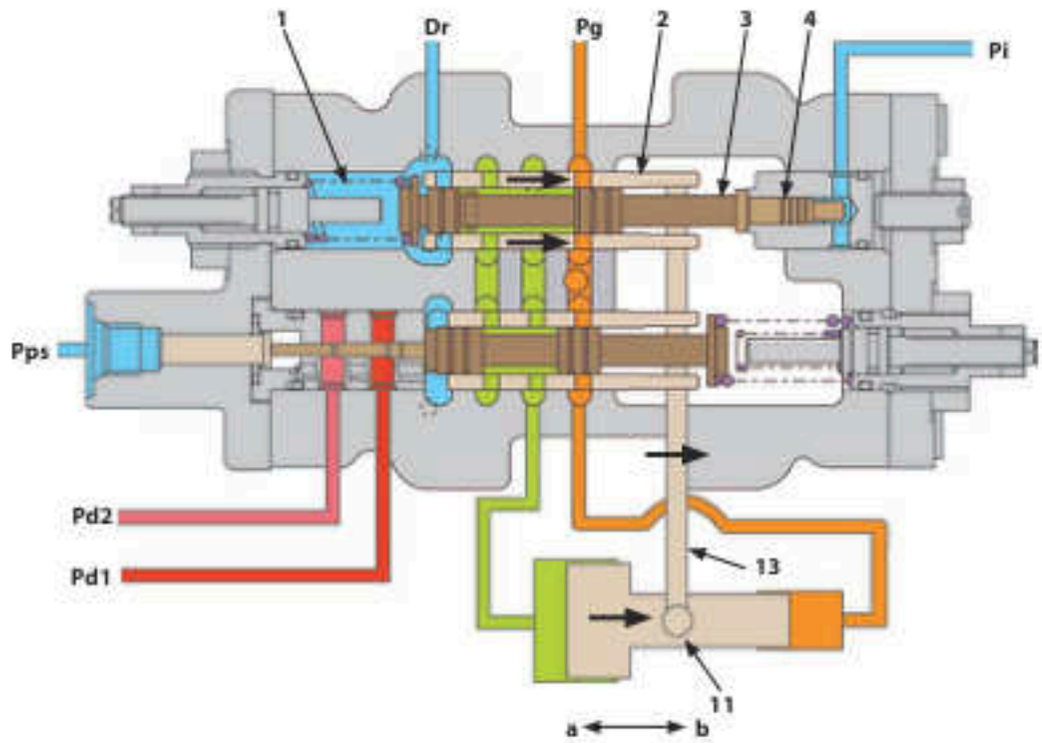

TPPP-03-01-019

Pd1- Pump 1 Delivery Pressure
Pd2- Pump 2 Delivery Pressure


Dr- Returning to Hydraulic Oil Tank
Pi- Pump Control Pressure

Pps- Torque Control Pressure
Pg- Primary Pilot Pressure (From Pilot Pump)

a- Displacement Angle Increase
b- Displacement Angle Decrease

1- Spring
2- Sleeve A
3- Spool A
4- Piston
11- Servo Piston
13- Link

MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical... Order the manual at mid-west-tech.com >

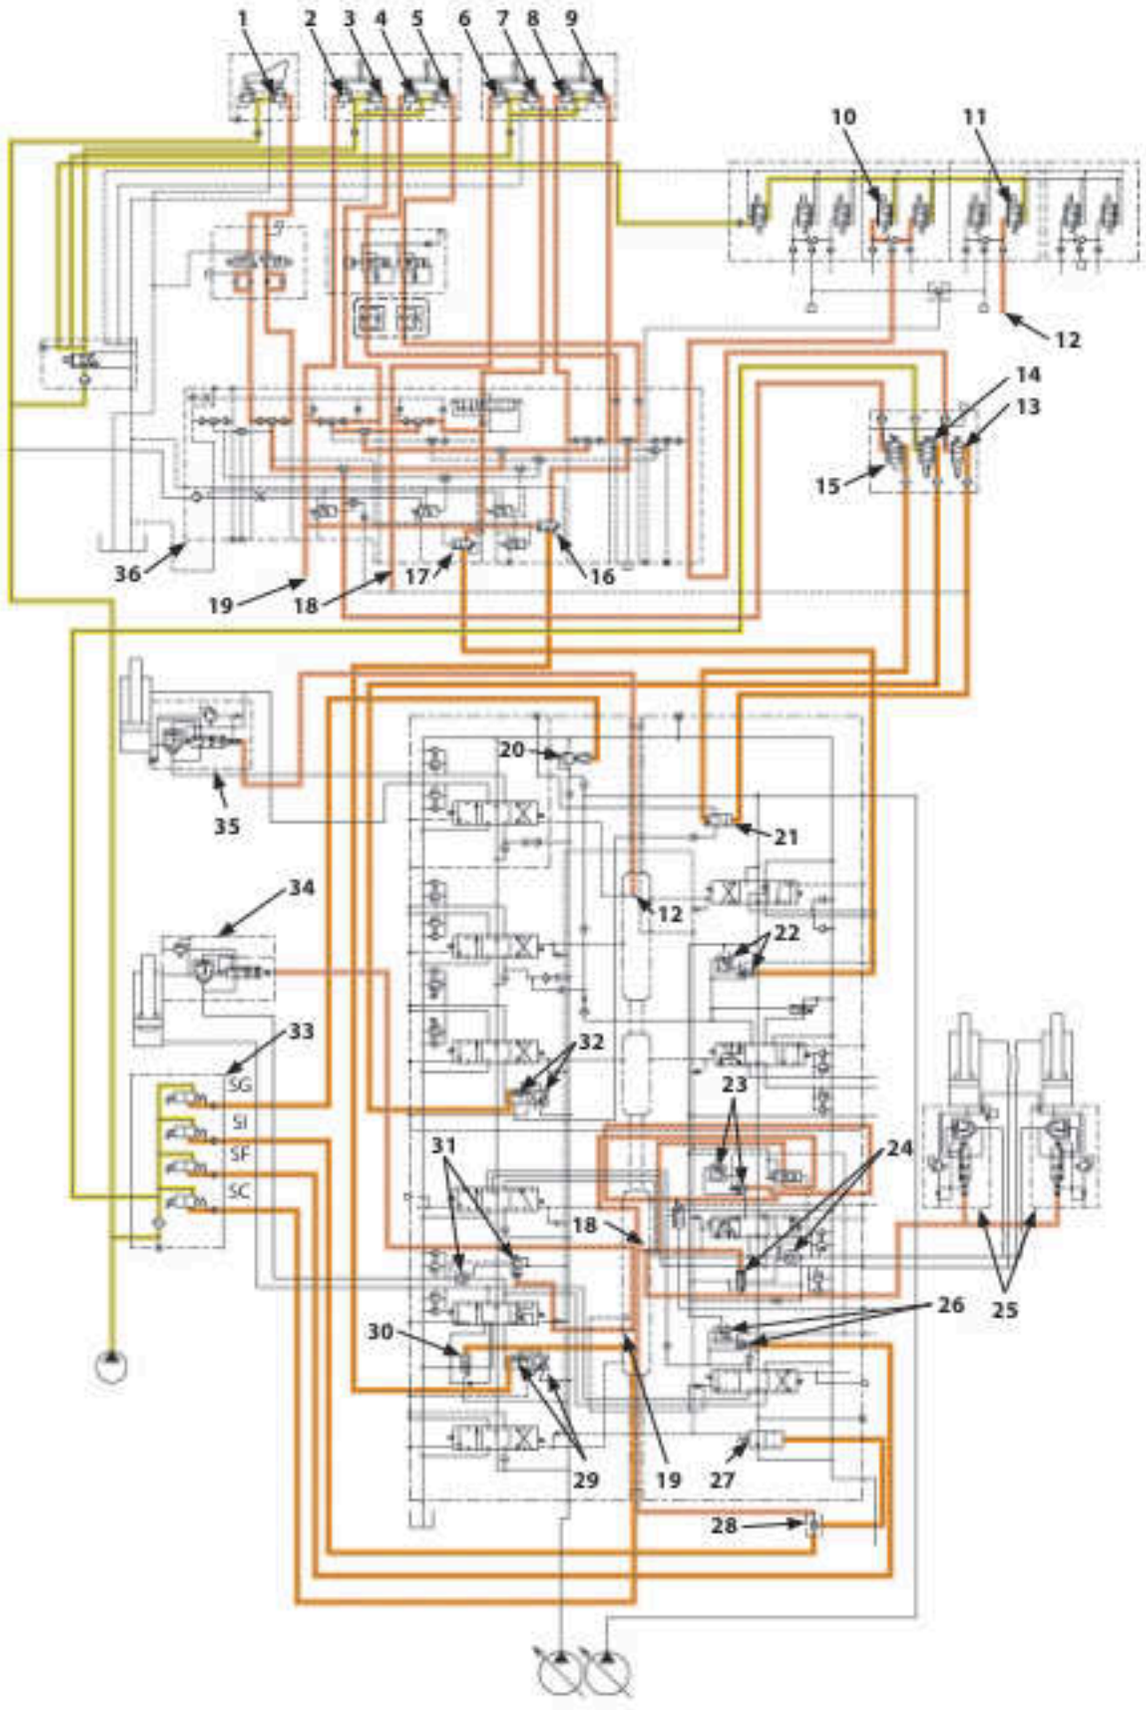

TLBE-02-04-004


MidWestTech | Hitachi ZX170W-6 Wheeled Excavator Operational Principle Technical...
Order the manual at mid-west-tech.com >

ELECTRICAL CIRCUIT DIAGRAM

Applicable Machine

Attach to vol. No.	Model
TTLBE50-EN-00	ZX170W-6
TTLBF50-EN-00	ZX190W-6

▲CAUTION: Parts numbers on the drawing are provided only for reference purpose.
To order parts on the drawing, be sure to consult the Parts Catalog.

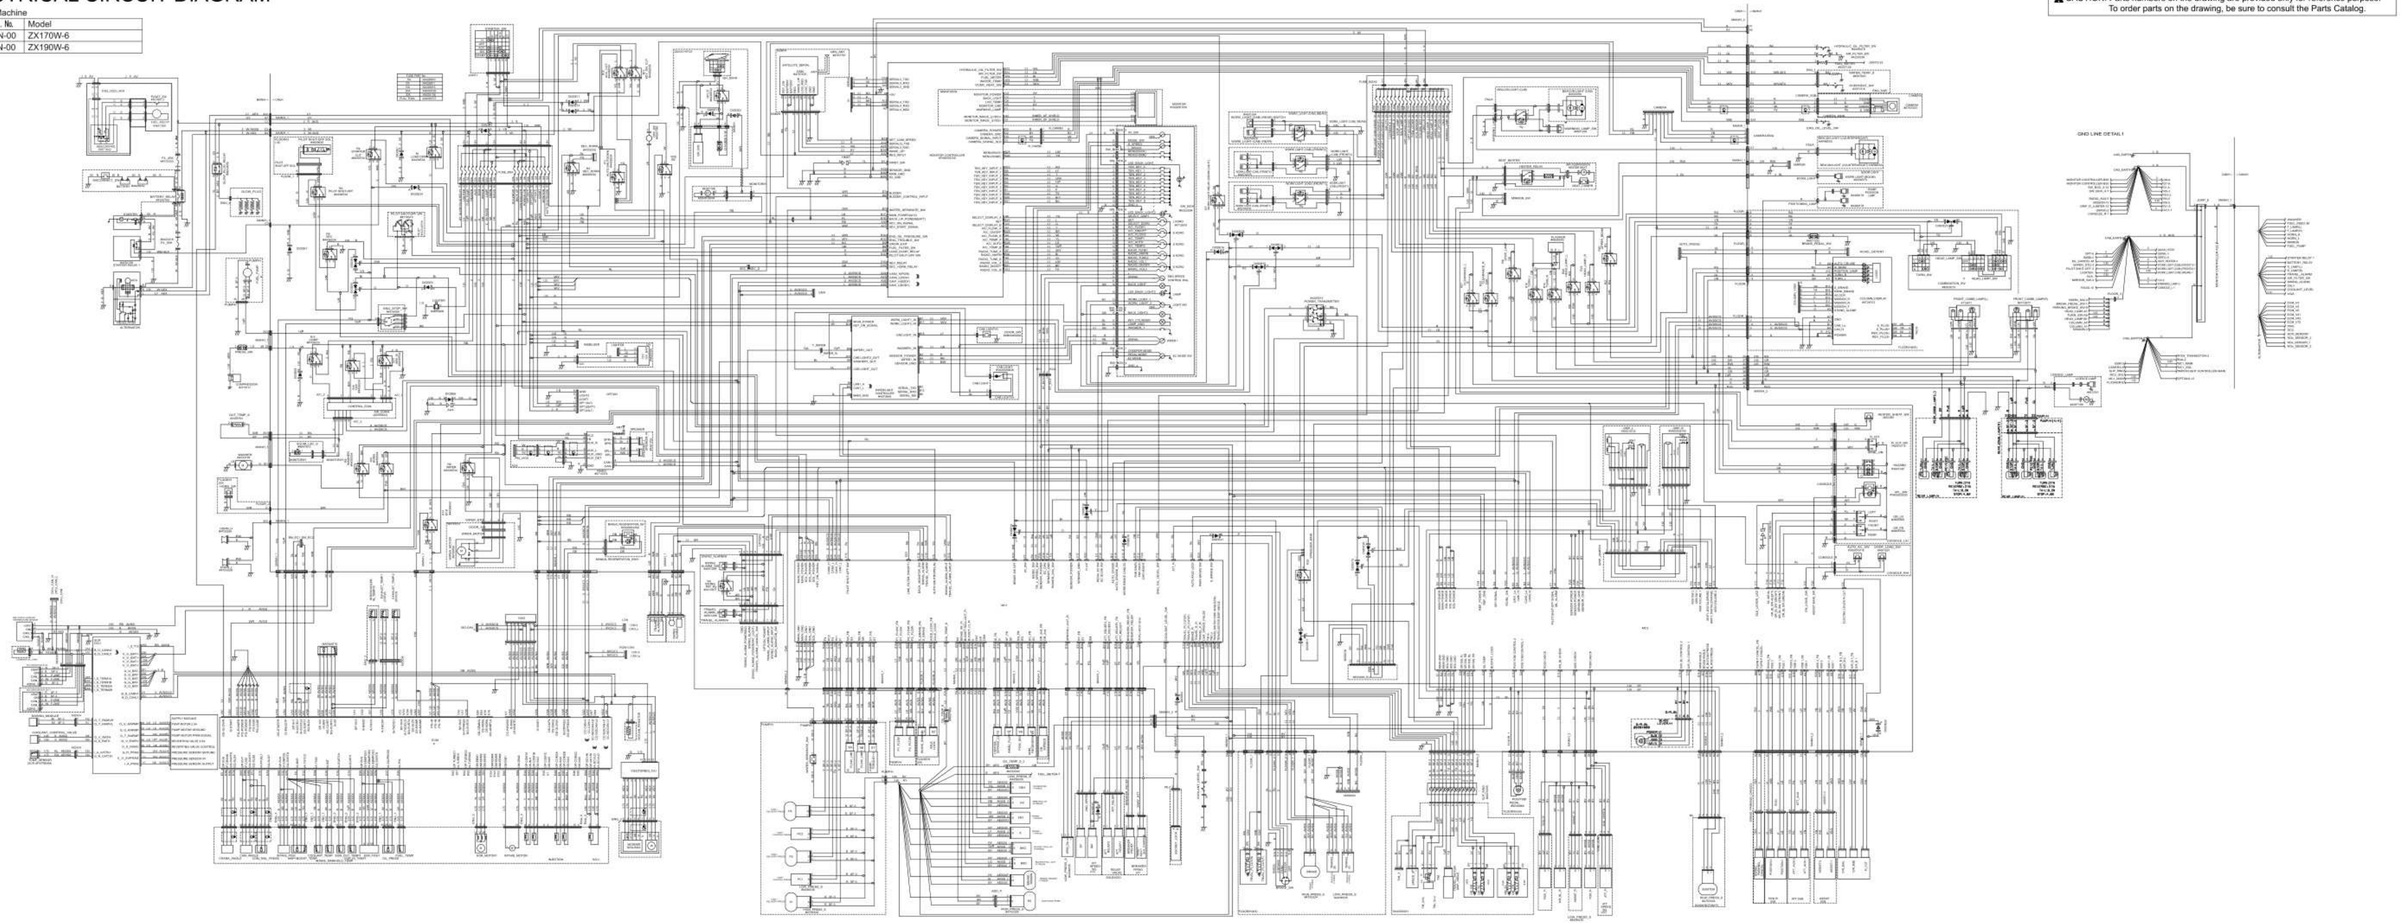

TTLBE50-EN-00

Order the manual at mid-west-tech.com >