PART NO. WABA50-EN-00

HITACHI

Reliable solutions

Workshop Manual

ZX
17U-5A
19U-5A
Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual	: Vol. No.TABA50-EN
Workshop Manual	: Vol. No.WABA50-EN
Engine Manual	: Vol. No.EABA-EN

MidWestTech | Hitachi ZX17U-5A, ZX19U-5A Excavator Workshop Service Manual | Publication WABA50-EN-00

Order the manual at mid-west-tech.com >

Safety Alert Symbol and Headline Notations

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury of machine damage.

⚠ This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury.
Never fail to follow the safety instructions prescribed along with the safety alert symbol.
The safety alert symbol is also used to draw attention to component/part weights.
To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

⚠ **CAUTION:**
Indicates potentially hazardous situation which could, if not avoided, result in personal injury or death.

IMPORTANT:
Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.

NOTE:
Indicates supplementary technical information or know-how.

Units Used

SI Units (International System of Units) are used in this manual. MKSA system units and English units are also indicated in parentheses just behind SI units.

Example: 24.5 MPa (250 kgf/cm², 3560 psi)


A table for conversion from SI units to other system units is shown below for reference purposes.

Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937
	mm	ft	0.003281
Volume	L	US gal	0.2642
	L	US qt	1.057
	m^3	yd^3	1.308
Weight	kg	lb	2.205
Force	N	kgf	0.10197
	N	lbf	0.2248
Torque	N·m	kgf·m	0.10197
Pressure	MPa	kgf/cm^2	10.197
	MPa	psi	145.0
Power	kW	PS	1.360
	kW	HP	1.341
Temperature	°C	°F	°C×1.8+32
Velocity	km/h	mph	0.6214
	min^{-1}	rpm	1.0
Flow rate	L/min	US gpm	0.2642
	mL/rev	cc/rev	1.0

NOTE: The numerical value in this manual might be different from the above-mentioned table.

MidWestTech | Hitachi ZX17U-5A, ZX19U-5A Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >

Lower Roller

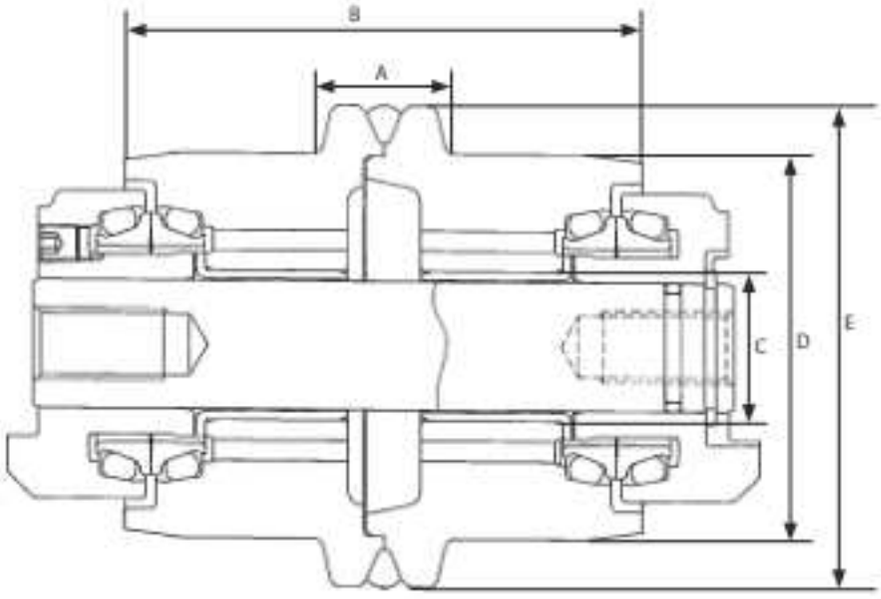

WABAA0-02-02-002

Unit: mm (in)

	Standard	Allowable Limit	Remedy
A	24 (0.945)	16 (0.630)	Replace
B	100 (3.94)	-	
C	29 (1.14)	-	
D	75 (2.95)	67 (2.64)	
E	94 (3.70)	-	

Axle and Bushing

Unit: mm (in)


		Standard	Allowable Limit	Remedy
Axle	Outer Diameter	25 (0.984)	24.2 (0.953)	Replace
Bushing	Inner Diameter	25 (0.984)	25.5 (1.00)	
	Flange Thickness	2.0 (0.079)	1.5 (0.059)	


NOTE: Values in [ ] are just for reference.

Lubrication Oil

Engine Oil (API CD class, SAE #30)
Amount of oil: 35±5 ml (35±5 cm^3)

MidWestTech | Hitachi ZX17U-5A, ZX19U-5A Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >

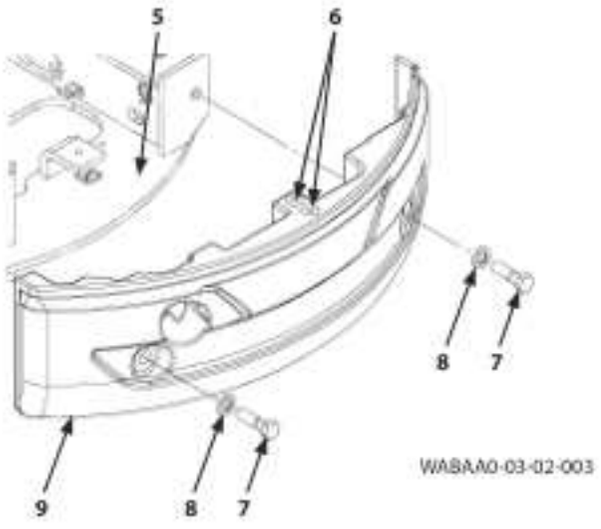

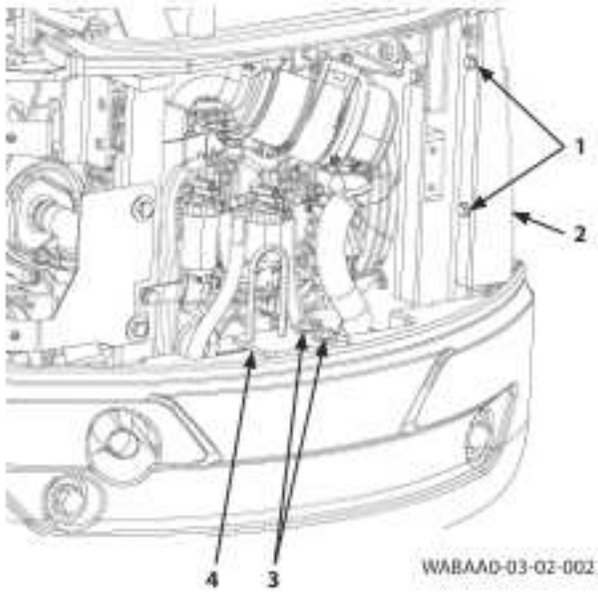

Installation

CAUTION: Counterweight (9) weight:

ZX17U-5A: 120 kg (265 lb)

ZX19U-5A: 240 kg (530 lb)

1. Install eyebolts (M12, Pitch 1.75 mm) (2 used) to bracket (4) mounting holes (6). Hoist counterweight (9). Place counterweight (9) onto main frame (5). Slide counterweight (9) to the front side.
2. Install counterweight (9) to main frame (5) with bolts (7) (2 used) and washers (8) (2 used).

: 30 mm

: 400 N·m (40 kgf·m, 300 lbf·ft)


MidWestTech | Hitachi ZX17U-5A, ZX19U-5A Excavator Workshop Service Manual | P... Order the manual at mid-west-tech.com >

HYDRAULIC CIRCUIT DIAGRAM

Applicable Machine

Attach to vol.No.	Model
TABA50-EN-00	ZX17U-5A/19U-5A
TABA90-EN-00	ZX17U-5A

▲ CAUTION: Parts numbers on the drawing are provided only for reference purpose.
To order parts on the drawing, be sure to consult the Parts Catalog.

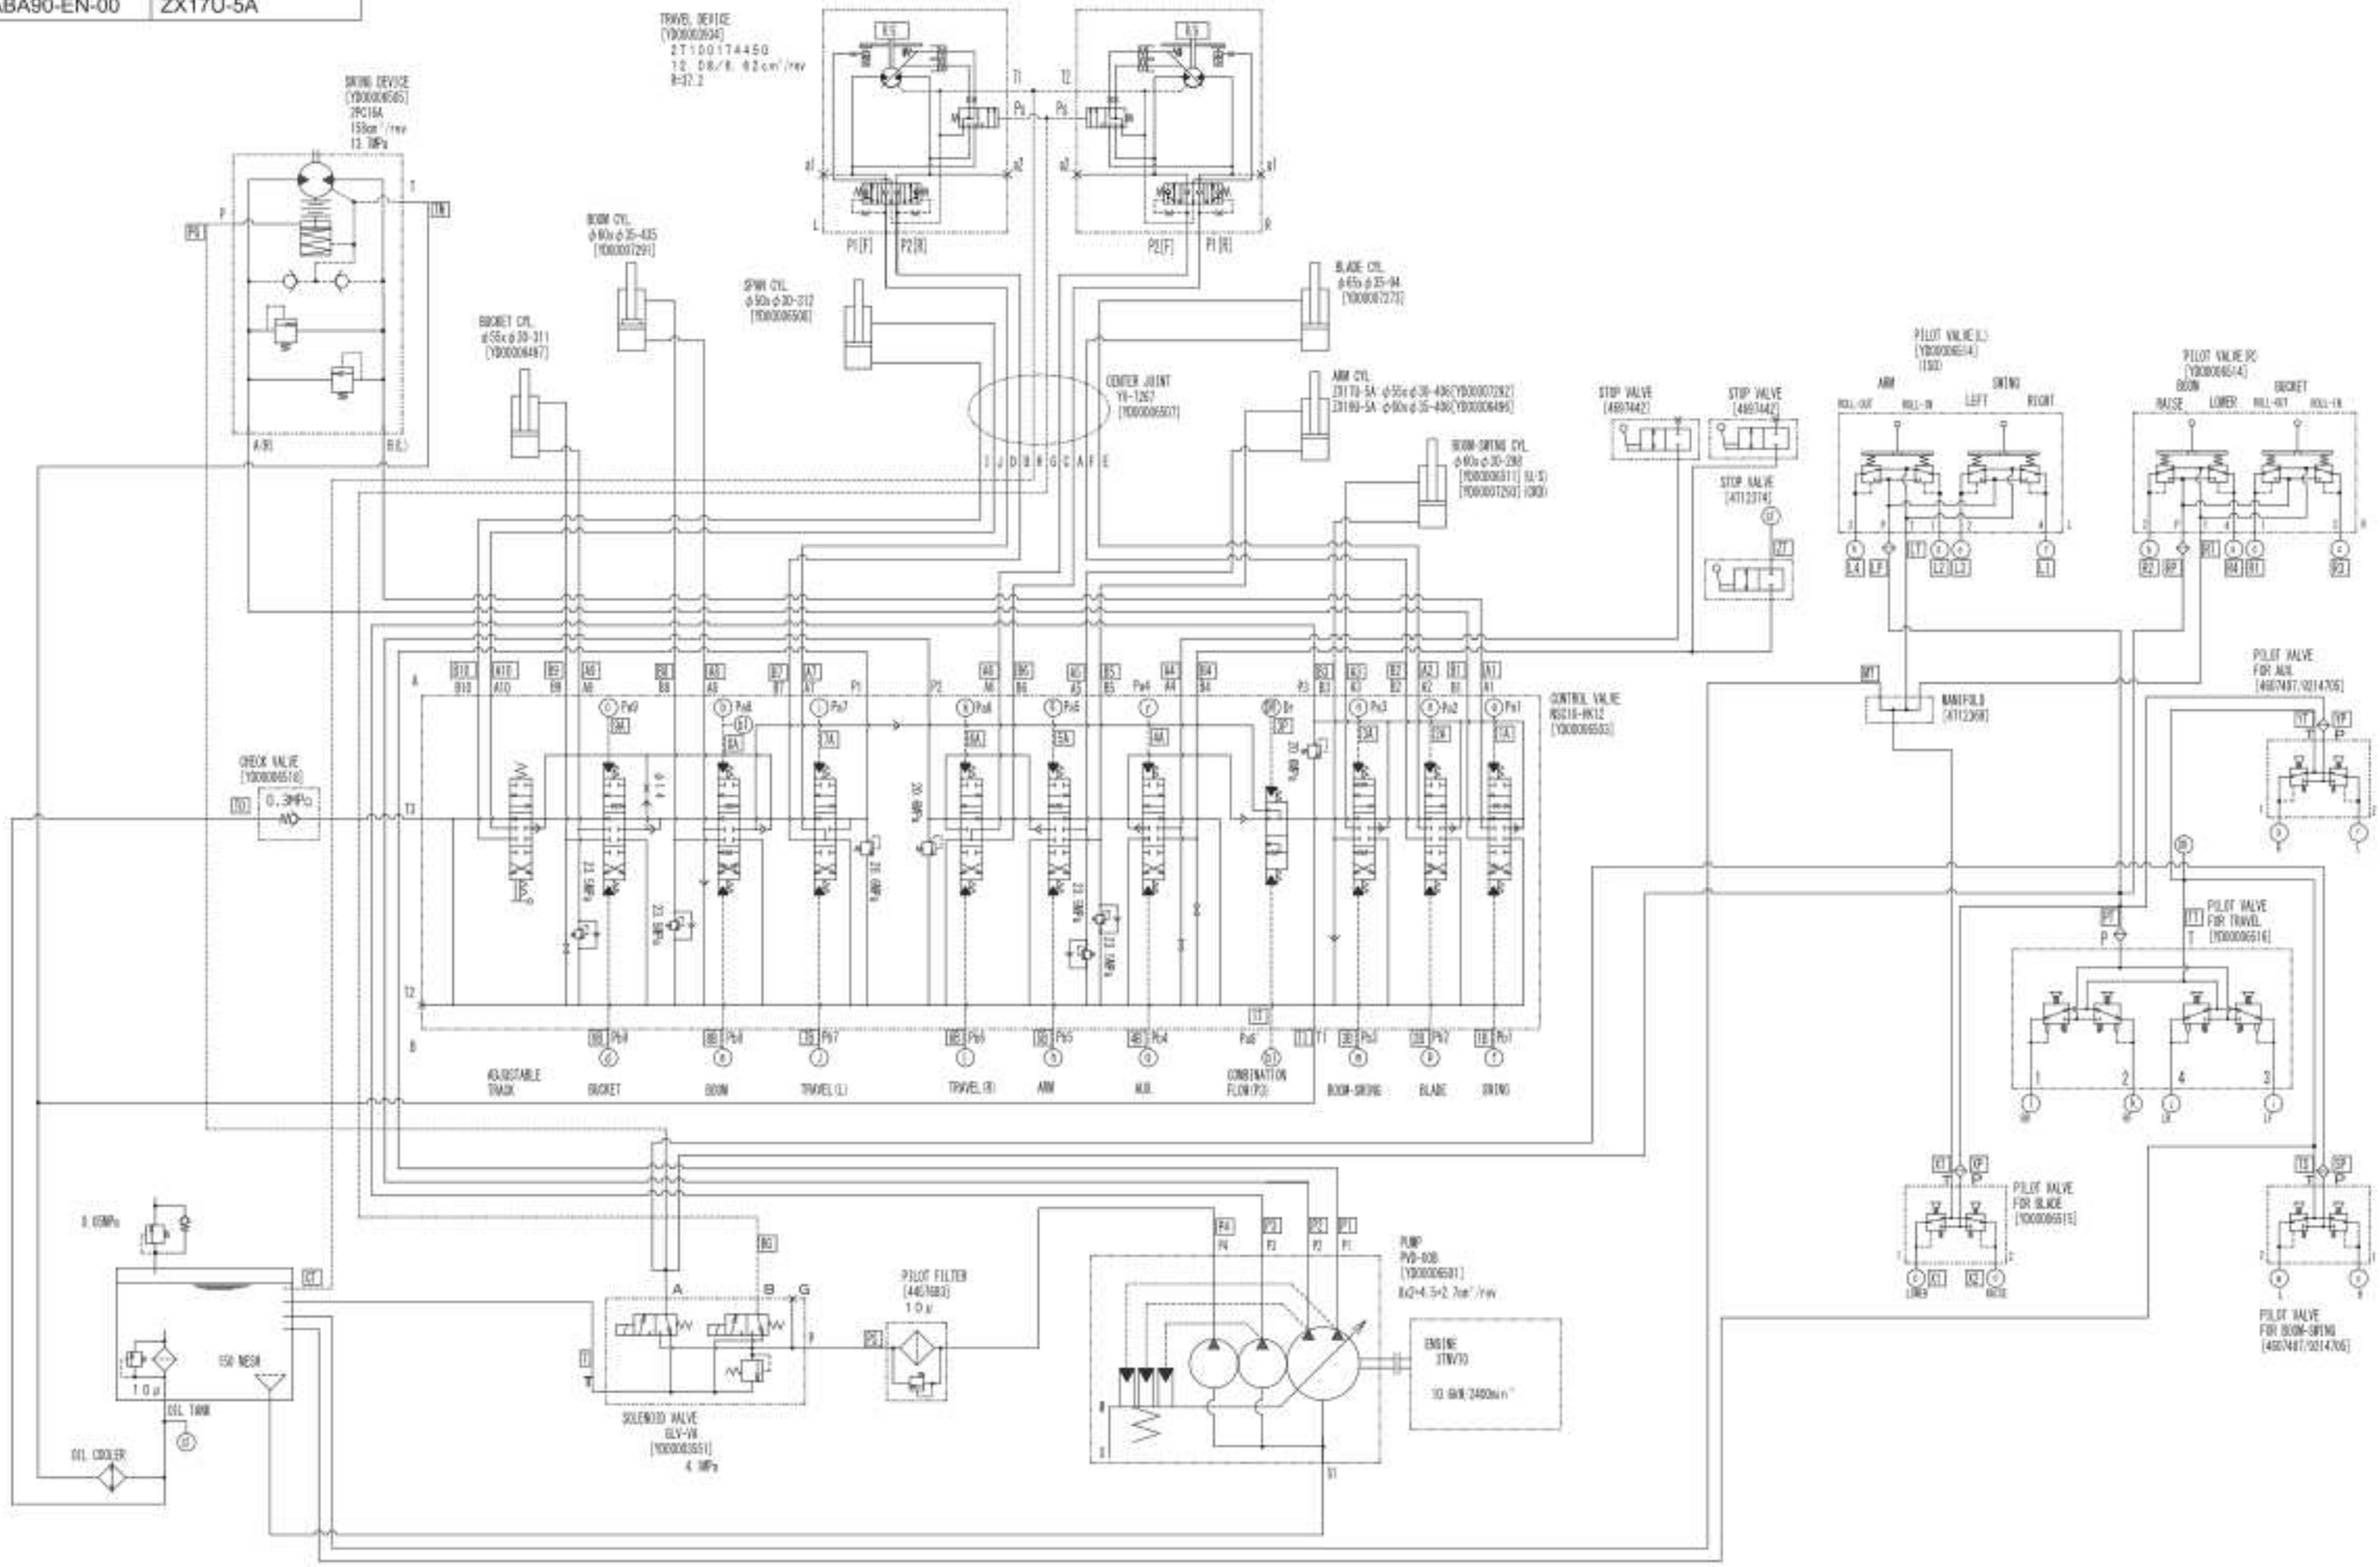

Order the manual at mid-west-tech.com >